WALL MOUNT SERIESFully Assembled Rack with Swing and Door

STRONG


SR-WMS-10U/12U/16U

Package Contents

- Fully Assembled Rack (1)
- 5/16" Lag Bolts and Washers (4)
- Mounting Template (1)
- Keys (3 sets of 2 keys)
 Front Door (2), Side Panel (2), Swing (2)

Key Features

- · Full kit (rack swing and glass door included)
- · Comes fully assembled
- · Universal hinges
- Wire management (knock out on top of rack and swing allows for ample room to manage cable)
- Front door, side panels, and swing are lockable
- Rail smart (rails are labeled with U units for ease of arrangement)
- EIA 310-D hole pattern
- Easily add fans for additional cooling (not included)
- · Reversible door and swing
- Lifetime limited warranty

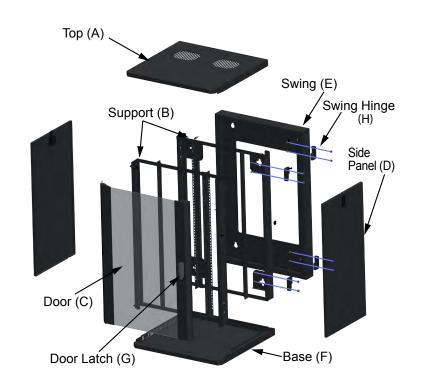

Reversing Front Door and/or Swing

Note: If reversing the swing or the door, it is recommended to perform these steps before the rack is loaded with equipment.

Tools Required:


· #2 Phillips Head Screwdriver

Reversing Front Door Steps

- 1. Open the front door (C).
- 2. Remove the door latch (G) by removing the clamp with a #2 Phillips screwdriver, then slide the latch out of the door.
- 3. Slide the top and bottom hinge pins out of the locking position, pull up the bottom hinge pin, and slide the door off the rack.
- 4. Flip the door over, align the bottom hinge pin over the grommet, and slide into place. Repeat for the top hinge pin.
- Insert the door latch (G) into the door, and secure with the clamp using a #2 Phillips screwdriver.
- Close and latch the door to ensure proper function.

Reversing Swing Steps

- 1. Unlock and open swing.
- 2. Ensure rack is unloaded or that all gear is unplugged.
- 3. With another person, lift rack off of swing hinges (H).
- 4. Using a screwdriver, remove 8 screws from hinges (H).
- 5. Re-install hinges on opposite side of rack and swing.
- 6. Remove lock and re-install on opposite side.
- 7. Rehang rack onto swing.
- 8. Open and close to ensure everything is assembled correctly prior to reloading with gear.

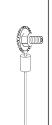



To ground cabinet, connect the ground wire to the field wiring ground terminal on the bottom panel first. To ground side panels and top, use UL Listed closed loop connectors with minimum 12 AWG wire 1/4" zinc plated steel or stainless steel internal tooth washer, and an M6 nut to connect to the doors or side rails.





WALL MOUNT SERIES Fully Assembled Rack with Swing and Door



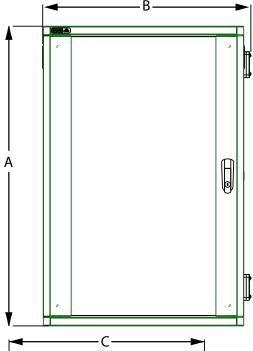

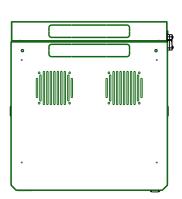

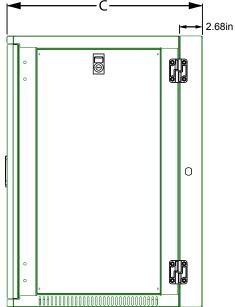

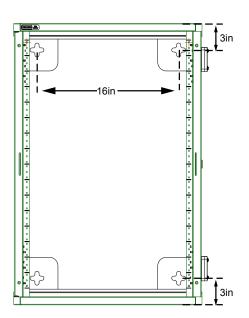

Product	Construction	A - Height	B - Width	C - Depth	Max Load Weight with Swing Kit	Max Load Weight with- out Swing Kit
SR-WMS-10U	Welded steel construction with deep black powder coat and tinted, tempered glass door.	21.29"	21.75"	22.91"	150 lbs	250 lbs
SR-WMS-12U		24.79"	21.75"	22.91"	150 lbs	250 lbs
SR-WMS-16U		31.79"	21.75"	22.91"	150 lbs	250 lbs



Lifetime Limited Warranty

All StrongTM products have a Lifetime Limited Waranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).

For Technical Support: 1.866.838.5052