

# **Veranda Outdoor Television**


Quick Start Guide SB-4374UHD-BL, SB-5574UHD-BL, SB-6574UHD-BL

## **Planning the Location**




Place the Veranda only in a fully shaded area.

#### Sources/What to Watch

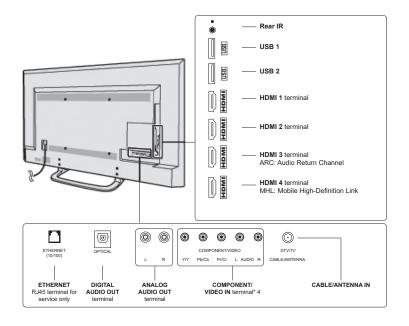

- Signals can be sent from any source using an HDMI, Component, or digital antenna connection.
- Refer to the operator's manual for detailed instructions.

## **Weather Proofing**

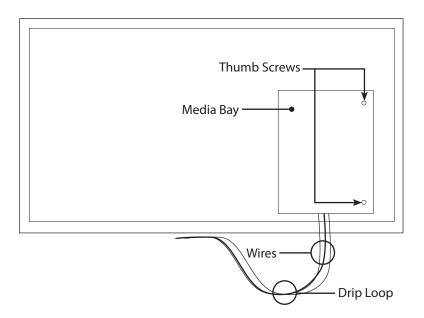

- After all connections are made, all wires must exit the media bay from the bottom.
- Up to 5 wires can exit the media bay while still maintaining the weatherproof feature.

**Note:** Leave a drip loop as the wires enter the compartment.

 Tighten the thumb screws completely to weatherproof the TV.

#### **SETUP**



- Use the TV remote to access the setup menu and run initial installation.
- Select Language, Location and Time Zone, and default TV settings for the TV location.
- Select the corresponding input source and follow on screen instructions to complete setup.
- Refer to the operator's manual for detailed instructions. Press "Menu" on the remote
  control to access the internal operation manual or visit the product support page on
  www.snapav.com or www.sunbritetv.com.

### **CONTROL**

The Veranda can be controlled via the included remote or universal remote.

IR codes are available at: https://www.sunbritetv.com/support/product-support/product-fag.

© 2016 SunBriteTV Rev:161219-0250