


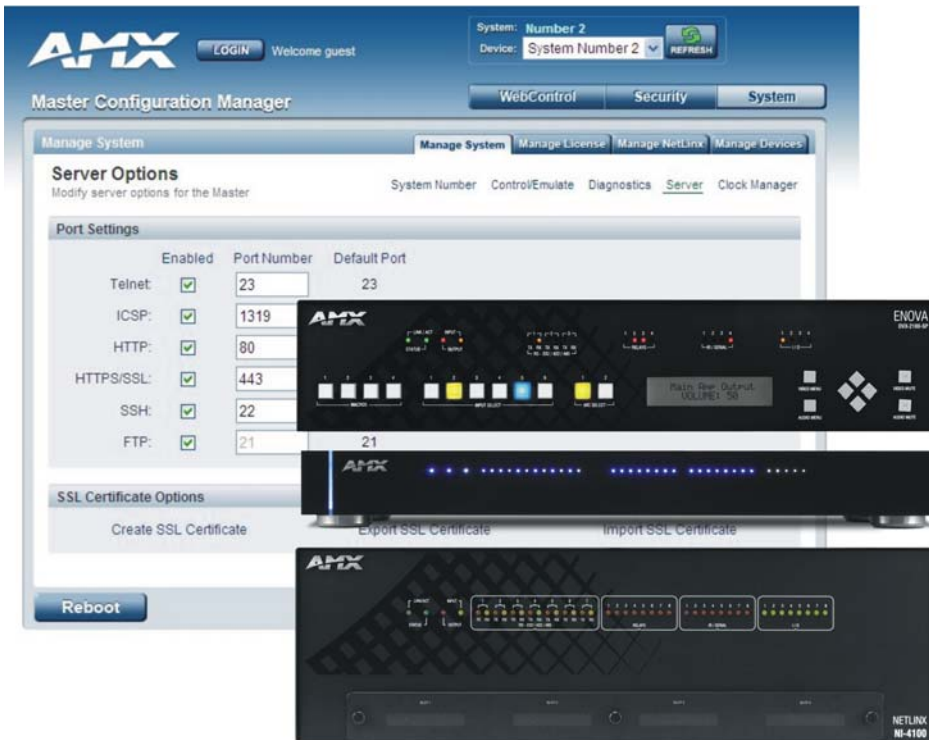

WEBCONSOLE & PROGRAMMING GUIDE

NETLINX INTEGRATED CONTROLLERS (FIRMWARE VERSION 4.0 OR HIGHER)

NI-700/900
NI-2100/3100/4100
NI-3101-SIG
DVX-21XXHD
DVX-315XHD



IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.



12. USE ONLY with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



ESD Warning: The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.

- WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.
- WARNING:** No naked flame sources - such as lighted candles - should be placed on the product.
- WARNING:** Equipment shall be connected to a MAINS socket outlet with a protective earthing connection.
- WARNING:** To reduce the risk of electric shock, grounding of the center pin of this plug must be maintained.

COPYRIGHT NOTICE

AMX© 2016, all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.

LIABILITY NOTICE

No patent liability is assumed with respect to the use of information contained herein. While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

AMX WARRANTY AND RETURN POLICY

The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

Table of Contents

Overview	11
NetLinx Integrated Controllers	11
Enova DVX All-In-One Presentation Switchers	11
Enova DVX-21xxHD & DVX-315xHD	11
About This Document	12
Quick Setup and Configuration Overview.....	12
Installation Procedures	12
Configuration and Communication	12
Update the On-board Master and Controller Firmware.....	12
Configure NetLinx Security on the NI Controller.....	12
Using Zero Configuration	12
Bonjour (Zero-Configuration) Client	12
Connecting to a Network with a DHCP Server	12
Initial Configuration	14
Overview	14
Before You Start	14
Preparing the NI Controller for Serial Communication.....	14
Configuring the NI Controller for LAN Communication	17
Using the ID Button to Change the Master Device Value	18
Obtaining the NI Controller's IP Address (using DHCP)	19
Assigning a Static IP to the NI Controller	20
Communicating Via IP Address.....	21
Upgrading Firmware	24
Overview	24
NI Controllers - Firmware Files.....	24
NI Master Firmware.....	24
Device Controller Firmware.....	24
Enova DVX	24
NI Master Firmware.....	24
Device Controller Firmware.....	24
A/V Switcher/Scaler Firmware	24
Before You Start	25
Verifying the Current Firmware Version	25
Downloading the Latest Firmware Files from www.amx.com	25
NetLinx Integrated Controllers	25
Master and Device Firmware Kit Files for NetLinx Integrated Controllers.....	25
Downloading NI Controller Firmware Files on www.amx.com	25
Enova DVX All-In-One Presentation Switchers.....	26
Master, Switcher and Device Firmware Files for Enova DVX All-In-One Presentation Switchers.....	26
Downloading Enova DVX Firmware Files on www.amx.com.....	26

Required Order of Firmware Updates	27
Required Order of Firmware Updates for NI Controllers.....	27
Required Order of Firmware Updates for DVX Controllers.....	27
Upgrading Firmware Files	27
Upgrading NXC Card Firmware	28
Resetting the Factory Default System and Device Values.....	30
Onboard WebConsole User Interface	31
WebConsole UI Overview	31
Accessing the WebConsole	31
Device Tree	32
Device Network Settings Pages.....	33
ZeroConfig Networking.....	33
WebConsole - Security Options	34
Security Overview.....	34
Default Security Configuration	34
Login Rules.....	35
User Name and Password Rules.....	35
System Security - System Level	35
System Level Security - System Security Settings	35
Access Options	36
LDAP Options	37
Configuring ICSP Connectivity with LDAP Enabled	37
Accepting Changes.....	37
Testing the Connection to the LDAP Server	38
System Security - Group Level	38
Adding a New Group	38
Group and User Security Access Options	39
Viewing Group Security Settings Details	39
Modifying the Properties of an Existing Group.....	40
Deleting a Group	40
System Security - User Level.....	41
Adding a New User.....	41
Viewing and Editing User Security Settings	42
Deleting a User	42
WebConsole - Web Control Options	43
Manage Web Control Connections.....	43
Compression Options	43
WebConsole - System Options	44
System Overview	44
System - Manage System	44

Manage System - System Number	44
Changing the System Number On the Master	44
Using Multiple NetLinx Masters	44
Resetting the Master Controller to the Factory Defaults Configuration	45
Manage System - Control/Emulate Options	45
Controlling or Emulating a System Device	45
Manage System - Diagnostics Options	47
Enabling Diagnostics On a Selected System Device	47
Diagnostics Options Definitions.....	50
Disabling all Diagnostic Options For a Device.....	50
Creating and Recalling Diagnostics Presets.....	51
Manage System - Server Options	51
Port Settings	51
Server Port Settings.....	51
SSL Certificate Options	52
Creating an SSL Server Certificate	53
SSL Certificate Entries	53
Displaying SSL Server Certificate Information.....	54
Creating a Request for an SSL Certificate	54
Self-Generating an SSL Certificate	54
Regenerating an SSL Server Certificate Request	54
Exporting an SSL Certificate Request.....	54
Importing an SSL Certificate	55
Manage System - Clock Manager Options	56
Setting the Mode for the Clock Manager	56
Setting Daylight Savings Rules	57
Selecting a Custom NIST Server	57
Adding a Custom NIST Server To the List	58
Removing an NIST Server From the List.....	58
Clock Manager NetLinx Programming API	58
System - Manage License	58
Adding A New License	59
Removing a License	59
System - Manage NetLinx	60
System - Manage Devices	61
Manage Devices - Device Options	61
Configuring Device Binding Options	61
Managing Device Modules	62
Archiving a Module	62
Deleting a Module	62
Manage Devices - Bindings	62
Configuring Application-Defined Devices.....	62
Application Devices and Association Status.....	64

Viewing Physical Device Properties.....	64
Manage Devices - User-Defined Devices	65
Adding a User-Defined Device	65
Manage Devices - Active Devices	66
Searching For All Compatible Duet Modules for a Selected Device	66
Viewing Physical Device Properties.....	67
Manage Devices - Manage Polled Ports	67
Editing Polled Port Settings.....	68
Manage Devices - Network Settings.....	69
ZeroConfig Networking.....	69
NDP Beacon.....	69
IP Device Discovery	70
Manage Devices - URL List.....	70
Adding a URL To The Master's List Of Devices.....	70
Manage Devices - Device Number	71
Manage Devices - Control/Emulate.....	71
Manage Devices - Log.....	72
Manage Devices - Diagnostics.....	73
NetLinX Programming	74
Overview	74
Port Assignments by NetLinX Master	74
Master SEND_COMMANDS	74
CLOCK	74
G4WC	74
~IGNOREEXTERNALCLOCKCOMMANDS.....	74
Master IP Local Port SEND_COMMANDS.....	75
UDPSENDTO.....	75
LED Disable/Enable SEND_COMMANDS	75
LED-DIS	75
LED-EN	75
RS232/422/485 Ports Channels.....	75
RS-232/422/485 SEND_COMMANDS	76
B9MOFF.....	76
B9MON	76
CHARD.....	76
CHARDM.....	76
CTSPSH.....	76
CTSPSH OFF.....	76
GET BAUD	76
HSOFF	77
HSON.....	77
RXCLR	77
RXOFF	77
RXON.....	77
SET BAUD.....	77
TSET BAUD.....	78
TXCLR	78
XOFF.....	78
XON.....	78

RS-232/422/485 SEND_STRING Escape Sequences	79
27,17,<time>	79
27,18,0	79
27,18,1	79
27,19,<time>	79
27,20,0	79
27,20,1	79
IR / Serial Ports Channels	79
IR RX Port Channels	80
IR/Serial SEND_COMMANDs	80
CAROFF	80
CARON	80
CH	80
CP.....	80
CTOF	80
CTON.....	81
GET BAUD	81
GET MODE	81
IROFF	81
POD	81
POF.....	81
PON	82
PTOF.....	82
PTON	82
SET BAUD	82
SET IO LINK	82
SET MODE.....	83
SP.....	83
XCH	83
XCHM	83
Input/Output SEND_COMMANDs	84
GET DBT	84
SET DBT	84
GET INPUT	84
SET INPUT	85
Terminal (Program Port/Telnet) Commands	86
Overview	86
Establishing a Terminal Connection Via the Program Port	86
PC COM Port Communication Settings	86
Establishing a Terminal Connection Via Telnet	86
Terminal Commands	87
---- Help ---- <D:P:S>	87
? or Help.....	87
AUTO LOCATE (ENABLE DISABLE STATUS).....	87
BOOT STATUS	87
CLEAR AUDIT LOG.....	87
CLEAR MAX BUFFERS.....	87
CLEAR PERSISTENT VARS.....	87
CPU USAGE	87
DATE	87
DATE/TIME ON OFF	87
DEVICE HOLDOFF ON OFF	87
DEVICE STATUS <D:P:S>	88
DIPSWITCH.....	88
DISK FREE	88
DNS LIST <D:P:S>.....	88
ECHO ON OFF.....	88
GET DEVICE HOLDOFF	88
GET DUET MEMORY	88

GET ETHERNET MODE	88
GET IP <D:P:S>	88
HELP SECURITY	88
ICSPMON ENABLED DISABLED [PORT]	88
IP STATUS	88
MEM	89
MSG ON OFF	89
MSG STATS	89
NETLIX LOG LEVEL	89
OFF [D:P:S or NAME,CHAN]	89
ON [D:P:S or NAME,CHAN]	89
PASS [D:P:S or NAME]	90
PHYSICAL STATUS	90
PING [ADDRESS]	90
PROGRAM INFO	90
PULSE [D:P:S or NAME,CHAN]	90
PWD	90
REBOOT <D:P:S>	90
RENEW DHCP	90
RESETADMINPASSWORD	90
RESET FACTORY	90
ROUTE MODE DIRECT NORMAL	91
SEND_COMMAND D:P:S or NAME,COMMAND	91
SEND_LEVEL <D:P:S>,<LEVEL ID>,<LEVEL VALUE>	91
SEND_STRING D:P:S or NAME,STRING	91
SET DATE	91
SET DNS <D:P:S>	91
SET DUET MEMORY	91
SET ETHERNET MODE <CMD>	92
SET FTP PORT	92
SET HTTP PORT	92
SET HTTPS PORT	92
SET ICSP PORT	92
SET ICSP TCP TIMEOUT	92
SET IP <D:P:S>	93
SET LOG COUNT	93
SET QUEUE SIZE	93
SET SECURITY PROFILE	94
SET SNMP	95
SET SSH PORT	95
SET SYSTEM NUMBER	95
SET TELNET PORT	95
SET THRESHOLD	96
SET TIME	96
SET TIMELINE LOOPCNT	96
SET UDP BC RATE	96
SET URL <D:P:S>	96
SHOW AUDIT LOG	97
SHOW BUFFERS	97
SHOW COMBINE	97
SHOW DEVICE <D:P:S>	97
SHOW LOG	98
SHOW MAX BUFFERS	99
SHOW MEM	99
SHOW NOTIFY	99
SHOW REMOTE	99
SHOW ROUTE	99
SHOW START LOG <START>	99
SHOW SYSTEM <S>	100
START LOG (ON OFF)	100
TCP LIST	100
TIME	100
URL LIST <D:P:S>	100
ZEROCONF[ENABLE DISABLE STATUS]	100
ESC Pass Codes	101
+ + ESC ESC	101
+ + ESC A	101

++ ESC D	101
++ ESC H	101
Accessing the Security Configuration Options	101
Setup Security Menu	102
Enabling LDAP via the Program Port	103
Security Options Menu	104
Edit User Menu	104
Edit Group Menu	104
Access Rights Menu	105
Adding a Group	105
Edit Group Menu: Add Directory Association	105
Default Security Configuration	106
Telnet Diagnostics Commands	106
REBOOT HEAP WATCH	106
SPY	106
SPY STOP	106
PHYSICAL STATUS	106
MSG STATS	106
Logging Out of a Terminal Session	106
Notes on Specific Telnet/Terminal Clients	107
Windows Client Programs	107
Linux Telnet Client	107
Appendix A: LDAP Implementation Details	108
Overview	108
Assumptions and Prerequisites	108
AMX LDAP Client Authentication Sequence	108
Example - Setting Up User's Access Rights	109
Administrator Access Example	109
User Access Example	109
ICSP Connectivity Security Example	110
Appendix B: SMTP Support	111
Overview	111
SMTP Server Configuration	111
Sending Mail	112
Appendix C: Clock Manager NetLinx Programming API	113
Types/Constants	113
Library Calls	113
CLKMGR_IS_NETWORK_SOURCED()	113
CLKMGR_SET_CLK_SOURCE(CONSTANT INTEGER MODE)	113
CLKMGR_IS_DAYLIGHTSAVINGS_ON()	113
CLKMGR_SET_DAYLIGHTSAVINGS_MODE(CONSTANT INTEGER ONOFF)	113
CLKMGR_GET_TIMEZONE()	113
CLKMGR_SET_TIMEZONE(CONSTANT CHAR TIMEZONE[])	113
CLKMGR_GET_RESYNC_PERIOD()	113
CLKMGR_SET_RESYNC_PERIOD(CONSTANT INTEGER PERIOD)	113
CLKMGR_GET_DAYLIGHTSAVINGS_OFFSET(CLKMGR_TIMEOFFSET_STRUCT T)	113

CLKMGR_SET_DAYLIGHTSAVINGS_OFFSET(CONSTANT CLKMGR_TIMEOFFSET_STRUCT T)	113
CLKMGR_GET_ACTIVE_TIMESERVER(CLKMGR_TIMESERVER_STRUCT T)	113
CLKMGR_SET_ACTIVE_TIMESERVER(CONSTANT CHAR IP[]).....	113
CLKMGR_GET_TIMESERVERS(CLKMGR_TIMESERVER_STRUCT T[])	114
CLKMGR_ADD_USERDEFINED_TIMESERVER(CONSTANT CHAR IP[], CONSTANT CHAR URL[], CONSTANT CHAR LOCATION[])	114
CLKMGR_DELETE_USERDEFINED_TIMESERVER(CONSTANT CHAR IP[])	114
CLKMGR_GET_START_DAYLIGHTSAVINGS_RULE()	114
CLKMGR_SET_START_DAYLIGHTSAVINGS_RULE(CONSTANT CHAR RECORD[]).....	114
CLKMGR_GET_END_DAYLIGHTSAVINGS_RULE()	115
CLKMGR_SET_END_DAYLIGHTSAVINGS_RULE(CONSTANT CHAR RECORD[]).....	115

Overview

NetLinx Integrated Controllers

NetLinx Integrated Controllers (Masters) can be programmed to control RS-232/422/485, Relay, IR/Serial, and Input/Output devices using the NetLinx Studio application (version 2.4 or higher).

NetLinx Integrated Controllers	
Name	Description
NI-700	NetLinx Integrated Controller
NI-900	NetLinx Integrated Controller
NI-2100	NetLinx Integrated Controller
NI-3100	NetLinx Integrated Controller
NI-3101-SIG	Signature Series NetLinx Integrated Controller
NI-4100	NetLinx Integrated Controller

NOTE: Refer to *Products > Central Controllers > NetLinx Integrated Controllers* page at www.amx.com for details and variations available for these products.

These NI Controllers feature an on-board Web Console which allows you to connect to the NI Controller via a web browser and make various configuration and security settings. The Web Console is described in this document (starting with the *Onboard WebConsole User Interface* section on page 31).

These NI Controllers are Duet-compatible and can be upgraded via firmware. Duet is a dual-interpretor firmware platform from AMX which combines the proven reliability and power of NetLinx with the extensive capabilities of the *Java® MicroEdition (JavaME)* platform. Duet simplifies the programming of a system that includes the NI-900 and other third party devices by standardizing device and function definitions, defaulting touch panel button assignments, and controlling feedback methods.

NI Controllers feature an on-board Web Console which allows you to connect to the NI Controller via a web browser and make various configuration and security settings. The Web Console is described in this document (starting with the *Onboard WebConsole User Interface* section on page 31).

Dynamic Device Discovery makes integration even easier by automatically identifying and communicating with devices which support this beaconing technology. Refer to the *Manage Devices - Device Options* section on page 61 for more detailed information on the use of *Dynamic Device Discovery (DDD)*.

Enova DVX All-In-One Presentation Switchers

Enova DVX All-In-One Presentation Switchers	
Name	Description
DVX-3150HD	10x4 All-In-One Presentation Switchers (Multi-Format, HDMI Inputs)
DVX-3155HD	10x4 All-In-One Presentation Switchers (Multi-Format, HDMI, DXLink Inputs)
DVX-3156HD	10x4 All-In-One Presentation Switchers (Multi-Format, HDMI, DXLink Inputs)
DVX-2150HD	6x3 All-In-One Presentation Switchers (Multi-Format, HDMI Inputs)
DVX-2155HD	6x3 All-In-One Presentation Switchers (Multi-Format, HDMI, DXLink Inputs)
DVX-2100HD	6x2 All-In-One Presentation Switchers (Multi-Format, UDM Inputs)

NOTE: Refer to *Products > All-in-One Presentation Switchers* page at www.amx.com for details and variations available for these products.

Enova DVX-21xxHD & DVX-315xHD

Enova DVX-21xxHD All-in-One Presentation Switchers utilize an NI-2100 Controller, therefore all controller-related information that applies to the NI-2100 is fully applicable to DVX-21xxHD products.

Enova DVX-315xHD All-in-One Presentation Switchers utilize an NI-3101-SIG Controller, therefore all controller-related information that applies to the NI-3101-SIG is fully applicable to DVX-315xHD products.

- Enova DVX All-In-One Presentation Switchers features many functions that do not apply to NetLinx Integrated Controllers, most of which relate directly to the Audio/Video capabilities of the DVX-21xxHD.
- Refer to the *Enova DVX-3150HD/3155HD/3156HD 10x4 All-in-One Presentation Switchers Instruction Manual* for information specific to Enova DVX products.

NOTE: All product documentation is available to view or download from www.amx.com.

About This Document

This document describes using the on-board Web Console, as well as NetLinX send commands and terminal communications to configure the NI Controllers:

- Each major section of the Web Console is described in a separate section of this document. Refer to:
 - the *Onboard WebConsole User Interface* section on page 31,
 - the *WebConsole - Web Control Options* section on page 43,
 - the *WebConsole - Security Options* section on page 34, and
 - the *WebConsole - System Options* section on page 44).
- The *Initial Configuration and Firmware Upgrade* section on page 5 describes upgrading the firmware on NI Controllers.
- The *NetLinX Programming* section on page 74 lists and defines the NetLinX send commands that are supported by the NI Controllers.
- The *Terminal (Program Port/Telnet) Commands* section on page 86 describes the commands and options available via either a Program Port (RS232) or Telnet terminal session with the NI Controller.

NOTE: *Some of the features described in this document are available only to NetLinX Masters with firmware version 4.0 or greater. Firmware version 4.x may not be available for all Central Controllers. For firmware versions prior to version 4.0, refer to the previous version of this document (available to download from the v3.x firmware pages on www.amx.com).*

Quick Setup and Configuration Overview

Installation Procedures

The general steps involved with most common installations of this device include:

- Unpack and confirm the contents of box (see the *Specifications* tables in the *Hardware Reference Guide* for each Controller).
- Connect all rear panel components and supply power to the NI Controller from the external power supply.

Configuration and Communication

The general steps involved with setting up and communicating with the NI Controllers' on-board Master. In the initial communication process:

- Set the communication speed on the front Configuration DIP switch (*default = 38400*).
- Connect and communicate with the on-board Master via the Program port.
- Set the System Value being used with the on-board Master.
- Re-assign any Device values.
- You can then either get a DHCP Address for the on-board Master or assign a Static IP to the on-board Master.
- Once the IP information is determined, rework the parameters for Master Communication in order to connect to the on-board Master via the LAN and not the Program port.

Update the On-board Master and Controller Firmware

- Before using your new NI unit, you must first update your NetLinX Studio to the most recent release.
- Upgrade the on-board Master firmware through an IP Address via the LAN connector (*Upgrading Firmware* section on page 18) (**IP recommended**).
- Upgrade the Integrated Controller firmware through an IP Address via the LAN connector (*Upgrading the NI Controller Firmware* section on page 21) (**IP recommended**).

Configure NetLinX Security on the NI Controller

- Setup and finalize your NetLinX Security Protocols (*WebConsole - Security Options* section on page 34).
- Program your NI Controller (*NetLinX Programming* section on page 74).

Using Zero Configuration

NetLinX Masters with firmware versions of v3.41 or higher support using "zero-configuration" client software to quickly install multiple devices on the network.

Bonjour (Zero-Configuration) Client

You can use a zero-configuration client to determine the IP address of the Controllers. There are many zero-configuration clients available. However, for the purposes of this document, we will refer to *Bonjour for Windows*. It is free and widely available for download.

If you don't already have it installed on your PC, download and install *Bonjour for Windows* before you begin.

Connecting to a Network with a DHCP Server

By using the Controller's Zeroconf feature and the *Bonjour for Windows* plug-in utility, multiple devices can be installed and configured on the network without the need to pre-configure each device before installation.

The dealer only needs to match the serial number printed on the backside of the device or from the label on the box to the serial number that is displayed in the Bonjour browser pane.

1. Launch Internet Explorer with the Bonjour plug-in.
2. Once power is applied to the device, the Bonjour plug-in displays the device in the list of devices as shown in FIG. 1:

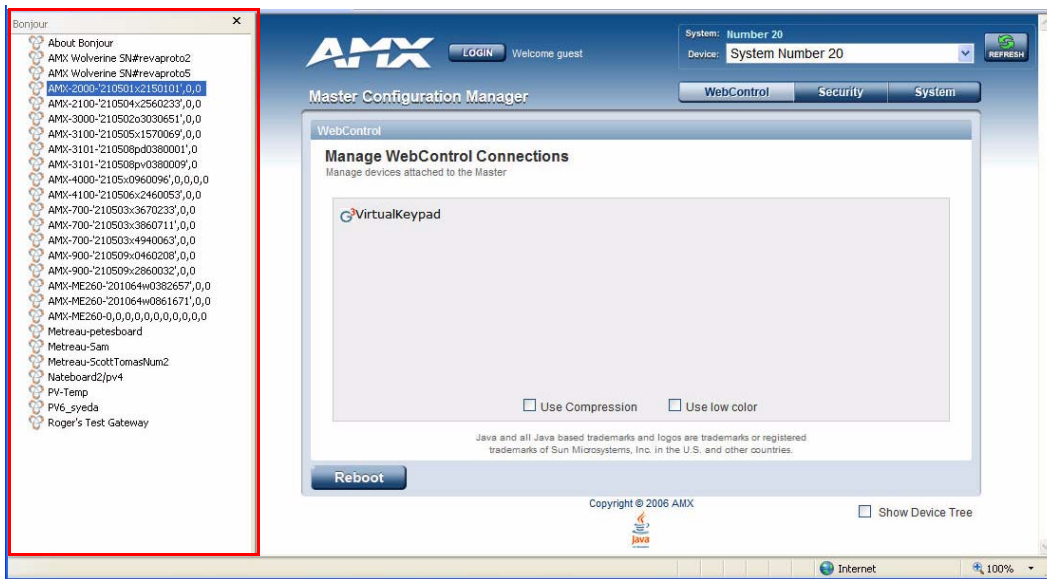


FIG. 1 Internet Explorer with Bonjour plug-in

3. Double-click on the desired Master to access the Web Console.

This requires valid login information - the browser will prompt you for User ID and Password before displaying the configuration pages for the selected device.

Notice that the serial number is appended to the name of the device.

At this point, the device can be configured (changing IP settings, NetLinX settings, User settings, etc) via the pages in the Web Console (see the *Onboard WebConsole User Interface* section on page 31).

Initial Configuration

Overview

This section describes using the NetLinx Studio software application to perform the initial configuration of the NetLinx Master. NetLinx Studio is used to setup a System number, obtain/assign the IP/URL for the NI Controller, as described in this section (as well as to transfer firmware Kit files to the Master - see the *Upgrading Firmware* section on page 24).

Before You Start

1. Verify you have the latest version of the NetLinx Studio application installed on your PC.
NetLinx Studio is available to download from www.amx.com. Login to download the latest version. Alternatively, if it is already installed, use the **Web Update** option in NetLinx Studio's Help menu to obtain the latest version.
The default location for the NetLinx Studio application is **Start > Programs > AMX Control Disc > NetLinx Studio > NetLinx Studio**.
2. Verify that an LAN/ICSNet cable is connected from the NI Controller to the LAN Hub.
3. Connect an programming cable (RS-232) from the **Program Port** on the Central Controller to a COM port on the PC being used for programming.
NI-4000/4100 only: Verify that any control cards are inserted and their respective connectors are attached.
4. Verify that the NI Controller is powered on.

Preparing the NI Controller for Serial Communication

To establish serial communication with the NI Controller via the PROGRAM (DB9) port:

1. Launch NetLinx Studio and select **Settings > Master Communication Settings** (FIG. 2):

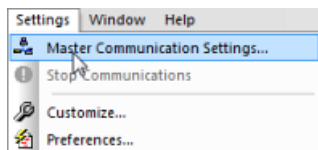


FIG. 2 NetLinx Studio menu bar - Settings > Master Communication Settings

2. This opens the *Master Communication Settings* dialog (FIG. 3).

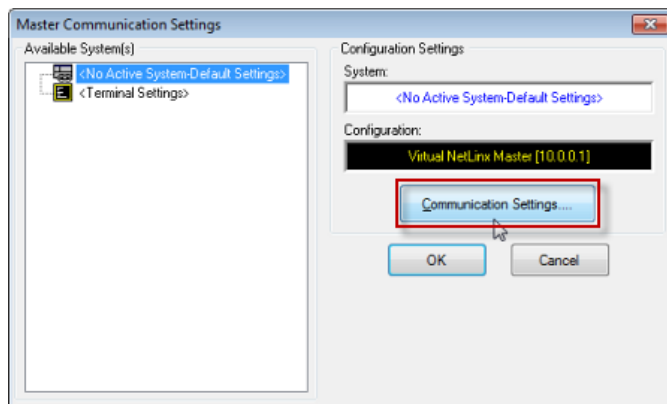


FIG. 3 Master Communication Settings dialog

3. Click the **Communications Settings** button to open the *Communications Settings* dialog (FIG. 4):

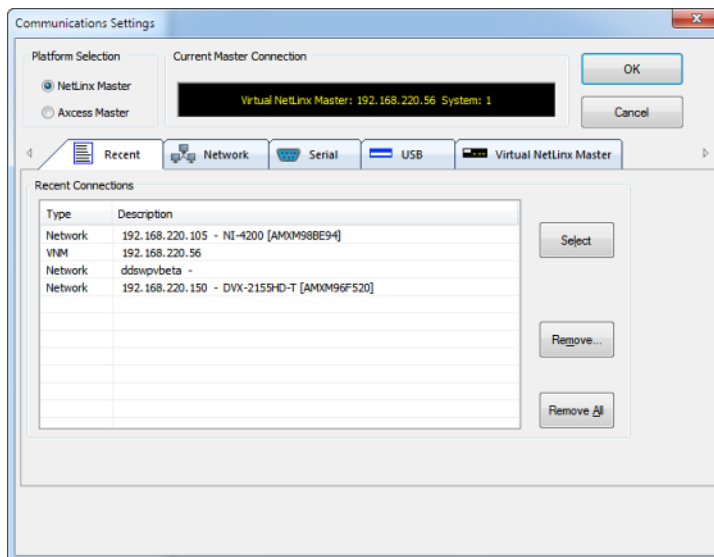


FIG. 4 Communication Settings dialog - Recent tab

4. Select **NetLinX Master** under *Platform Selection* to indicate you are working with a NetLinX Master.
5. Select the **Serial** tab to view the serial options (FIG. 5).

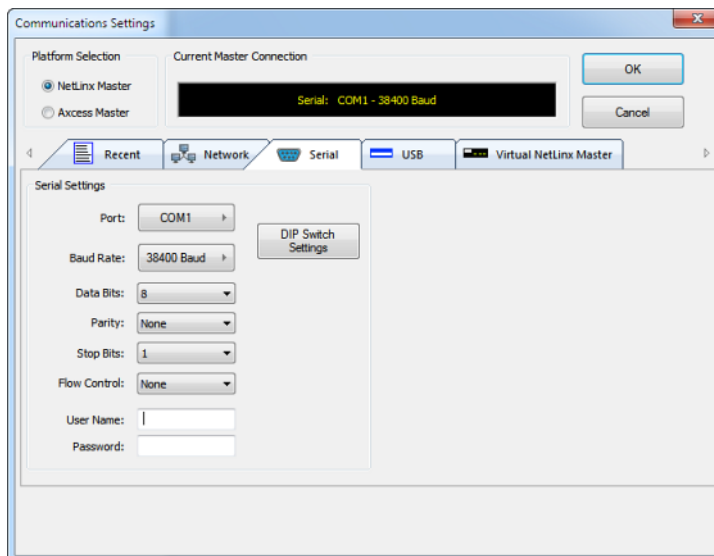


FIG. 5 Communications Settings dialog - Serial tab

6. On the Serial tab, set the COM port parameters (used to communicate to the NetLinX Master). Default serial settings for NetLinX Masters are:
 - Comm Port: COM 1
 - Baud Rate: 38400
 - Data Bits: 8
 - Parity: None
 - Stop Bits: 1
 - Flow Control: None
7. Click **OK** to close the *Communication Settings* dialog.
8. Note that the serial configuration is indicated in the *Configuration* text field (FIG. 6):

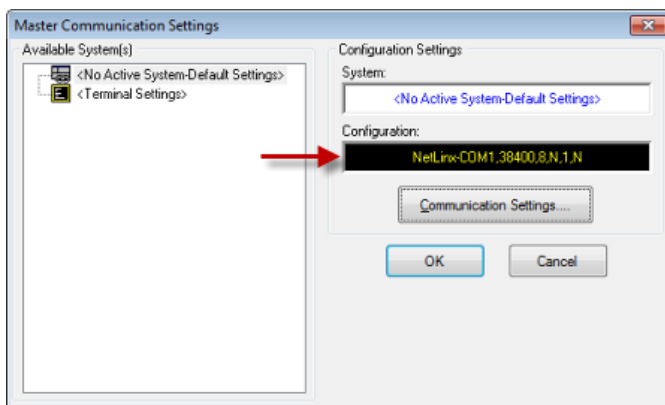


FIG. 6 Master Communication Settings dialog indicating a Serial Connection

9. Click **OK** to close the *Master Communication Settings* dialog and return to the main application.
10. Right-click the **Online Tree** tab entry and select **Refresh System**: the Controller should appear in the Device Tree (FIG. 7):

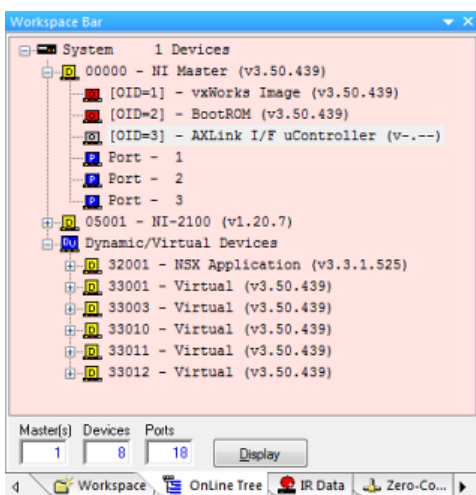


FIG. 7 Online Tree indicating a Serial Connection

If not, verify that the Serial cable is connected properly, and that the Baud Rate settings on the Controller (set via the Program Port DIP Switch) match the settings in NetLinx Studio.

Once Serial communication has been established, use NetLinx Studio to configure the Controller for LAN Communication, as described below.

Configuring the NI Controller for LAN Communication

NOTE: Before continuing, complete the COM port steps described above to establish a serial connection with the NetLinX Master.

- Use an LAN cable to connect the Controller to the LAN to which the PC running NetLinX Studio is connected.

NOTE: The NI-x100 Controllers feature an Auto MDI/MDI-X LAN port. This provides the option of using either a standard (straight through), or a crossover LAN cable to communicate with a PC - both cable types will work.
- Select **Diagnostics > Network Addresses** from the menu bar to open the *Network Addresses* dialog (FIG. 8). Use the options in this dialog to select to either use DHCP or specify an IP Address.

FIG. 8 Network Addresses dialog

- Click **Get IP Information** to enable the fields for editing (FIG. 9):

FIG. 9 Network Addresses dialog showing initial IP information

- Enter the *System*, *Device* (0 for NetLinX Masters), and *Host Name* information.

NOTE: Host names may contain only the ASCII letters 'a' through 'z' (in a case-insensitive manner), the digits '0' through '9', and the hyphen ('-').
- To configure a network address via **DHCP** (FIG. 10):

FIG. 10 Network Addresses dialog (DHCP)

- Select **Use DHCP**, then click **Get IP Information** to obtain a DHCP Address from the DHCP Server.
- Click **Set IP Information** to retain the new address,

- c. To finish the process, click **Reboot Device**.
 - d. Click **OK** to close the dialog.
6. To specify a network IP address (FIG. 11):

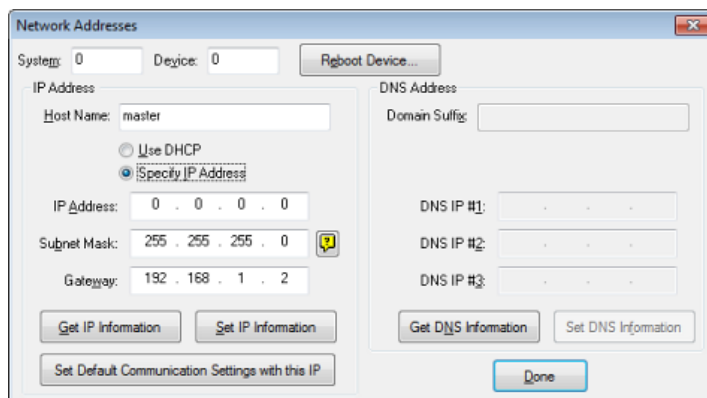


FIG. 11 Network Addresses dialog (Specify IP Address)

- a. Select **Specify IP Address**.
 - b. Enter the IP parameters into the available fields.
 - c. Click **SET IP INFORMATION** to retain the pre-reserved IP Address to the Master.
 - d. To finish the process, click **Reboot Device**.
 - e. Click **OK** to close the dialog.
7. Repeat steps 1 - 5 from the previous section, but rather than selecting the **Serial** option, choose **TCP/IP** and edit the settings to match the IP Address you are using (Static or IP).
8. Click on the **Authentication Required** radio box (*if the Master is secured*) and press the **User Name and Password** button to enter a valid username and password being used by the secured Master.
9. Click the **OK** to close all dialogs and return to the main application.

Using the ID Button to Change the Master Device Value

Use the ID Button on the rear panel of the Controller in conjunction with ID Mode function in NetLinx Studio to establish a NetLinx Device ID for the device. The steps described and the dialogs shown in this section are in the *NetLinx Studio* application.

- NetLinx Studio is available to download from www.amx.com.
- Refer to the NetLinx Studio on-line help for information on using NetLinx Studio.

1. Access the *Device Addressing* dialog (FIG. 12) by selecting **Diagnostics > Device Addressing**.

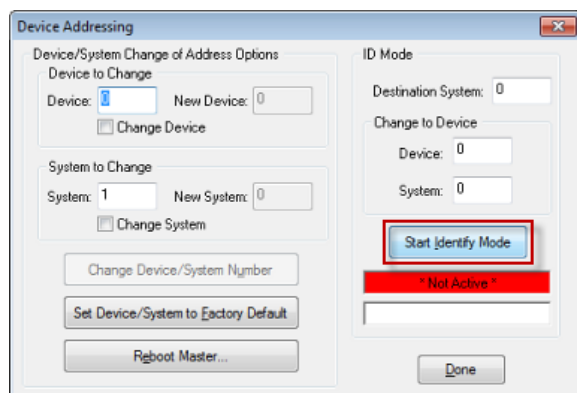


FIG. 12 Device Addressing dialog

2. Enter the system number in the **Destination System** field.
3. Enter the desired device number in the **Change to Device** box (*Device* field), and again enter the system number (in the *System* field).
4. Click the **Start Identify Mode** button. This action activates Identify Mode on the named System.

NOTE: "Identify Mode" means that the system is put on hold while it waits for an event from any NetLinx device in the named system (for example, pushing the ID button on a NetLinx device). The device that generates the first event is the device that gets identified.

The Device Addressing dialog displays the "Waiting...Press Cancel to Quit..." message, indicating that Identify Mode is currently active (NetLinx Studio is waiting to detect a device - FIG. 13).

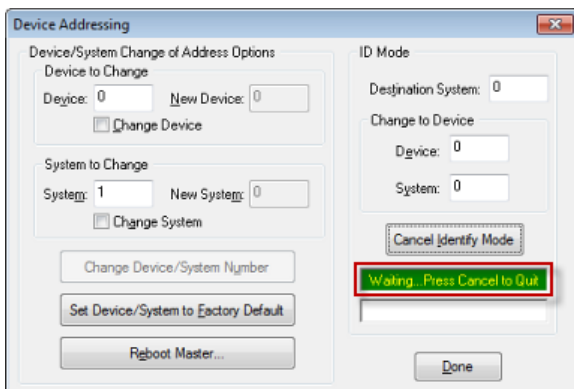


FIG. 13 Device Addressing dialog - Identify Mode active

5. Press the NI Controller's **ID** button to assign the new Device / System values entered in step 3 to the Controller. At this point, the "Successful Identification Made" message is displayed (FIG. 14):



FIG. 14 Device Addressing dialog - Successful Identification Made

- The previous Device and System numbers of the NI Controller are displayed below the red field.
Example: *Previous D:S=5001:1*,
where "5001" represents the previous device value of the NI Controller (D) and "1" represents the NI Controller's System value (S).

Obtaining the NI Controller's IP Address (using DHCP)

NOTE: Verify there is an active LAN connection on the NI Controller's LAN port before beginning these procedures.

1. In NetLinX Studio, select **Diagnostics > Network Addresses** from the Main menu to access the Network Addresses dialog (FIG. 15).

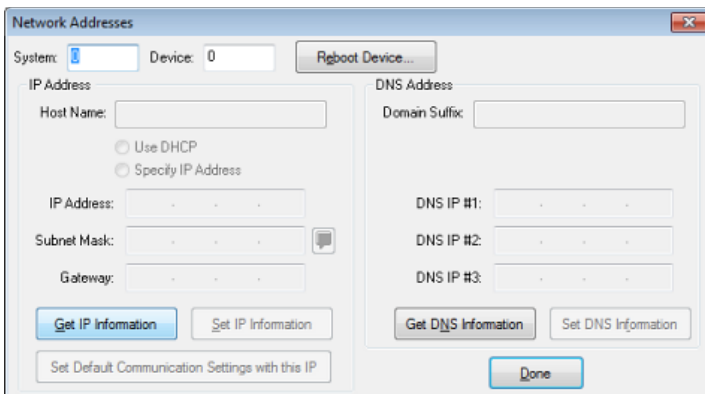


FIG. 15 NetLinX Studio: Network Addresses dialog

2. Verify that both the **System** number corresponds to the System value previously assigned within the Device Addressing tab and that zero (0) is entered into the *Device* field.
NOTE: The system value must correspond to the Device Address entered in the Device Addressing dialog. Refer to the *Manage System - System Number* section on page 44 for more detailed instructions on setting a system value.
3. Click **Get IP Information** to configure the on-board Master for DHCP usage and then read the IP Address obtained from the DHCP Server. This action enables the *Use DHCP* and *Specify IP Address* options.
NOTE: DO NOT enter ANY IP information at this time; this step only gets the System Master to recognize that it should begin using an obtained DHCP Address.
4. Note the obtained IP Address (*read-only*). This information is later entered into the *Master Communication Settings* dialog and used by NetLinX Studio to communicate to the NI Controller via an IP. This address is reserved by the DHCP server and then given to the Master.
NOTE: If the IP Address field is empty, give the Master a few minutes to negotiate a DHCP Address with the DHCP Server, and try again. The DHCP Server can take anywhere from a few seconds to a few minutes to provide the Master with an IP Address.
5. Verify that **NetLinX** appears in the *Host Name* field (if not, then enter it in at this time).

6. Select **Use DHCP**.
7. Click **Set IP Information** to retain the IP Address from the DHCP server and assign it to the on-board Master. A popup window is displayed to indicate that setting the IP information was successful and to prompt you to reboot the Master.

NOTE: Verify that these IP values are also entered into the related fields within either the IP Settings section of the System Connection page (on the touch panel) or within the Address field on the web browser.

8. Click **Reboot Master**.
9. Click **Done** to close the dialog.

NOTE: On the front panel of the NetLinX Master, the STATUS and OUTPUT LEDs should begin to alternately blink during the incorporation. Wait until the STATUS LED is the only LED to blink.

Complete the communication process by continuing on to the *Communicating Via IP Address* section on page 21.

Assigning a Static IP to the NI Controller

NOTE: Verify there is an active LAN connection on the LAN port of the Master before beginning these procedures.

1. In NetLinX Studio, select **Diagnostics > Network Addresses** to open the *Network Addresses* dialog (FIG. 16):

FIG. 16 NetLinX Studio: Network Addresses dialog

2. Verify that both the **System** number corresponds to the System value previously assigned within the Device Addressing tab and that zero (0) is entered into the *Device* field.

NOTE: The system value must correspond to the Device Address previously entered in the Device Addressing tab. Refer to the *Manage System - System Number* section on page 44 for more detailed instructions on setting a system value.

3. Click the **Get IP Information** button to temporarily configure the on-board Master for DHCP usage and then read the IP Address obtained from the DHCP Server. This action enables the *Use DHCP* and *Specify IP Address* options.
4. Select **Specify IP Address** to enable the IP fields for editing (FIG. 17):

FIG. 17 NetLinX Studio: Network Addresses dialog (Specify IP Address)

5. Verify that **NetLinX** appears in the *Host Name* field (if not, then enter it in at this time).
6. Enter the *IP Address*, *Subnet Mask*, and *Gateway* information into their respective fields (as defined by the System Administrator).

NOTE: Verify that these IP values are also entered into the related fields within either the IP Settings section of the System Connection page (on the touch panel) or within the Address field on the web browser.

7. Click **Set IP Information** to cause the on-board Master to retain this new IP Address.
8. Click **Reboot Master**.

- Click **Done** to close the dialog.

NOTE: On the front panel of the NetLinx Master, the STATUS and OUTPUT LEDs should begin to alternately blink during the incorporation. Wait until the STATUS LED is the only LED to blink.

Complete the communication process by continuing on to the *Communicating Via IP Address* section on page 21.

Communicating Via IP Address

Whether the on-board Master's IP Address was set or obtained via DHCP, use the IP Address information from the *Network Addresses* dialog to establish communication via the LAN-connected Master.

- Use NetLinx Studio to obtain the IP Address of the NI Controller from your System Administrator.
If you do not have an IP Address, follow the steps outlined in either the *Obtaining the NI Controller's IP Address (using DHCP)* section on page 19, or the *Assigning a Static IP to the NI Controller* section on page 20.
- Select **Settings > Master Communication Settings** from the Main menu to open the *Master Communication Settings* dialog (FIG. 18):

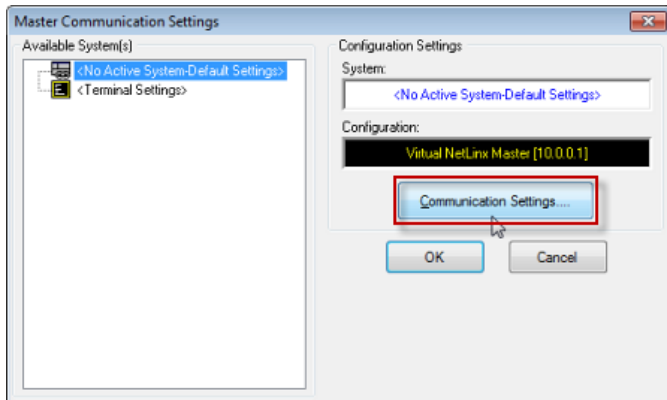


FIG. 18 NetLinx Studio - Master Communication Settings dialog

- Click **Communications Settings** to open the *Communications Settings* dialog (FIG. 19):

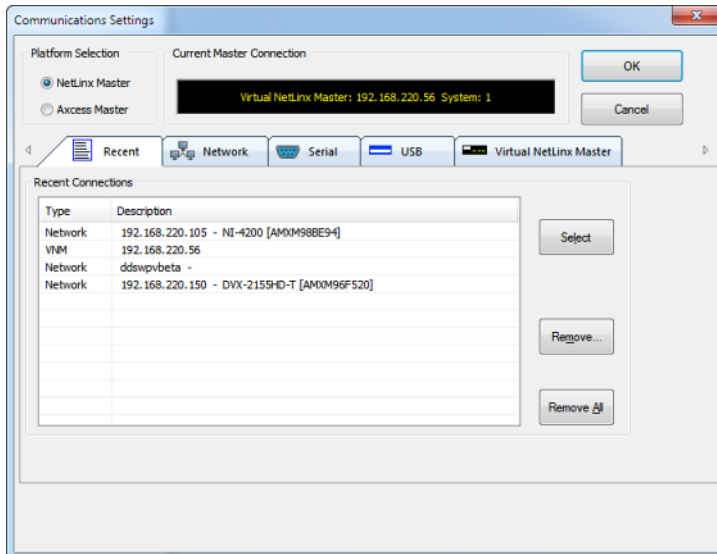


FIG. 19 NetLinx Studio - Communication Settings dialog (TCP/IP selected)

- In the *Platform Selection* area, select **NetLinx Master**.
- Select the **Network** tab (FIG. 20).

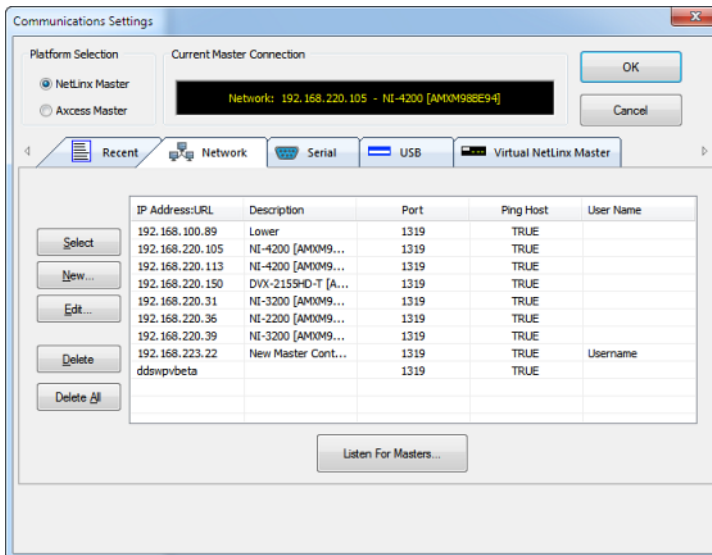


FIG. 20 Communications Settings dialog - Network tab

6. Click **New** to open the *New TCP/IP Setting* dialog, where you can enter both a previously obtained DHCP or Static IP Address and an associated *Description* for the connection into their respective fields. (FIG. 21):

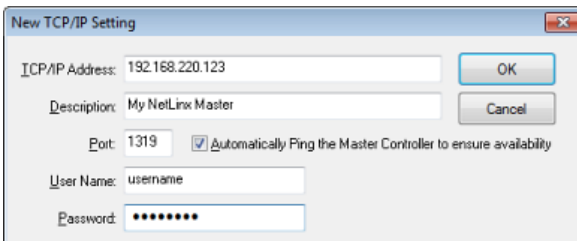


FIG. 21 NetLinX Studio - New TCP/IP Setting dialog

- Verify that the *Automatically Ping the Master Controller to ensure availability* option is selected to make sure the Master is initially responding online before establishing full communication.
 - If the authentication is required for connecting to the Master at this address, enter a *User Name* and *Password* in the text fields provided.
7. Click **OK** to close the *New TCP/IP Settings* dialog and return to the *Communication Settings* dialog: (FIG. 22).

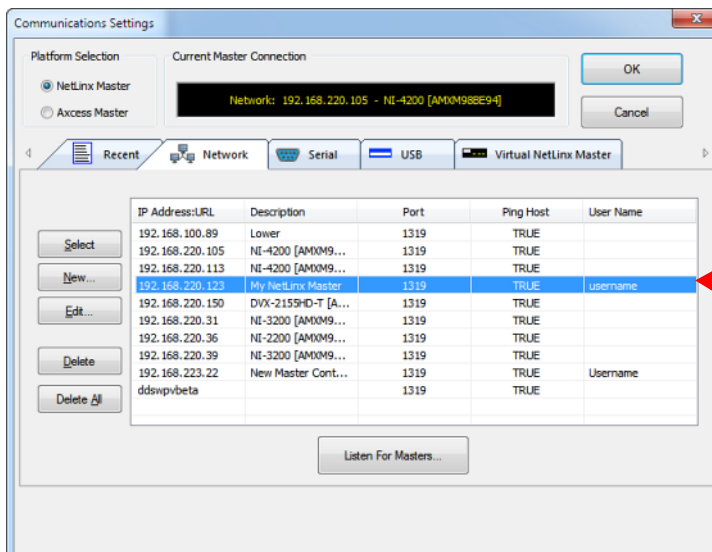


FIG. 22 NetLinX Studio - Communication Settings dialog

- a. Click on the new IP address entry in the *List of Addresses* window
- b. Click **Select** to use the selected IP address as the current IP address.

- Click **OK** to save your newly entered information and close the *Communication Settings* dialog and return to the *Master Communication Settings* dialog. Note the selected IP address is indicated in the *Configuration* field (FIG. 23):

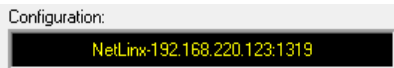


FIG. 23 NetLinX Studio - Communication Settings dialog (Configuration field indicating the selected IP Address)

- Click **OK** to begin the communication process to your Master (and close the dialog).
 - If you are currently connected to a Master, a pop-up asks whether you would want to stop communication to the current Master and apply the new settings.
 - Click **Yes** to interrupt the current communication from the Master and apply the new settings.
- Click **Reboot** (from the *Tools > Reboot the Master Controller dialog*) and wait for the Master to reboot.

NOTE: *On the front panel of the NetLinX Master, the STATUS and OUTPUT LEDs should begin to alternately blink during the incorporation. Wait until the STATUS LED is the only LED to blink.*

- Click the **OnLine Tree** tab in the Workspace window to view the devices on the System. *The default System value is one (1).*
- Right-click the associated System number and select **Refresh System**. This establishes a new connection to the specified System and populates the list with devices on that system. *The communication method is then highlighted in green on the bottom of the NetLinX Studio window.*

NOTE: *If the connection fails to establish, a Connection Failed dialog appears. Try selecting a different IP Address if communication fails. Press the Retry button to reconnect using the same communication parameters. Press the Change button to alter your communication parameters and repeat the steps above.*

Upgrading Firmware

Overview

The basic process of upgrading firmware on NI Controllers as well as Enova DVX All-In-One Presentation Switchers is essentially the same. In all cases it involves downloading the latest firmware files from www.amx.com and using NetLinX Studio to transfer the files to a target NI Controller. Since the instructions in this section apply to both NI Controllers and Enova DVX All-In-One Presentation Switchers, the term *Central Controller* is used to describe both NI Controllers and Enova DVX All-In-One Presentation Switchers.

Use the OnLine Device tree in NetLinX Studio to view the firmware files currently loaded on the Central Controller. FIG. 24 shows an example OnLine Tree indicating a NI-2100:

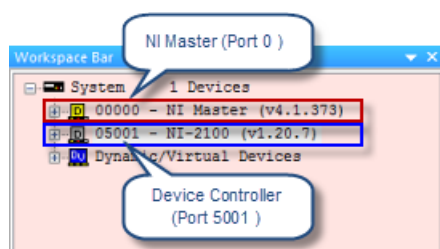


FIG. 24 NetLinX Studio - Sample OnLine Tree

While the method of upgrading firmware files is the same for all Central Controllers, there are some specific points relative to the specific model and type of controller that must be noted:

NI Controllers - Firmware Files

NI Controllers contain two devices (*NI Master* and *Device Controller*), each of which require a separate firmware (*.kit) file.

The NI Master firmware file is not the same as the Device Controller firmware file. These two devices must be kept at compatible firmware versions for proper operation. Therefore, both files should be used when upgrading any firmware associated with the Integrated Controllers.

NI Controllers - Firmware Files	
NI Master Firmware	The on-board NI Master is listed first in the OnLine Tree as " 00000 NI Master (<firmware version>) " For example, the NI Master in FIG. 24 above is " 00000 - NI Master (v4.1.373) ". <ul style="list-style-type: none"> "00000" represents <i>Device ID 0</i>, which is reserved for the Master The number in parenthesis (in this case "v4.1.373") is the current NI Master firmware version.
Device Controller Firmware	The Device Controller is listed next as " 05001 NI-XXXX (<firmware version>) " For example, the Device Controller in FIG. 24 above is " 05001 - NI-2100 (v1.20.7) ". <ul style="list-style-type: none"> "05001" represents <i>Device ID 5001</i>, which is reserved for the Device Control ports. The number in parenthesis (in this case "v1.20.7") is the current Device Controller firmware version.

NOTE: In the case of an NI-4000 or NI-4100 with installed NXC cards, the cards will also be represented in the OnLine Tree. See the *Upgrading NXC Card Firmware* section on page 28 for details.

Enova DVX

Enova DVX All-In-One Presentation Switchers contain *three* devices (*NI Master*, *Device Controller* and *A/V Switcher/Scaler*), each of which require a separate Kit file. These three devices must be kept at compatible firmware versions for proper operation. Therefore, all three files should be used when upgrading any firmware associated with the Enova DVX All-In-One Presentation Switchers.

DVX Controllers - Firmware Files	
NI Master Firmware	The on-board NI Master is listed first in the OnLine Tree as " 00000 NI Master (<firmware version>) " <ul style="list-style-type: none"> "00000" represents <i>Device ID 0</i>, which is reserved for the Master The number in parenthesis is the current Master firmware version.
Device Controller Firmware	The Device Controller is listed next as " 05001 NI-XXXX (<firmware version>) " <ul style="list-style-type: none"> "05001" represents <i>Device ID 5001</i>, which is reserved for the Device Control ports. The number in parenthesis is the current Device Controller firmware version.
A/V Switcher/Scaler Firmware	The A/V Switcher/Scaler is listed third as " 05002 NI-XXXX (<firmware version>) " <ul style="list-style-type: none"> "05002" represents <i>Device ID 5002</i>, which is reserved for the A/V Switcher/Scaler. The number in parenthesis is the current Device Controller firmware version.

Before You Start

1. Verify you have the latest version of the NetLinx Studio application installed on your PC.
NetLinx Studio is available to download from www.amx.com. Login to download the latest version. Alternatively, if it is already installed, use the **Web Update** option in NetLinx Studio's Help menu to obtain the latest version.
The default location for the NetLinx Studio application is **Start > Programs > AMX Control Disc > NetLinx Studio > NetLinx Studio**.
2. Verify that an LAN/ICSNet cable is connected from the Central Controller to the LAN Hub.
3. Connect an programming cable (RS-232) from the Program Port on the Central Controller to a COM port on the PC being used for programming.
NOTE: NI-4000/4100 only: Verify that any control cards are inserted and their respective connectors are attached.
4. Verify that the Central Controller unit is powered on.
5. Establish what version of firmware is currently loaded on the Central Controller (see *Verifying the Current Firmware Version* below).

Verifying the Current Firmware Version

Use the OnLine Tree in NetLinx Studio (see FIG. 24 on page 24) to verify which version of each firmware file is currently installed.

NOTE: These steps assume that you have already established a connection with the target Central Controller (see the *Initial Configuration* section on page 14 for details).

1. In NetLinx Studio, click on the **OnLine Tree** tab (in the Workspace Bar) to view the devices on the System.
2. Click **Display** and select **Refresh System** from the context menu. This establishes a new connection to the System and populates the device tree with devices on that system.
3. After the *Communication Verification* dialog indicates active communication between the PC and the Central Controller, verify the Central Controller and associated devices are listed in the OnLine Tree.
4. Check the appropriate product page on www.amx.com for the latest *NI Master, Device Controller* (and *A/V Switcher/Scaler* firmware files in the case of Enova DVX) for your device.

If necessary, follow the procedures outlined in the following sections to obtain these firmware (*.kit) files from www.amx.com and then transfer the new firmware files to the device.

Downloading the Latest Firmware Files from www.amx.com

NetLinx Integrated Controllers

NetLinx Integrated (NI) Controllers require two firmware (*.kit) files: *Master* firmware and *Device* firmware. The Master firmware file is not the same as the Device firmware file.

Both files should be used when upgrading any firmware associated with the Integrated Controllers.

NOTE: The process of downloading and transferring firmware files is the same for all types of firmware. However, it is important that the firmware files are upgraded in specific following order for NI Controllers (see the *Required Order of Firmware Updates for NI Controllers* section on page 27).


Master and Device Firmware Kit Files for NetLinx Integrated Controllers

Below is a table outlining the *Master* and *Device* Firmware (*.kit) files used by NetLinx Integrated Controllers:

Master and Device Firmware Files for NetLinx Integrated Controllers	
NI-4100 / 3100 / 2100	Master Firmware: SW2105_04_Master_v4_1_xxx.kit
	Device Firmware: SW2105_NI-X100_Device_v1_xx_x.kit
NI-3101-SIG	Master Firmware: SW2105-08_Master_v4_1_xxx.kit
	Device Firmware: SW2105_NI_X101_Device_v1_xx_x.kit
NI-700	Master Firmware: SW2105-90_Master_v4_1_xxx.kit
	Device Firmware: SW2105_NI_700_Device_v1_30_8.kit
NI-900	Master Firmware: SW2105-90_Master_v4_1_xxx.kit
	Device Firmware: SW2105_NI_900_Device_v1_xx_x.kit

Downloading NI Controller Firmware Files on www.amx.com

Visit the appropriate product page on www.amx.com for the latest *NI Master* and *Device Controller* firmware (*.kit) files for your NI Controller. Firmware file links are available along the right-side of the catalog page (FIG. 25):

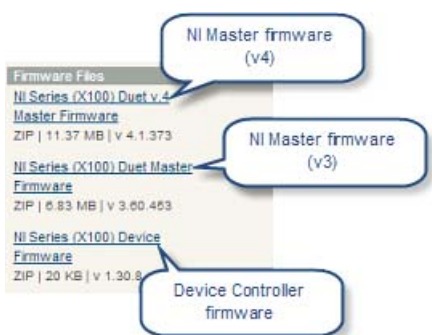

Note: The latest firmware for NetLinx Masters is version 4 Duet firmware. However, a link is provided to version 3 firmware as well for legacy systems.

FIG. 25 www.amx.com - sample NI Controller Firmware File links (NI-2100 shown)

Firmware files are bundled in a ZIP file, along with a Readme.TXT file that provides details on this firmware release.

1. Accept the *AMX Licensing Agreement*.
2. Download the ZIP file and unzip the contents to a known location.

Enova DVX All-In-One Presentation Switchers

Enova DVX All-In-One Presentation Switchers require an additional *Switcher Firmware* file for the built-in switcher. ALL files should be used when upgrading any firmware associated with the Integrated Controllers.

NOTE: The process of downloading and transferring firmware files is the same for all types of firmware. However, it is important that the firmware files are upgraded in specific following order for DVX Controllers (see the *Required Order of Firmware Updates for DVX Controllers* section on page 27).

Master, Switcher and Device Firmware Files for Enova DVX All-In-One Presentation Switchers

Below is a table outlining the *Master*, *Device*, and *Switcher* firmware (*.kit) files used by Enova DVX Controllers:

Master Firmware Kit File Usage for Enova DVX Controllers	
DVX-3150/3155/3156 2150/2155 HD	Master Firmware: SW1905-25_Master_v4_x_XXX.kit
	Device Firmware: SW2105_NI_X101_Device_v1_xx_x.kit
	A/V Switcher/Scaler Firmware: SW1905-20_DVX-HD_v1_x_xx.kit
DVX-2100HD	Master Firmware: SW1905-01_Master_v4_x_XXX.kit
	Device Firmware: SW2105_NI_X101_Device_v1_xx_x.kit
	Switcher Firmware: SW1905_DVX_KIT_DVX_2100HD_SP_T_v1_4_xx.kit

Downloading Enova DVX Firmware Files on www.amx.com

Visit the appropriate product page on www.amx.com for the latest *NI Master*, *Device Controller*, and *A/V Switcher/Scaler* firmware (*.kit) files for your Enova DVX All-In-One Presentation Switcher. Firmware file links are available along the right-side of the catalog page (FIG. 26):

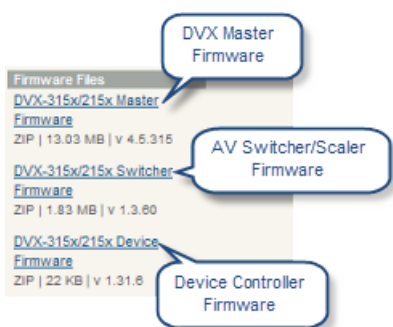


FIG. 26 www.amx.com - sample Enova DVX Firmware File links (DVX-3150 shown)

Firmware files are bundled in a ZIP file, along with a Readme.TXT file that provides details on this firmware release.

1. Accept the *AMX Licensing Agreement*.
2. Download the ZIP file and unzip the contents to a known location.

NOTE: ALWAYS consult the *Readme.TXT* file bundled with the firmware file for any special instructions before upgrading to a newer firmware version. If no specifics are provided, use the order provided above.

Required Order of Firmware Updates

The *Upgrading Firmware Files* instructions (below) apply equally to all types of firmware files. However, it is important that the firmware files are upgraded in the following order:

Required Order of Firmware Updates for NI Controllers

1. First, upgrade the **Master** firmware.
2. When that process is complete, upgrade the **Device** firmware.

Required Order of Firmware Updates for DVX Controllers

1. First, upgrade the **A/V Switcher/Scaler** firmware.
2. When that process is complete, upgrade the **Master** firmware.
3. When that process is complete, upgrade the **Device** firmware.

Upgrading Firmware Files

NOTE: *These steps assume that you have already established a connection with the target Central Controller (see the Initial Configuration section on page 14 for details).*

1. In NetLinx Studio, click on the **OnLine Tree** tab (in the Workspace Bar) to view the devices on the System.
2. In the OnLine Tree tab, click **Display** and select **Refresh System** from the context menu. This establishes a new connection to the System and populates the device tree with devices on that system.
3. After the *Communication Verification* dialog indicates active communication between the PC and the Central Controller, verify the Master and associated devices (including the *Device Controller* and *A/V Switcher/Scaler* for Enova DVX) are listed in the OnLine Tree.
4. In NetLinx Studio, select **Tools > Firmware Transfers > Send to NetLinx Device** (FIG. 27):

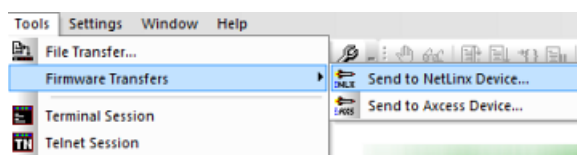


FIG. 27 NetLinx Studio - Tools > Firmware Transfers > Send To NetLinx Device

This opens the *Send To NetLinx Device* dialog.

5. Click the *Browse* button (...) to locate and select the firmware (*.kit) file that will be transferred, in the *Browse for Folders* dialog (FIG. 28):

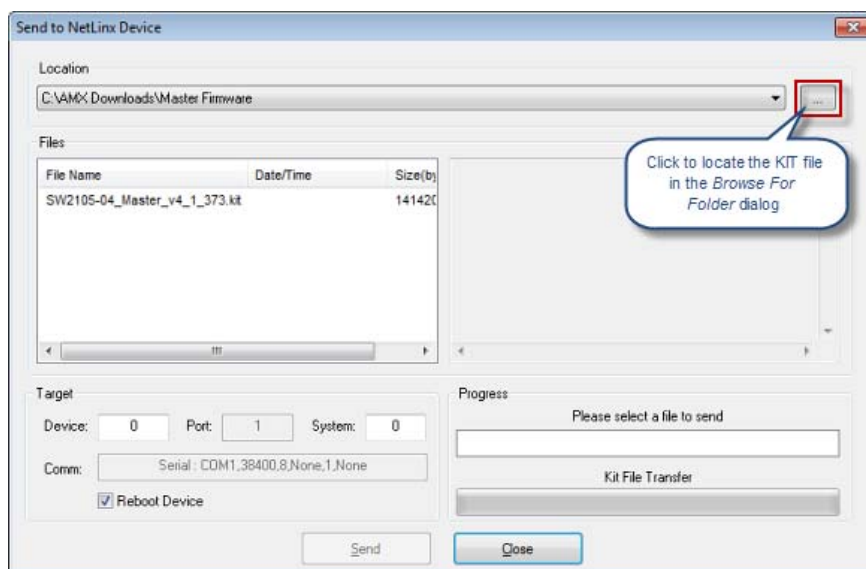


FIG. 28 NetLinx Studio - Send To NetLinx Device dialog

The selected file is indicated in the *Files* window.

6. Verify the target's *System* number matches the value listed within the active System folder in the OnLine Tree.
 - The *Device* number is always **0** for the NI Master.
 - Note that the *Port* field is disabled (FIG. 29).

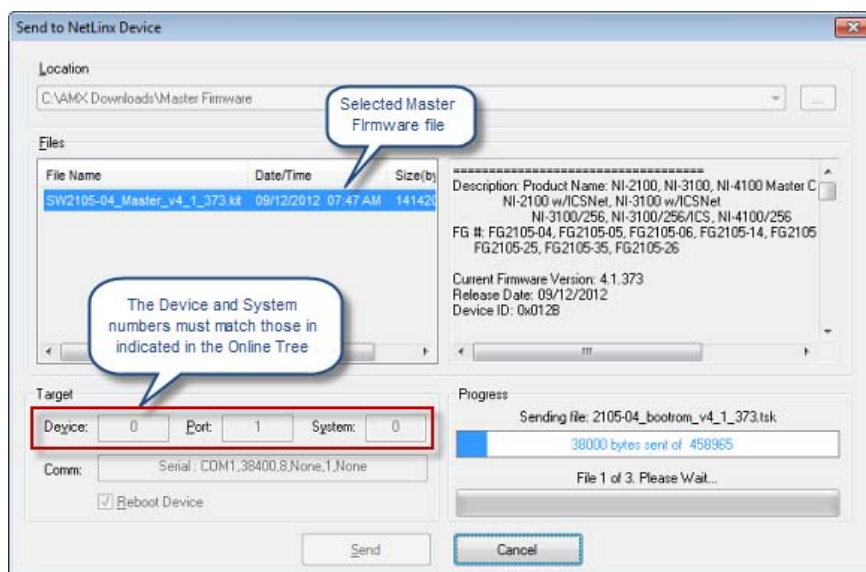


FIG. 29 Send to NetLinX Device dialog (showing on-board NI_Master firmware update)

7. Verify that the **Reboot Device** checkbox is selected to reboot the NI unit after the firmware update process is complete (selected by default).
8. Click **Send** to begin the transfer. The file transfer progress is indicated in the *Progress* section of the dialog.

NOTE: Only upon the initial installation of a new Kit file to an on-board Master will there be a error message displayed indicating a failure of the last component to successfully download. This is part of the NI Master update procedure and requires that the firmware be reloaded after a reboot of the unit. This consecutive process installs the final component of the new Kit file. After the last components fails to install, click Done. Repeat steps 5 - 9 (the last component will now successfully be installed).

9. Click **Close** once the download process is complete.

NOTE: On the front panel of the NetLinX Master, the *OUTPUT* and *INPUT* LEDs alternately blink to indicate the on-board Master is incorporating the new firmware. Allow the Master 20 - 30 seconds to reboot and fully restart.

10. In the OnLine Tree, right-click on the Master and select **Refresh System**. This establishes a new connection and refreshes the device list and their firmware versions in your system.

Once the process is complete, you can upgrade the remaining firmware files. All device files must be kept at compatible firmware versions for proper operation. Therefore, all files should be used when upgrading any firmware associated with the Integrated Controllers.

Be sure to follow the required order for installing firmware files:

- See the *Required Order of Firmware Updates for NI Controllers* section on page 27
- See the *Required Order of Firmware Updates for DVX Controllers* section on page 27

Upgrading NXC Card Firmware

Before beginning with this section, verify that both the on-board Master and on-board Integrated Controller have been updated with the latest firmware and that the NetLinX cards are securely inserted into the NI-4100.

1. Follow the procedures outlined within the *Communicating Via IP Address* section on page 21 to connect to the target NI device via the web.
2. After NetLinX Studio has established a connection to the target Master, click the **OnLine Tree** tab of the Workspace window to view the devices on the System. *The default System value is one (1).*
3. Right-click the associated System number and select **Refresh System**. This establishes a new connection to the specified System and populates the list with devices on that system. *The communication method is highlighted in green on the bottom of the NetLinX Studio window.*
4. After the Communication Verification dialog window verifies active communication between the PC and the NI unit, verify the NetLinX NXC Control Cards appear in the **OnLine Tree** tab of the Workspace window (FIG. 30).

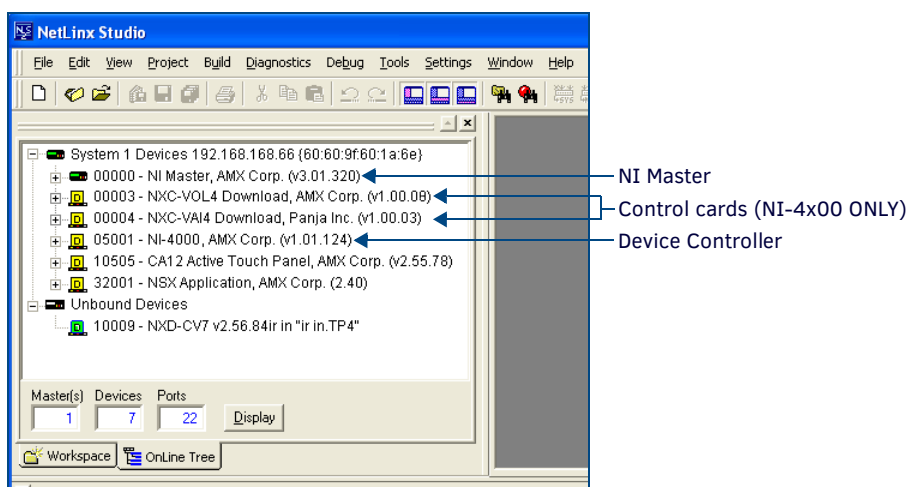


FIG. 30 Sample NetLinx Workspace window (showing OnLine Tree tab)

NOTE: If the control card firmware is not up to date; download the latest firmware file from www.amx.com > Tech Center > Downloadable Files > Firmware Files > NXC-XXX. In this example, the NXC-VOL card contains out-of-date firmware and requires build 1.00.09.

5. If the NXC card firmware being used is not current, download the firmware file by first logging in to www.amx.com and then navigate to **Tech Center > Firmware Files** and from within the NetLinx section of the web page locate the NXC card entries.
6. Click on the desired Kit file link and after you've accepted the Licensing Agreement, verify you have downloaded the NetLinx NXC card firmware (Kit) file to a known location.
7. Verify you have downloaded the latest NetLinx Control Card firmware (Kit) file to a known location.
8. Select **Tools > Firmware Transfers > Send to NetLinx Device** from the Main menu to open the Send to NetLinx Device dialog (FIG. 31). Verify the target's **Device and System** numbers matches the value listed within the System folder in the Workspace window.

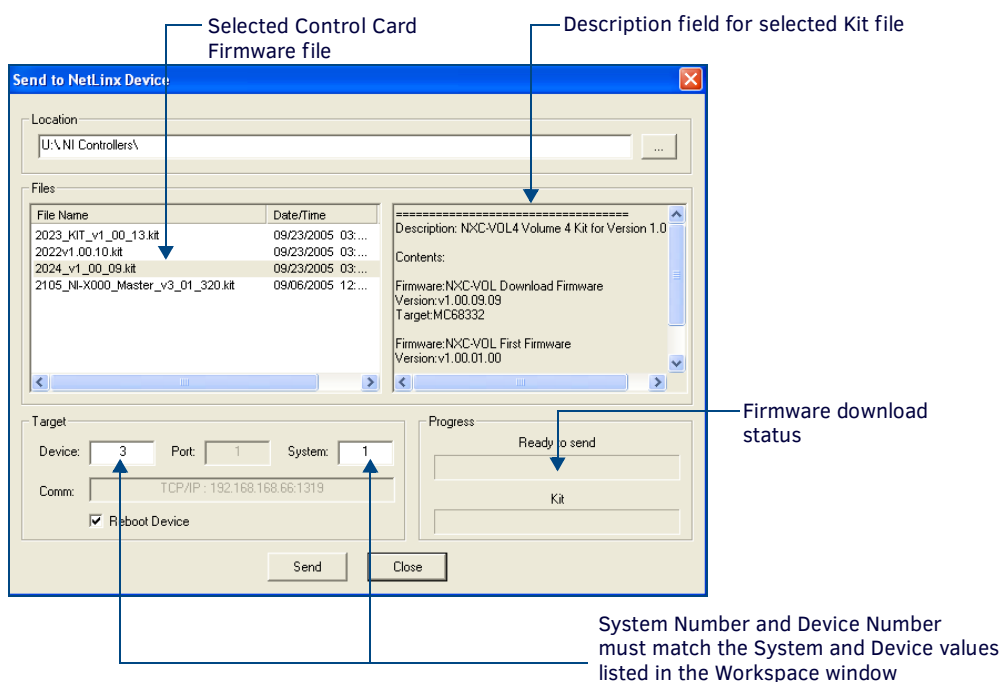


FIG. 31 Select Control Card firmware file for download page (via IP)

9. Select the Control Card's Kit file from the **Files** section (FIG. 31) (in our above example we chose to update the NXC-VOL4 card).
10. Enter the **System** and **Device** numbers associated with the desired Master (listed in the Workspace window). A device value of 00003 is the same as a value of 3.
11. Click the **Reboot Device** checkbox to reboot the NI unit after the firmware update process is complete and then re-detect the new NXC card firmware.
12. Click **Send** to begin the transfer. The file transfer progress is indicated on the bottom-right of the dialog (FIG. 31).
13. Click **Close** once the download process is complete.

14. Click **Reboot** (from the *Tools > Reboot the Master Controller dialog*) and wait for the System Master to reboot.
The STATUS and OUTPUT LEDs should begin to alternately blink during the incorporation. Wait until the STATUS LED is the only LED to blink.
15. Press **Done** once until the *Master Reboot Status* field reads **Reboot of System Complete**.
16. Cycle power to the Master (unplug and reconnect power to the unit).
NOTE: *This process of cycling power acts to reset the updated NetLinX Control Card and detect its new firmware update. It also serves to allow the Integrated Controller to detect and reflect the new firmware on the card to the NetLinX Studio display on the Workspace window.*
17. After Studio has establish a connection to target Master, click the **OnLine Tree** tab of the Workspace window to view the devices on the System. *The default System value is one (1).*
18. Right-click the associated System number and select **Refresh System**. This establishes a new connection to the specified System and populates the list with devices on that system.
The communication method is highlighted in green on the bottom of the NetLinX Studio window.

Resetting the Factory Default System and Device Values

1. In NetLinX Studio, access the *Device Addressing* dialog:
 - Right-click on any system device listed in the Workspace and select **Device Addressing**.
 - Select **Diagnostics > Device Addressing** from the Main menu.
2. Click the **Set Device/System to Factory Default** button (FIG. 32):

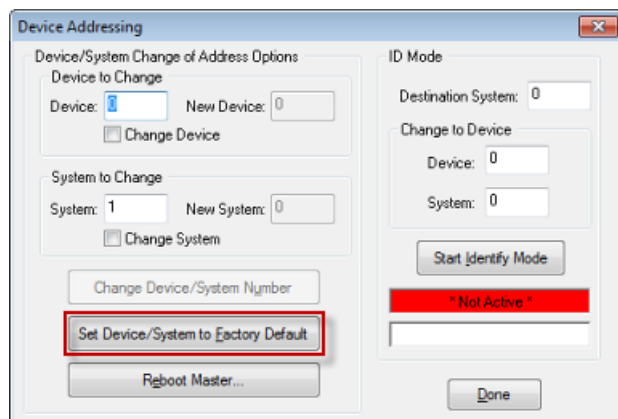


FIG. 32 Device Addressing dialog

This resets both the system value and device addresses (for definable devices) to their factory default settings. The system information (in the **OnLine Tree** tab of the Workspace window) refreshes and then displays the new information.

NOTE: *By setting the system to its default value (#1), Modero panels that were set to connect to the Master on another System value will not appear in the OnLine Tree tab of the Workspace window. For example: A Modero touch panel was previously set to System #2. The system is then reset to its default setting of System #1 and then refreshed from within the Workspace window. The panel will not reappear until the system is changed (from within the System Connection page on the Modero) to match the new value and both the Master and panel are rebooted.*

3. Click **Done** to close the *Device Addressing* dialog.
4. Click **Reboot** (from the *Tools > Reboot the Master Controller dialog*) and wait for the System Master to reboot.
NOTE: *The STATUS and OUTPUT LEDs should begin to alternately blink during the incorporation. Wait until the STATUS LED is the only LED to blink.*
5. Press **Done** once until the *Master Reboot Status* field reads **Reboot of System Complete**.
6. Click the **OnLine Tree** tab in the Workspace window to view the devices on the System.
7. Right-click the associated System number (or anywhere within the tab itself) and select **Refresh System**. This establishes a new connection to the specified System and populates the list with devices on that system.
8. Use **Ctrl+S** to save these changes to your NetLinX Project.

Onboard WebConsole User Interface

WebConsole UI Overview

NetLinx Masters have a built-in WebConsole that allows you to make various configuration settings via a web browser on any PC that has access to the Master. The webconsole consists of a series of web pages that are collectively called the "Master Configuration Manager" (FIG. 33).

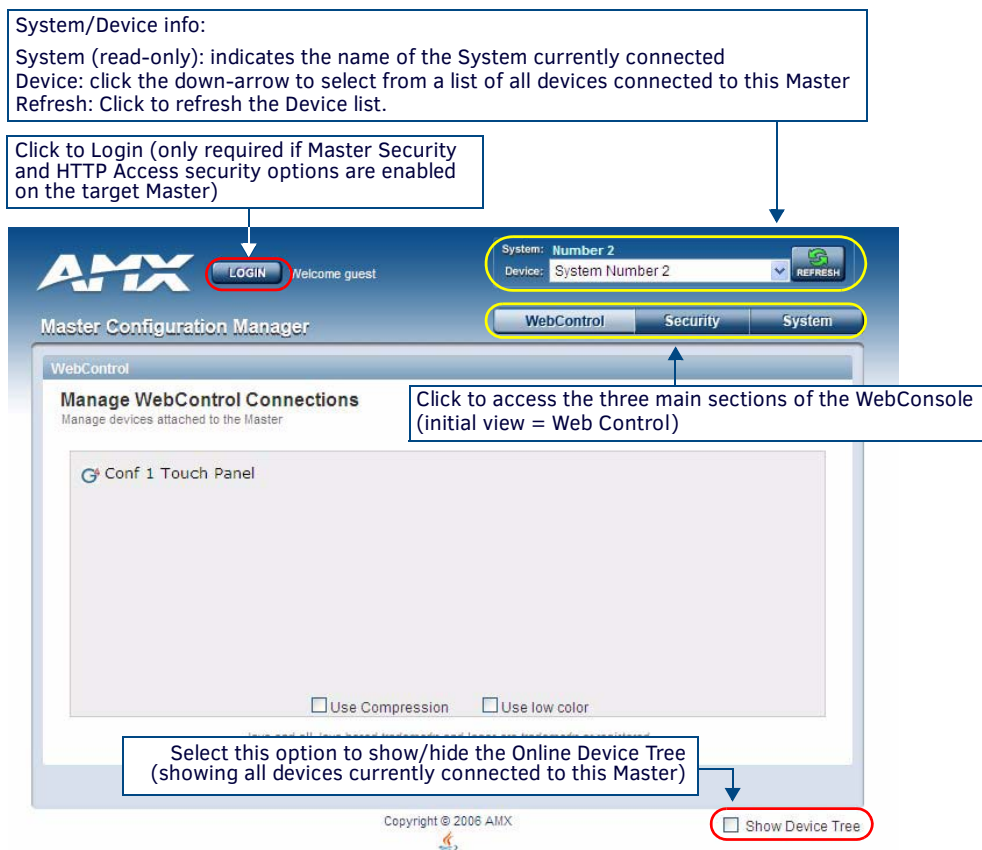


FIG. 33 Master Configuration Manager - Web Control Page (initial view)

The webconsole is divided into three primary sections, indicated by three control buttons across the top of the main page (FIG. 34):



FIG. 34 WebConsole Control Buttons

- **Web Control:** This is the option that is pre-selected when the WebConsole is accessed. Use the options in the *Manage Web Control Connections* page to manage G4 Web Control connections (see the *WebConsole - Web Control Options* section on page 43).
- **Security:** Click to access the System Security page. The options in this page allow you to configure various aspects of NetLinx System and Security on the Master (see the *WebConsole - Security Options* section on page 34).
- **System:** Click to access the System Details page. The options on this page allow you to view and configure various aspects of the NetLinx System (see the *WebConsole - System Options* section on page 44).

Accessing the WebConsole

From any PC that has access to the LAN that the target Master resides on:

1. Open a web browser and type the IP Address of the target Master in the Address Bar.
2. Press Enter to access WebConsole for that Master. The initial view is the *Web Control* page (FIG. 33).

Device Tree

Click the **Show Device Tree** checkbox to show/hide the online device tree, which indicates all devices currently connected to this Master. Use the plus and minus symbols to the left of each item in the Device Tree to expand the view to include System devices, ports and individual Port settings. At the Port view, you can use the Device Tree to make specific port assignments (including Channel and Level assignments) (FIG. 35).

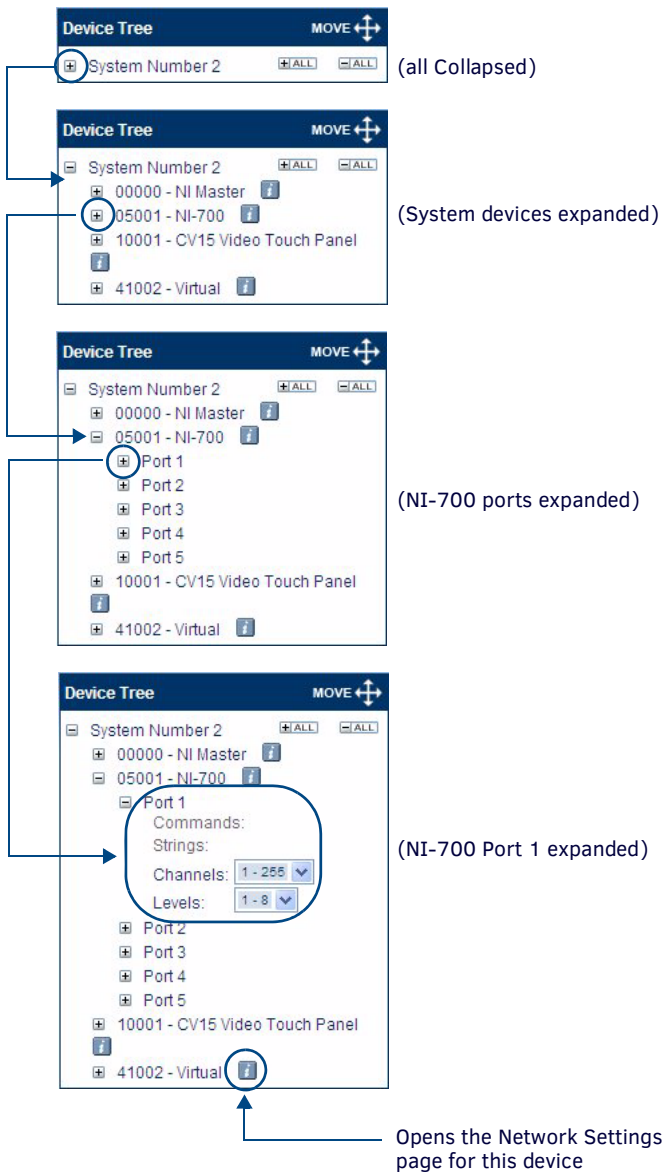


FIG. 35 Online Device Tree

Device Network Settings Pages

Click on the blue Information (i) icon next to any device listed in the Device Tree to access the Network Settings page for the selected device (FIG. 36).

The screenshot shows the AMX Master Configuration Manager interface. At the top, there is a header with the AMX logo, a LOGIN button, and a 'Welcome guest' message. On the right, the system information shows 'System: Number 1' and 'Device: 00000 - NI Master' with a REFRESH button. Below the header are tabs for 'WebControl', 'Security', and 'System'. The main content area is titled 'Manage Devices' and 'Network Settings'. It includes a sub-header 'Modify Network Settings for Devices' and navigation links for 'Network Settings', 'URL List', 'Device Number', 'Control/Emulate', 'Log', and 'Diagnostics'. The 'Device Information' section lists: Device Name: NI Master, Manufacturer: AMX LLC, Device Number: 0, Version: v3.60.453, Port Count: 5, FWID: 380, and three OID entries. The 'IP Address' section has a Host Name field set to 'Shane31', radio buttons for DHCP (selected) and Specify IP Address, and fields for IP Address (192.168.x.x), Subnet Mask (255.255.x.x), and Gateway (192.168.x.x). The 'DNS Address' section has a Domain Suffix field set to 'amx.internal' and three DNS IP fields. The 'ZeroConfig Networking' section has a radio button for 'On' (selected) and 'Off'. The 'NDP Beacon' section has a radio button for 'On' (selected) and 'Off'. The 'IP Device Discovery' section has a radio button for 'On' (selected) and 'Off'. At the bottom, there are 'Reboot', 'Cancel', and 'Accept' buttons.

FIG. 36 Example Network Settings page

- Use the options on this page to view/edit the device's network settings.
- Refer to the *Manage Devices - Network Settings* section on page 69 for details.

ZeroConfig Networking

Use these radio buttons to enable/disable the new Zero-Configuration (*zeroconf*) client in the Master.

By default, zeroconf is enabled (*On* option selected). With zeroconf enabled, the Master's web interface will be registered via zeroconf and can be viewed through a zeroconf browser plug-in such as Bonjour for IE.

WebConsole - Security Options

Security Overview

The *Security System Details* page is accessed by clicking on the **Security** button. This page allows you to view configure and modify the Master's security settings at three levels:

- **System Level** - changes made at this level affect the system globally. See the *System Security - System Level* section on page 35 for details.
- **Group Level** - changes made at this level affect specific User Groups. See the *System Security - Group Level* section on page 38 for details.
- **User Level** - changes made at this level affect individual Users. See the *System Security - User Level* section on page 41 for details.

The default view for the option is System Level Security / System Security Settings (FIG. 37).

These tabs provide access to the three levels of security configuration provided (default view = System Level)

FIG. 37 System Security Details Page (System Security Settings)

NOTE: By default, all System-level security options are disabled.

Additional security configuration options are available via Terminal/Telnet Commands:

- See the *Accessing the Security Configuration Options* section on page 101.
- Refer to *SET SECURITY PROFILE* on page 94 for information on setting Security Profiles.

Default Security Configuration

By default, the NetLinx Master creates the following accounts, access rights, directory associations, and security options:

Default Security Configuration		
Account 1	Account 2	Group 1
<i>Username:</i> administrator	<i>Username:</i> NetLinx	
<i>Password:</i> password	<i>Password:</i> password	
<i>Group:</i> administrator	<i>Group:</i> none	<i>Group:</i> administrator
<i>Rights:</i> All	<i>Rights:</i> FTP Access	<i>Rights:</i> All
<i>Directory Association:</i> /*	<i>Directory Association:</i> none	<i>Directory Association:</i> /*
<i>Note:</i> The "administrator" User account cannot be deleted or modified with the exception of its password. Only a user with both Configuration access and administrator rights can alter the administrator's password.	<i>Note:</i> The "NetLinx" User account is compatible with previous NetLinx Master firmware versions. This account is initially created by default and can later be deleted or modified.	<i>Note:</i> The "administrator" Group account cannot be deleted or modified.

- FTP Security is always enabled on the Masters.
- The **Admin Change Password Security** option (in the Group and User Level Security Details pages) is enabled by default.
- All other security options are **disabled** by default.

Login Rules

There is no limit to the number of concurrent logins allowed for a single user. This allows for the creation of a single User that is provided to multiple ICSP devices (touch panels, for example) using the same login to obtain access to the Master. For example, if you had 50 devices connected to a Master, you would not have to create 50 individual user accounts—one for each device. Instead, you only need to create one which all 50 devices use for access.

The first layer of security for the Master is to prompt a user to enter a valid username and password before gaining access to a secured feature on the target Master.

Depending on the Security configuration, Users may be prompted to enter a valid username and password before gaining access to various features of the WebConsole. User access is specified by the administrator in the Group and User Level pages of the Security section.

NOTE: This username and password information is also used by both G4 touch panels (within the System Connection firmware page) and AMX software applications such as NetLinx Studio to communicate securely with a Master using encrypted communication.

User Name and Password Rules

- Case-sensitive
- Must be between 4 and 20 characters
- The following special characters are allowed for use in User Name and Password entries:

! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | } ~

Also allowed are any printable ASCII characters (including "space"): A-Z, a-z, 0-9.

System Security - System Level

The *System Level Security* options provide authorized users the ability to alter the current security options of the entire system assigned to the Master.

System Level Security - System Security Settings

Click the **System Security Settings** link to access the System Security Details page (FIG. 38). The options in this page allow you to establish whether the Master will require a valid username and password be entered prior to gaining access to the configuration options.

The screenshot displays the 'System Security Details' page in the AMX Master Configuration Manager. The page is titled 'System Security Details' and includes a sub-header 'Modify system security settings for the Master'. The interface is divided into several sections:

- Enabled:** A checkbox that is currently unchecked.
- Access:** A list of checkboxes for different access methods:
 - Terminal (RS232) Access
 - HTTP Access
 - Telnet/SSH/SFTP Access
 - Configuration
 - ICSP Connectivity
 - Encrypt ICSP Connection
- LDAP Enabled:** A checkbox that is currently unchecked.
- LDAP URI:** A text input field with a placeholder: [protocol]://[domain]:[po].
- LDAP BASE DN:** A text input field with a placeholder: [Search base DN(exam].
- BIND DN:** A text input field with a placeholder: [See AMX Master's Use].
- User Query Attr:** A text input field with a placeholder: Example: uid.
- Search Password:** A text input field with a masked password (*****).
- Admin groupOfNames cn:** A text input field with a placeholder: Example: master01Adm.
- User groupOfNames cn:** A text input field with a placeholder: Example: master01Use.

At the bottom of the form, there are three buttons: 'Test', 'Cancel', and 'Accept'.

FIG. 38 System Security Settings Page

These are global options that enable or disable the login requirement for both users and groups.

Access Options

Check the **Enabled** option on the left side of this page to make the **Access** options available for selection. The Access options are described in the following table:

(System Security) Access Options	
Option	Description
Enabled:	This option enables the Access options described below. <i>Note: If the Master Security check box is not enabled, all subordinate options are grayed-out and not selectable, meaning that the Master is completely unsecured and can be altered by any user (regardless of their rights).</i>
Terminal (RS232) Access:	If selected, a valid username and password is required for Terminal communication via the Master's RS232 Program port.
HTTP Access:	If selected, a valid username and password is required for communication over HTTP or HTTPS Ports, including accessing the WebConsole.
Telnet/SSH/SFTP Access:	If selected, a valid username and password is required for Telnet Access. Telnet access allows communication over either the Telnet and/or SSH Ports, and Secure FTP access. <i>Note: SSH version 2 (only) is supported.</i> To establish a secure Telnet connection, an administrator can decide to disable the Telnet Port and then enable the SSH Port. Refer to the <i>Port Settings</i> section on page 51 for details.
Configuration:	If selected, a valid username and password is required before allowing a group/user to alter the current Master's security and communication settings via NetLinx Studio. This includes such things as: IP configuration/Reset, URL list settings, Master communication settings, and security parameters.
ICSP Connectivity:	If selected, a valid username and password is required to communicate with the NetLinx Master via an ICSP connection (TCP/IP, UDP/IP, and RS-232). <ul style="list-style-type: none"> This feature allows communication amongst various AMX hardware and software components. This feature works in tandem with the <i>Require Encryption</i> option (see below) to require that any application or hardware communicating with the Master must provide a valid username and password. In a Master-to-Master system, the Master which accepts the IP connection initiates the authentication process. This configuration provides compatibility with existing implementations and provides more flexibility for the implementation of other devices. <i>Note: The ICSP Connectivity option is required to allow authenticated and/or secure communication between the Master and other AMX hardware/software. To establish an authenticated ICSP connection (where the external AMX hardware/software has to provide a valid username and password), this option must be enabled.</i>
Encrypt ICSP Connection:	If selected, this option requires that any data being transmitted or received via an ICSP connection (among the various AMX products) be encrypted, and that any application or hardware communicating with the Master over ICSP must provide a valid username and password. <i>Note: When enabled, this option requires more processor cycles to maintain.</i> ICSP uses a proprietary encryption based on RC4 and also requires CHAP-type authentication including username and password. CHAP (Challenge Handshake Authentication Protocol) authentication is an access control protocol for dialing into a network that provides a moderate degree of security. <ul style="list-style-type: none"> When the client logs onto the network, the network access server (NAS) sends the client a random value (the challenge). The client encrypts the random value with its password, which acts as an encryption key. It then sends the encrypted value to the NAS, which forwards it along with the challenge and username to the authentication server.
Encrypt ICSP Connection:	The CHAP server encrypts the challenge with the password stored in its database for the user and matches its results with the response from the client. If they match, it indicates the client has the correct password, but the password itself never left the client's machine.

LDAP Options

Check the **LDAP Enabled** option on the right side of this page to make the LDAP options available for selection.

- All parameters are case sensitive and must be entered exactly as they are entered into the LDAP database.
- LDAP Client Configuration can also be done via terminal commands to the NetLinx Master's Program Port - see the *Enabling LDAP via the Program Port* section on page 103 for details.
- Refer to <\$paratext> on page 108 for additional information on implementing LDAP on the NetLinx Master.

The LDAP options are described in the following table:

LDAP Options	
Option	Description
LDAP Enabled:	This parameter enables the LDAP configuration parameters described below.
LDAP URI:	This parameter has the syntax ldp[s]://hostname:port . <ul style="list-style-type: none"> • The ldap:// URL is used to connect to LDAP servers over unsecured connections. • The ldaps:// URL is used to connect to LDAP server over Secure Sockets Layer (SSL) connections. • The hostname parameter is the name or IP address, in dotted format, of the LDAP server (for example, <i>LDAPServer01</i> or <i>192.202.185.90</i>). • The port parameter is the port number of the LDAP server (for example, <i>696</i>). <i>Note: The standard unsecured port number is 389 and the standard secured port number is 636.</i>
LDAP BASE DN:	This parameter specifies the Distinguished Name (DN) of an entry in the directory. It identifies the entry that is the starting point of the user search.
BIND DN:	This parameter specifies the Distinguished Name (DN) to use to bind to the LDAP server for the initial search for the user's DN.
User Query Attr.	This LDAP attribute is used for the AMX equipment user search (for example, UID). <i>Note: This attribute MUST be unique in the context of the LDAP BASEDN or the search will fail.</i>
Search Password:	This is the password used for the initial bind to the LDAP server - it is the password associated with BIND DN.
Admin groupOfNames cn:	This parameter is the common name (cn) of the groupOfNames objectClass that contains the member DNs of the AMX equipment users that have administrator privileges.
User groupOfNames cn:	This parameter is the common name (cn) of the groupOfNames objectClass that contains the member DNs of the AMX equipment users that have only user privileges.

- When LDAP is enabled, users are authenticated using the configuration set up on the LDAP server.
- The "administrator" user is handled by the local NetLinx Master, and does not connect to the LDAP server for user verification.
- If an administrator password change is desired, LDAP must be disabled, the password changed and saved and then LDAP re-enabled.
- Users may not be added or deleted via the web pages when LDAP is enabled.
- AMX equipment users are set up on the LDAP server with either full access to the master or HTTP access only.
- User access privileges cannot be changed via the web pages.
- As users log onto a NetLinx Master, their username and access privileges are displayed on the User Security Details page (see *System Security - User Level* section on page 41). This information is stored in the master's RAM but is not written to non-volatile memory, and is lost after a reboot of the Master.
- If a user is removed from the LDAP directory tree, access is denied, and if that username is on the master's User Security Details web page it is removed.

Configuring ICSP Connectivity with LDAP Enabled

If ICSP connectivity security is desired, the username and password must be set up on the LDAP server and its DN added as a member to the administrator groupOfNames objectClass. This username and password must also be present on the master due to the authentication algorithms used for this type security. Before LDAP is enabled, a user account must be set up with the username, password and privileges matching the ones stored on the LDAP server.

- If there is a mismatch with the username or password, the AMX hardware or software component will not be allowed access.
- If there is a mismatch with the access privileges, the master will use the privileges value stored on the server.

Accepting Changes

Click the **Accept** button to save changes on this page. Accepting changes is instantaneous and does not require a reboot.

Testing the Connection to the LDAP Server

After entering and accepting the parameters, the **Test** button (see FIG. 38 on page 35) can be used to test the connection to the LDAP server. This test does a bind to the BIND DN using the Search Password entered.

- If the bind is successful, the message *Connection successful* is displayed.
- If the server could not be reached or the bind is unsuccessful, the message *Could not connect to server -- Please check LDAP URI, BIND DN and Search Password settings* is displayed.

NOTE: Refer to <\$paratext> on page 108 for additional information.

System Security - Group Level

NOTE: A Group represents a logical collection of individual users. Any properties possessed by a group are inherited by all members of that group.

Select the *Group Level* tab of the Security Page to access the **Group Security Details** page (FIG. 39).

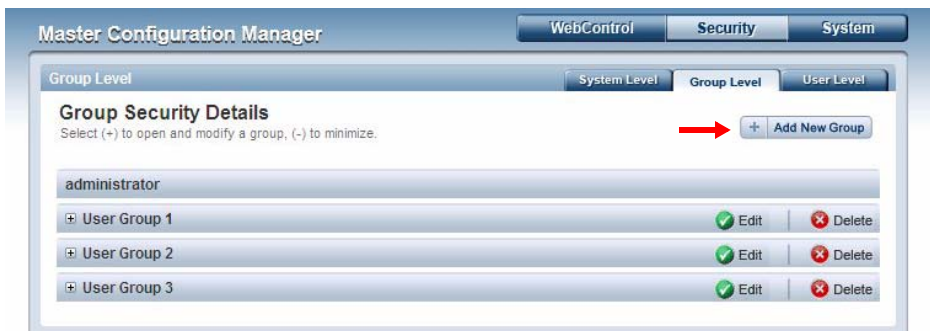


FIG. 39 Group Security Details page

The options in this page allow authorized users to assign and alter group properties such as creating, modifying, or deleting a group's rights, and also allows for the definition of the files/directories accessible by a particular group.

Adding a New Group

1. Select the **Group Level** tab (*in the Security section*) to open the Group Security Details page.
2. Click the **Add New Group** button (see FIG. 39) to access the **Add a group and modify settings** page (FIG. 40).



FIG. 40 Group Level Security Settings Page (Add a group and modify settings page)

3. In the **Group Name** field, enter a unique name for the new group.
 - The name must be a valid character string consisting of 4 - 20 alpha-numeric characters.
 - The string is case sensitive and must be unique.
 - The word "*administrator*" cannot be used for a new group name since it already exists by default.
4. Enable the security access rights you want to provide to the group. By default, all of these options are disabled. See the *Group and User Security Access Options* section on page 39 for details.
5. Click the **Accept** button to save your changes to the target Master.

If there are no errors within any of the page parameters, a "*Group added successfully*" is displayed at the top of the page.

NOTE: Security changes made from within the web browser are applied instantly, without the need to reboot.

Group and User Security Access Options

Group and User Security Access Options	
Option	Description
Admin Change Password Access:	This selection enables or disables the Administrator right to change Group and User passwords.
Terminal (RS232) Access:	If selected, a valid username and password is required for Terminal communication via the Master's RS232 Program port.
HTTP Access:	If selected, a valid username and password is required for communication over HTTP or HTTPS Ports, including accessing the WebConsole.
Telnet/SSH/SFTP Access:	If selected, a valid username and password is required for Telnet Access. Telnet access allows communication over either the Telnet and/or SSH Ports, and Secure FTP access. <i>Note: SSH version 2 (only) is supported.</i> To establish a secure Telnet connection, an administrator can decide to disable the Telnet Port and then enable the SSH Port. Refer to the <i>Manage System - Server Options</i> section on page 51.
Configuration:	If selected, a valid username and password is required before allowing a group/user to alter the current Master's security and communication settings via NetLinX Studio. This includes such things as: IP configuration/Reset, URL list settings, Master communication settings, and security parameters.
ICSP Connectivity:	If selected, a valid username and password is required to communicate with the NetLinX Master via an ICSP connection (TCP/IP, UDP/IP, and RS-232). <ul style="list-style-type: none"> This feature allows communication amongst various AMX hardware and software components. This feature works in tandem with the <i>Require Encryption</i> option (see below) to require that any application or hardware communicating with the Master must provide a valid username and password. In a Master-to-Master system, the Master which accepts the IP connection initiates the authentication process. This configuration provides compatibility with existing implementations and provides more flexibility for the implementation of other devices. <i>Note: The ICSP Connectivity option is required to allow authenticated and/or secure communication between the Master and other AMX hardware/software. To establish an authenticated ICSP connection (where the external AMX hardware/software has to provide a valid username and password), this option must be enabled.</i>
Encrypt ICSP Connection:	If selected, this option requires that any data being transmitted or received via an ICSP connection (among the various AMX products) be encrypted, and that any application or hardware communicating with the Master over ICSP must provide a valid username and password. <i>Note: When enabled, this option requires more processor cycles to maintain.</i>

Viewing Group Security Settings Details

Click on any Group listed in the *Group Security Details* page to expand the view to show details for the selected user Group (FIG. 41):



FIG. 41 Group Security Details Page

- Click the **Edit** button to edit the Security Access options for the selected user group.
- Click **Delete** to delete the selected User Group from the Master.

Modifying the Properties of an Existing Group

1. Select the **Group Level** tab (in the *Security* section) to open the Group Security Details page.
2. Click the **Edit** button to open the *Group Security Details* page for the selected group (FIG. 42).



FIG. 42 Group Security Details Page (Edit Group Security Details)

3. Modify the previously configured access rights by enabling / disabling the checkboxes. See the *Group and User Security Access Options* section on page 39 for details.
4. Click the **Accept** button to save your changes to the Master.
If there are no errors with the modification of any of this page's parameters, a "Group updated successfully" is displayed at the top of the page.

NOTE: The "administrator" group account cannot be modified or deleted.

Any properties possessed by groups (ex: access rights, update rights, directory associations, etc.) are inherited by users assigned to that particular group. Unchecking a security option (which is available within the associated group) does not remove that right from the user. The only way to remove a group's available security right from a target user is either to not associate a group to a user or to alter the security rights of the group being associated.

Deleting a Group

1. Select the **Group Level** tab (in the *Security* section) to open the *Group Security Details* page.
2. Press the **Delete** button to remove the selected group and refresh the page. The system will prompt you to verify this action - click **OK** to proceed.
 - If you are not logged into the Master, you receive a reminder message: "You must login before Security Settings can be changed". In this case, log into the Master and repeat the previous steps.
 - If the group is associated with several users, you might get an error while trying to delete the group. If this happens, change the group association of those specific users utilizing the old group and either give them a new group or assign them (none) as a group. When you return to delete the desired group, you receive a message saying "Group deleted successfully".
3. Click the **Accept** button to save your changes to the Master.

System Security - User Level

Select the *User Level* tab of the Security Page to access the **User Security Details** page (FIG. 43). The options on this page allow authorized users to add/delete User accounts and configure User's Access rights.

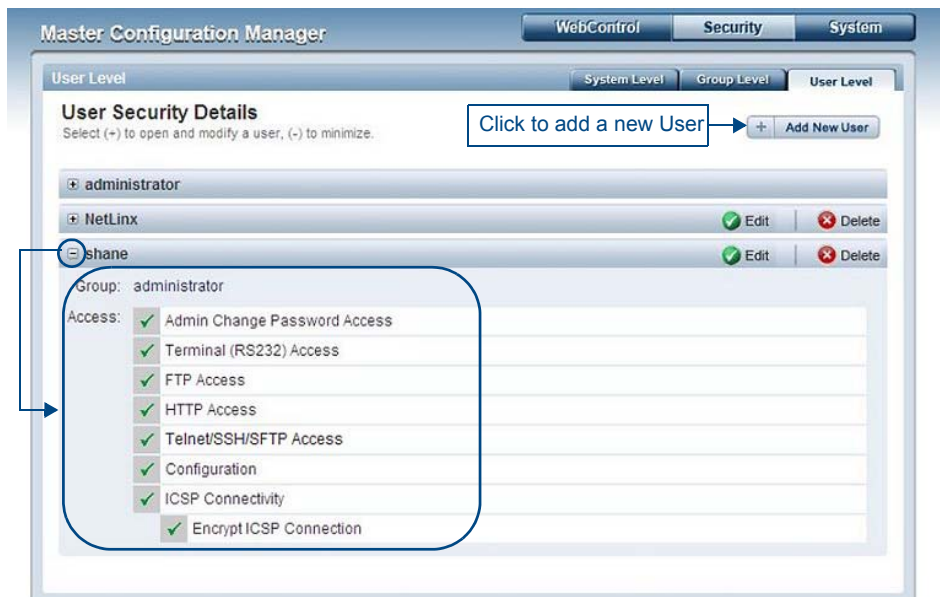


FIG. 43 User Security Settings Page

NOTE: A User represents a single client of the Master, while a Group represents a collection of Users. Any properties possessed by a Group are inherited by all of the Users in the group.

Adding a New User

1. Select the **User Level** tab (in the *Security* section) to open the User Security Details page.
2. Click the **Add New User** button (see FIG. 43) to access the Add/Modify User page (FIG. 44).

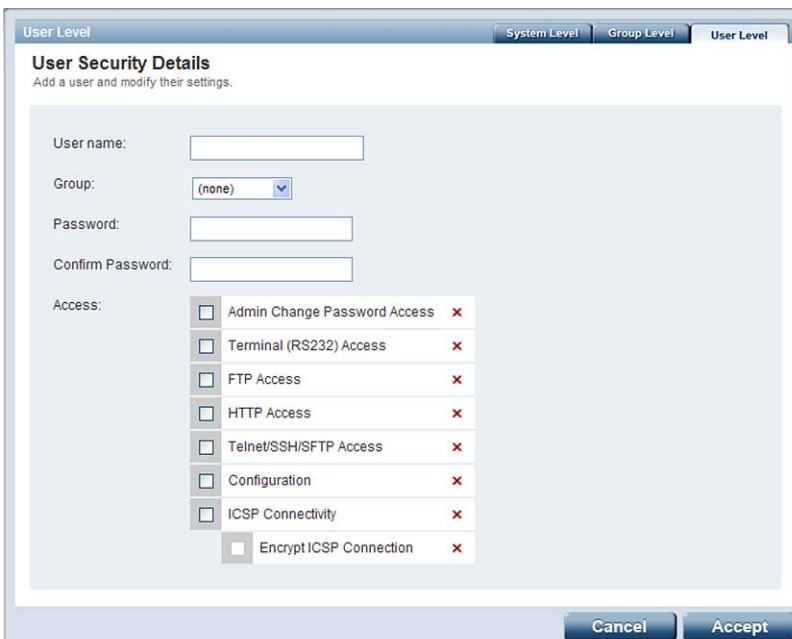


FIG. 44 User Security Settings Page (Add/Modify User page)

3. In the **User Name** field, enter a unique name for the new group.
 - The name must be a unique alpha-numeric character string (4 - 20 characters), and is case sensitive.
 - The words "administrator" and "NetLinx" cannot be used since they already exist by default.
4. In the **Group** drop-down list, choose from a list of pre-configured Groups and associate these rights to the new user.
5. Enter a user password in both the **Password** and **Password Confirm** fields.

The password must be a unique alpha-numeric character string (4 - 20 characters), and is case sensitive.

6. Enable the security access rights you want to provide to the user. See the *Group and User Security Access Options* section on page 39 for details.
7. Click the **Accept** button to save your changes to the Master.

NOTE: Any security changes made to the Master from within the web browser are instantly reflected within a Terminal session without the need to reboot.

Viewing and Editing User Security Settings

Click on any User listed in the *User Security Details* page to view and edit security settings for the selected User (FIG. 45):

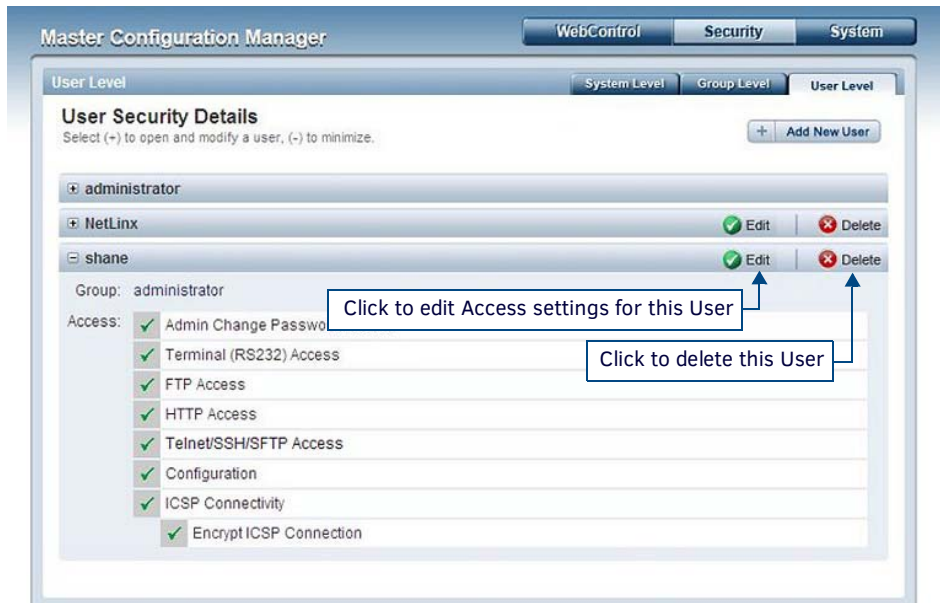


FIG. 45 User Level Security Settings Page (Viewing User Security Settings Details)

- Click the **Edit** button to edit the Security Access options for the selected User.
- Click **Delete** to delete the selected User from the Master.

Deleting a User

1. Select the **User Level** tab (in the *Security* section) to open the User Security Details page.
2. Press the **Delete** button to remove the selected User and refresh the page. The system will prompt you to verify this action - click **OK** to proceed.

If you are not logged into the Master, you receive a reminder message: "You must login before Security Settings can be changed". In this case, log into the Master and repeat the previous steps.

3. Reboot the Master via the **Reboot** button on the Manage System Page (select the **System** control button to access).

WebConsole - Web Control Options

Manage Web Control Connections

The Web Control page is accessed by clicking on the **Web Control** button (FIG. 46). This page allows you to view all touch panels running the G4 Web Control application. Each G4 Web Control-equipped touch panel connected to this Master is indicated by a link. Click on any of the links to open a new G4 Web Control window, displaying the selected panel, using the native resolution of the target panel. For example, a CA15 panel link opens a new G4 Web Control window at 800 x 600 resolution.



FIG. 46 Manage Web Control Connections page (populated with 1 compatible G4 touch panel)

To establish a secure connection between the touch panel and the target Master, the panel must be using a valid username and password (*that can be matched to a previously configured user on the target Master*) and the **ICSP Connectivity** option must be enabled within the System Level Security page.

Compression Options

The checkboxes at the bottom of this page allow you to choose from two compression options. Use compression to decrease response delay when viewing G4 Web Control windows over a bandwidth-restricted network, or over the Internet. By default, both compression options are disabled.

- **Use Compression** allows you to specify that the transmitted data packets be compressed. This speeds up the visual responses from the panel by minimizing the size of the information relayed through the web and onto the screen.
- **Use Low Color** allows you to specify the number of colors used to display the image from the panel be reduced. By reducing the numbers of colors, the size of the information is reduced and the response delay is decreased.

WebConsole - System Options

System Overview

The *Manage System* page is accessed by clicking on the **System** button. This page allows you to view and configure various aspects of the NetLinX System, separated by four tabs:

- **Manage System** - Options in this tab allow you to view/change the Master's *System Number*, Control/Emulate system devices, perform Diagnostics, configure Server settings and set the time/date via the Clock Manager. See the *System - Manage System* section on page 44 for details.
- **Manage License** - Options in this tab allow you to add device licenses (Product ID and License Key) to the Master. See the *System - Manage License* section on page 58 for details.
- **Manage NetLinX** - Options in this tab allow you to view a detailed list of NetLinX devices connected to the Master. See the *System - Manage NetLinX* section on page 60 for details.
- **Manage Devices** - Options in this tab allow you to view the details of additional attached devices (including module-supported third-party devices). See the *System - Manage Devices* section on page 61 for details.

The default view for the System option is Manage System / System Number (FIG. 47).

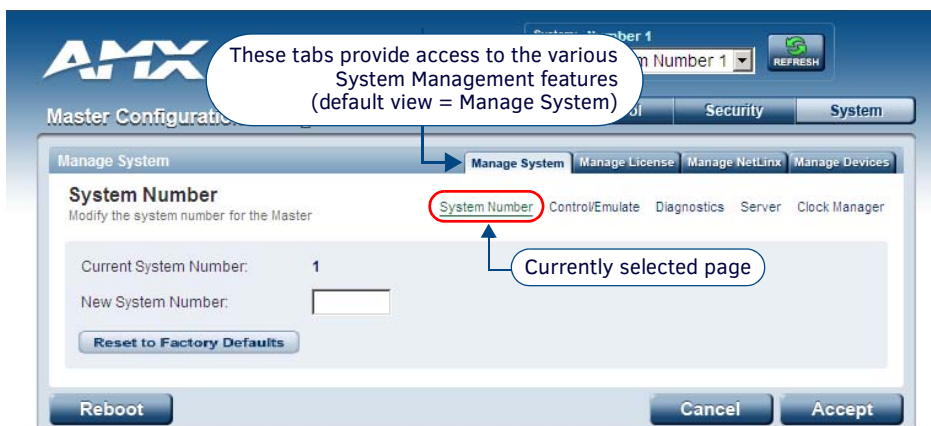


FIG. 47 Manage System (System Number)

System - Manage System

The **Manage System** tab contains links to several different System-related configuration pages, as described in the following subsections:

Manage System - System Number

The options on this page display the current System Number assigned to the target Master (read-only), and allow you to change the system number (see FIG. 47).

Changing the System Number On the Master

1. Enter the new numeric value into the **New System Number** field.
2. Click the **Accept** button to save this new value to the system on the target Master. The message; "*System number changed to X. Master must be rebooted for the change to take effect.*", reminds you that the Master must be rebooted before the new settings take effect.
3. Click **Reboot** to reboot the target Master. The Device Tree then reads "*Rebooting...*". After a few seconds, the Device Tree refreshes with the current system information (including the updated system number assignment). If the Device Tree does not refresh within a few minutes, press the **Refresh** button and reconnect to the Master.

Using Multiple NetLinX Masters

When using more than one Master, each unit must be assigned to a separate System value. A Master's System value can be changed but **it's device Address must always be set to zero (00000)**. The Device Addressing dialog will not allow you to alter the NetLinX Master address value.

Example: Using an NI-2100 and NI-4100:

- The NI-2100 could be assigned to **System 1** (with an Address of 00000).
- The NI-4100 could be assigned to **System 2** (with an Address of 00000).

Resetting the Master Controller to the Factory Defaults Configuration

Click the **Reset To Factory Defaults** button. This resets the Master to its' factory default state. This includes:

- Removal of all security settings
- Removal of all user files
- Resetting to DHCP
- Loading an empty NetLinX program.

Once reset, the Master will be effectively in an out-of-box state.

NOTE: *It may be necessary to refresh the browser window after the master has finished booting (click Refresh).*

Manage System - Control/Emulate Options

Click the **Control/Emulate** link (in the *Manage System* tab) to access the Control/Emulate Options page (FIG. 48). The options on this page allow you to *Control* or *Emulate* a device connected to this Master.

Device Control/Emulation is accomplished by manipulating a target device's channels, levels, and sending both send commands and strings to the device.

- To *Control* a device means that the program generates messages which appear to a specified device to have come from the Master.
- To *Emulate* a device means that the program generates messages which appear to the Master to have come from a specified device (physical or virtual). When *Emulate* is selected, a **Push** button is added to the Channel Code section (see FIG. 48).

FIG. 48 Manage System (Control/Emulate)

NOTE: *The System Number, Device Number, and Port Number fields are read-only. Instead of specifying these values for a System Device, select a device via the Device Tree to populate these fields with that device's information.*

Controlling or Emulating a System Device

1. Select the device that you want to Control or Emulate, via the Device Tree:
 - a. Click the **Show Device Tree** option to show the Device Tree window (if it is not already enabled).
 - b. In the Device Tree, click on the *Information (i)* icon for the device that you want to control or emulate. This opens a Network Settings page showing network configuration details for the selected device. See the *Device Network Settings Pages* section on page 33 for details.
 - c. Click on the *Control/Emulate* link. This opens a Control/Emulate Options page for the selected device (FIG. 49).



FIG. 49 Select Control/Emulate from within a selected Device's Network Settings page

2. Select either the **Control** or **Emulate** option.
3. In the *Channel Code* section, enter a valid Channel number to emulate Channel messages (i.e., Push/Release, CHON, and CHOFF) for the specified <D:P:S>.
 - The Channel number range is **1 - 65535**.
 - Select the **On** or **Off** buttons to Emulate Channel ON (CHON) and Channel OFF (CHOFF) messages for the specified <D:P:S>.
4. Select the **Push** button to Emulate a push/release on the specified channel (not displayed if the *Control* option is selected). Click and hold the **Push** button to observe how the device/Master responds to the push message.
5. In the *Level Code* section, enter a valid Level number and Level data value for the specified <D:P:S> and press the **Send** button to transmit the level data.
 - The *Level number* range is **1 - 65535**.
 - The table below lists the valid Level data types and their ranges:

Level Data Type	Minimum Value	Maximum Value
CHAR	0	255
INTEGER	0	65535
SINTEGER	-32768	32767
LONG	0	429497295
SLONG	-2147483648	2147483647
FLOAT	-3.402823466e+38	3.402823466e+38

6. In the *Command* and *String* fields, enter any character strings that can be sent as either a String or Command, and press **Send** to transmit to the Master.

- When entering a **Send Command**, do not include the "send c" or "SEND_COMMAND" in the statement - only type what would normally occur within the quotes (but don't include the quotes either).
For example to send the "CALIBRATE" send command, type **CALIBRATE** (no quotes) rather than SEND_COMMAND <dev> "CALIBRATE".
- **String Expressions** start and end with double quotes (" "). Double quotes are not escaped, rather they are embedded within single quotes. String expressions may contain string literals, decimal numbers, ASCII characters and hexadecimal numbers (pre-pended with a \$), and are comma-delimited.
- **String Literals** start and end with single quotes (' '). To escape a single quote, use three single quotes (''').

Manage System - Diagnostics Options

Click the **Diagnostics** link (in the *Manage System* tab) to access the Diagnostics Options page (FIG. 50). The options on this page allow authorized users to enable and monitor various diagnostic messages coming from and going to System Devices.

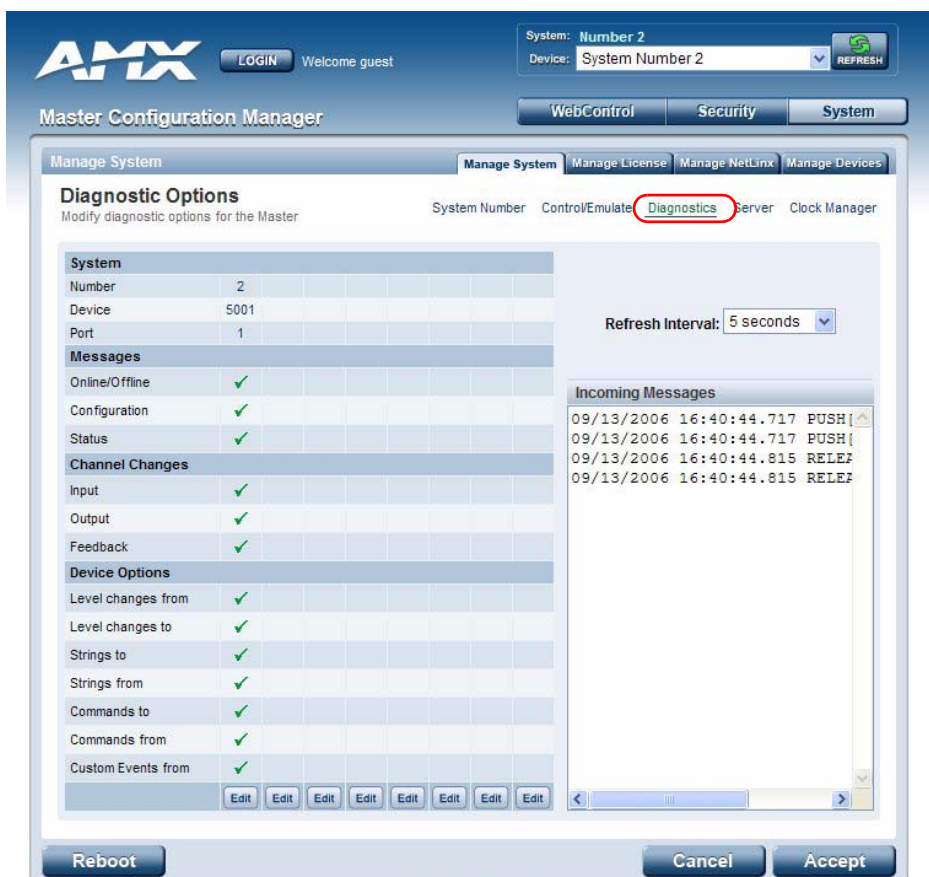


FIG. 50 Diagnostics Options Page (with diagnostic messages enabled)

NOTE: The System Number, Device Number, and Port Number value fields are read-only (disabled). Instead of specifying these values for a System Device, select a device via the Device Tree to populate these fields with that device's values, as described below.

Enabling Diagnostics On a Selected System Device

1. Select the device that you want to Control or Emulate, via the Device Tree:
 - a. Click the **Show Device Tree** option to show the Device Tree window (if it is not already enabled).
 - b. In the Device Tree, click on the Information (i) icon for the device for which you want to enable or modify Diagnostics options. This opens a Network Settings page showing detailed information on the selected device (including network configuration details). An example Network Settings page is shown in FIG. 51:
 - c. Click on the **Diagnostics** link. This opens a Diagnostics Options page for the selected device (FIG. 51).

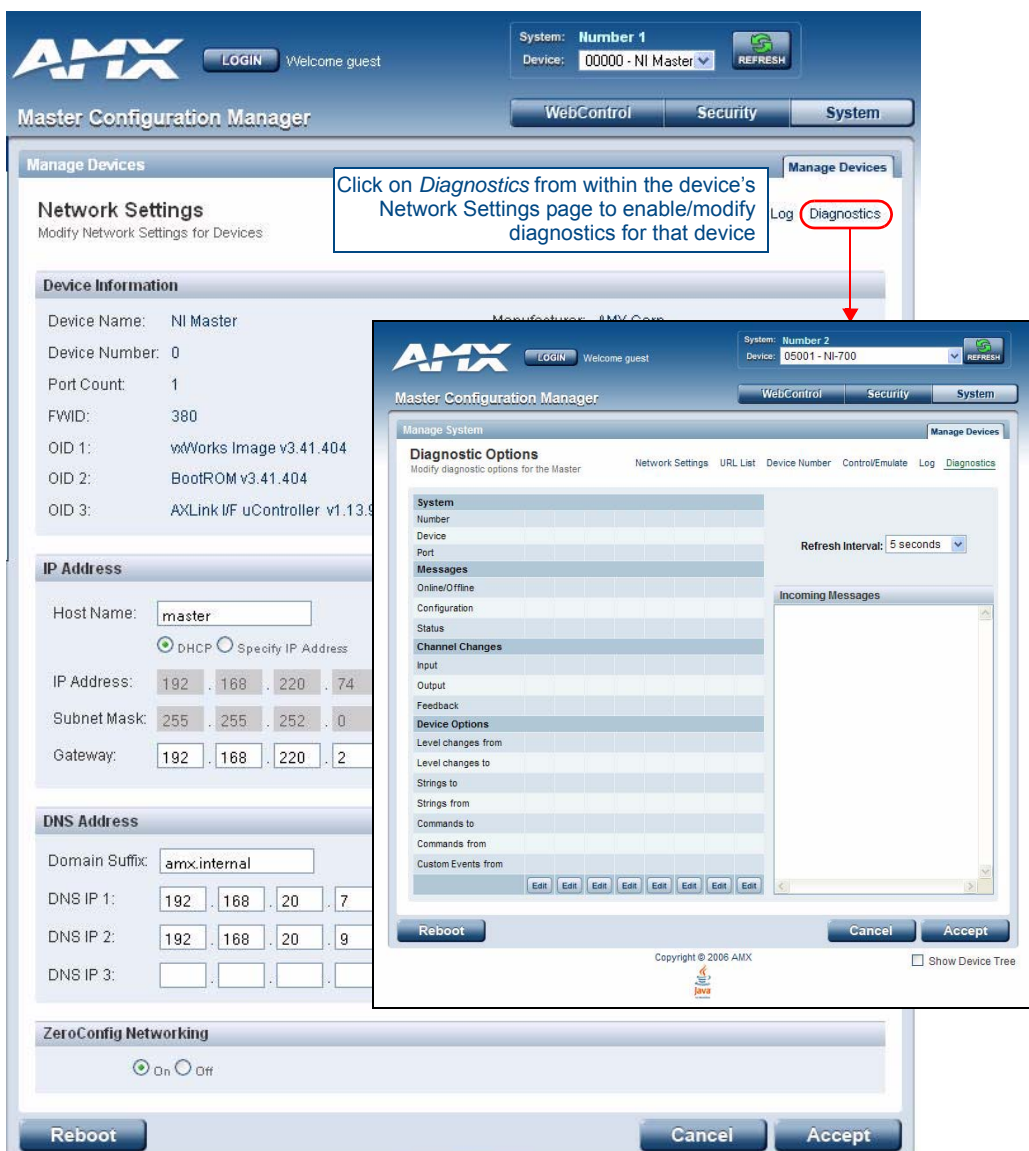


FIG. 51 Select Diagnostics from within a selected Device's Network Settings page

NOTE: The currently selected device is also indicated in the Device field at the top of the page.

2. By default, all diagnostics are disabled (see FIG. 51). To enable diagnostic messages from this device, click on one of the **Edit** buttons along the bottom of the Diagnostics Options table.

This opens the Edit Options window (FIG. 52), where you can select which Diagnostics messages to enable or disable for this device.

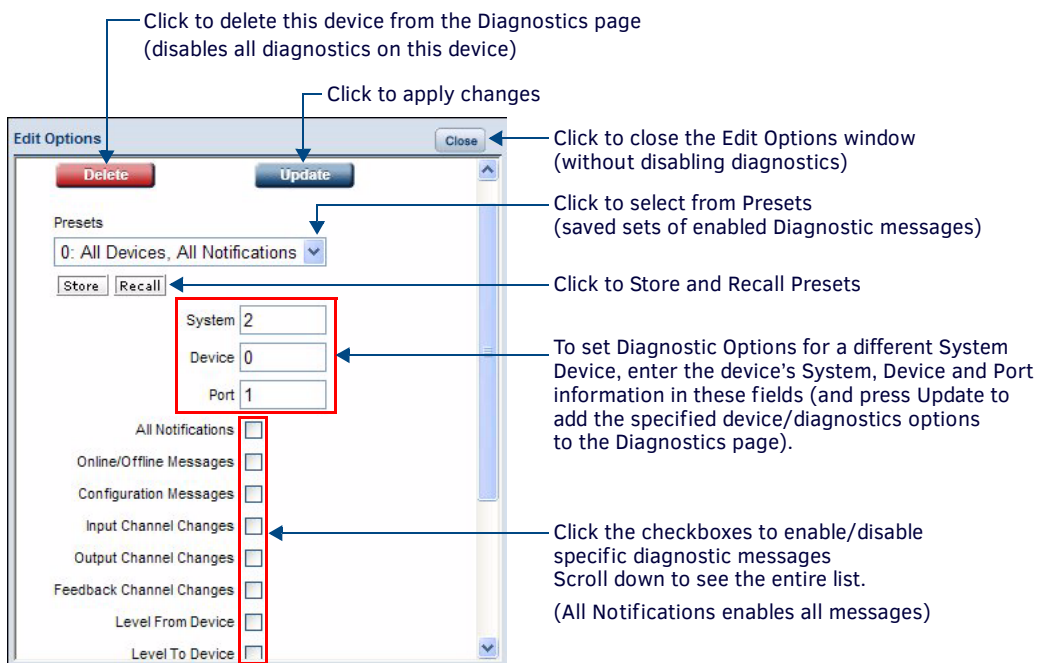


FIG. 52 Edit Options window

Once you have selected the diagnostics messages to enable, click **Update** to apply your changes, close the Edit Options window, and return to the Diagnostics page.

Refer to the *Diagnostics Options Definitions* section on page 50 for definitions of each Diagnostic option.

- The device that you just enabled diagnostics for appears in the Diagnostics Options page (identified by its Number, Device and Port assignments at the top of the Diagnostics Option list), with the currently enabled diagnostics indicated with a green checkmark (FIG. 53).

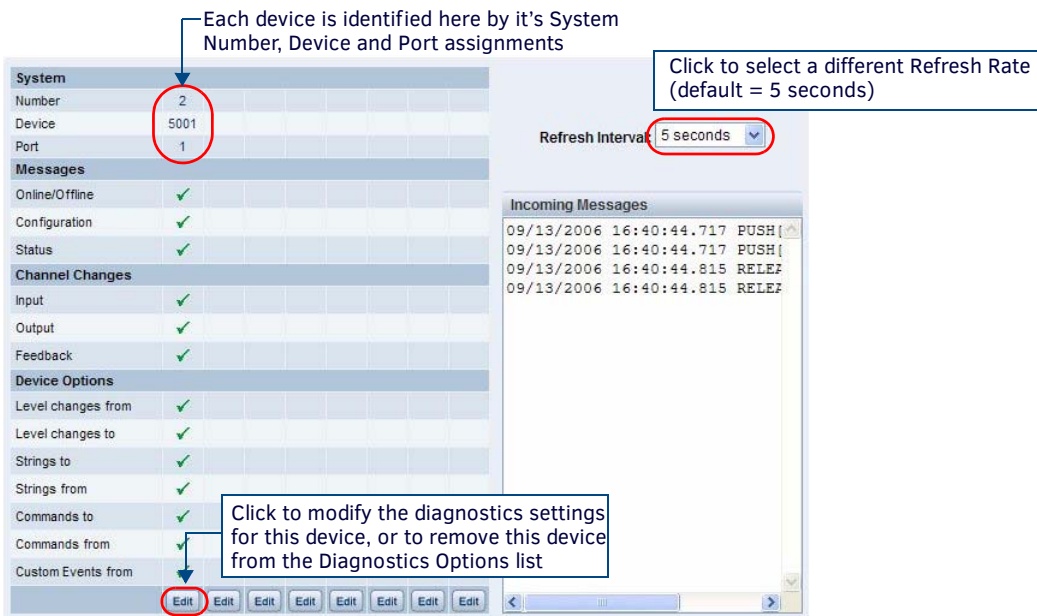


FIG. 53 Edit Options window

All returned messages are displayed in the Incoming Messages window. By default, all messages are refreshed every 5 seconds, as indicated by the **Refresh Interval** field. Use the Refresh Interval drop-down to specify how often your messages are updated (available values = 2 seconds, 5 seconds, or 10 seconds). The default setting is 5 seconds.

- To add more devices to the Diagnostics Options page:
 - Repeat steps 1-3.
 - Alternatively, you can click one of the **Edit** buttons to open the Edit Options window, and specify a System *Number*, *Device* and *Port* for a known System Device. Select the Diagnostics messages that you want to enable for this device and click **Update**.

The device will appear in the Diagnostics Options window, in the next available column (to the right of the last device added - see FIG. 54).

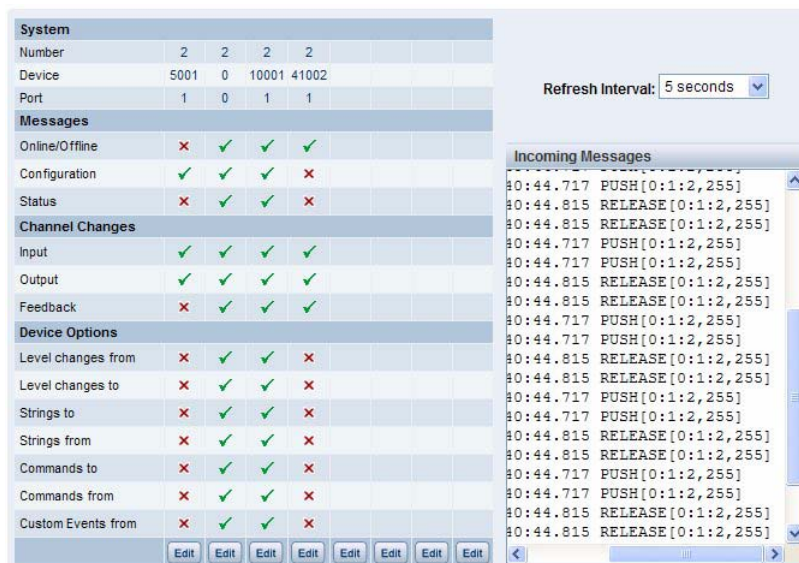


FIG. 54 Edit Options window indicating four devices with Diagnostics enabled

NOTE: You can monitor diagnostics for up to eight System Devices in this page.

Diagnostics Options Definitions

The following table describes each of diagnostics options that can be enabled via the Edit Options window:

Diagnostic Options	
Diagnostic Option	Description
All Notifications:	Enables every notification field.
System	
• Number	Use these fields to enter a Device:Port:System (D:P:S) combination for the device for which you want to enable notifications. A value of 0 for any option gives you all of the systems, devices, or ports. This dialog also allows you to store/recall presets.
• Device	
• Port:	
Messages	
• Online/Offline	Generates a message when there is a change in the target device's online/offline status.
• Configuration	Generates a message when there is a change in the target device's configuration.
• Status	Generates a message when there is a change in the target device's status.
Channel Changes	
• Input	Generates a message when there is an input channel change (i.e. Push/Release) in the target device.
• Output	Generates a message when there is an output channel change (i.e. CHON/CHOFF) in the target device.
• Feedback	Generates a message when there is a feedback channel change in the target device.
Device Options	
• Level Changes From	Generates a message when there is a level channel change from the target device.
• Level Changes To	Generates a message when there is a level channel change to the target device.
• Strings To	Generates a message when there is a string sent to the target device.
• Strings From	Generates a message when there is a string from the target device.
• Commands To	Generates a message when there is a command to the target device.
• Commands From	Generates a message when there is a command from the target device.
• Custom Events From	Generates a message there is a custom event occurring from the target device.

Disabling all Diagnostic Options For a Device

There are two ways to disable all diagnostics for a device:

- In the Edit Options window, select **Delete** to remove the device from the Diagnostics Options page and disable all diagnostics.
- In the Edit Options window, deselect all selected diagnostics options and click **Update**. This disables all diagnostics for this device, but leaves the device on the Diagnostics Options page.

Creating and Recalling Diagnostics Presets

The **Store** and **Recall** options in the Edit Options window allow you to save and recall preset diagnostics configurations.

NOTE: Presets are saved via cookies, so they do not persist across multiple browsers/computers.

1. Click the **Presets** down arrow to open a list of previously stored Presets. By default, the only preset is called **0: All Devices, All Notifications**. This default Preset cannot be modified.
2. Select an empty Preset (for example **1**.)
3. Select the desired diagnostic options, and click **Store**.
4. A popup window prompts you to name this Preset. Enter a name and click **OK**.

To recall an existing Preset, select it from the drop-down list and click on **Recall**.

NOTE: A Preset **MUST** be Recalled before clicking the Update button. If you do not press this button, none of the fields or checkboxes are modified or selected. In essence, all options become disabled.

Manage System - Server Options

Click the **Server** link (in the *Manage System* tab) to access the Server Options page (FIG. 55). The options on this page allow you to:

- Change the port numbers (used by the Master for various Web services)
- Configure the SSL settings used on the Master
- Manage existing and pending license keys, manage the active NetLinx system communication parameters
- Configure/modify the SSL certificates on the target Master

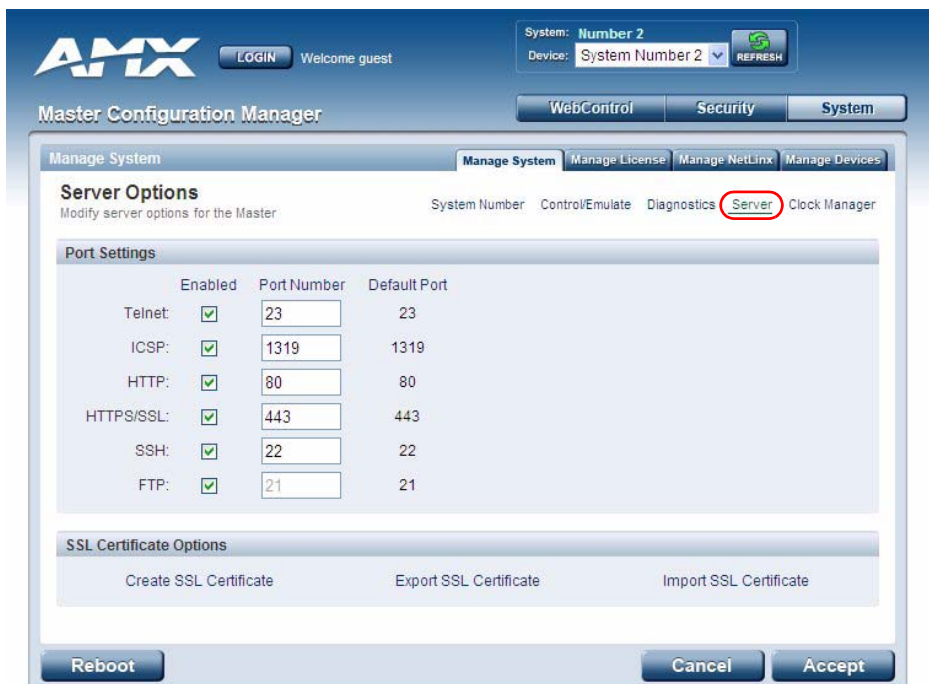


FIG. 55 Server Options page

The options on this page are described below:

Port Settings

Allows a user to modify the server settings; specifically those port assignments associated with individual services.

- All items can be either enabled/disabled via the **Enabled** checkboxes.
- The port number values (except the FTP port) can be modified in this page.
- The default port for each service is listed to the right.

Server Port Settings

The following table describes each of the Port Settings presented on this page:

Server Port Settings	
Feature	Description
Telnet:	<p>The port value used for Telnet communication to the target Master. Enabling this feature allows future communication with the Master via a separate Telnet application (such as HyperTerminal).</p> <ul style="list-style-type: none"> • The default port value is 23. • Refer to the <i>NetLinx Security with a Terminal Connection</i> section for more information on the related procedures.

Server Port Settings (Cont.)	
Feature	Description
ICSP:	<p>The port value used for ICSP data communication among the different AMX software and hardware products. This type of communication is used by the various AMX product for communication amongst themselves. Some examples would be: NetLinx Studio communicating with a Master (for firmware or file information updates) and TPDesign4 communicating with a touch panel (for panel page and firmware updates).</p> <ul style="list-style-type: none"> The default port value is 1319. <p><i>Note: To further ensure a secure connection within this type of communication, a user can enable the Require Encryption option which requires additional processor cycles. Enabling of the encryption feature is determined by the user.</i></p>
HTTP:	<p>The port value used for unsecure HTTP Internet communication between the web browser's UI and the target Master. By disabling this port, the administrator (or other authorized user) can require that any consecutive sessions between the UI and the target Master are done over a more secure HTTPS connection.</p> <p>By default, the Master does not have security enabled and must be communicated with using http:// in the <i>Address</i> field.</p> <ul style="list-style-type: none"> The default port value is 80. <p><i>Note: One method of adding security to HTTP communication is to change the Port value. If the port value is changed, any consecutive session to the target Master has to add the port value at the end of the address (within the Address field). An example is if the port were changed to 99, the new address information would be: http://192.192.192.192:99.</i></p>
HTTPS/SSL:	<p>The port value used by web browser to securely communicate between the web server UI and the target Master. This port is also used to simultaneously encrypt this data using the SSL certificate information on the Master as a key.</p> <p>This port is used not only used to communicate securely between the browser (using the web server UI) and the Master using HTTPS but also provide a port for use by the SSL encryption key (embedded into the certificate). Whereas SSL creates a secure connection between a client and a server, over which any amount of data can be sent securely, HTTPS is designed to transmit individual messages securely. Therefore both HTTPS and SSL can be seen as complementary and are configured to communicate over the same port on the Master. These two methods of security and encryption are occurring simultaneously over this port as data is being transferred.</p> <ul style="list-style-type: none"> The default port value is 443. <p><i>Note: Another method of adding security to HTTPS communication would be to change the port value. If the port value is changed, any consecutive session to the target Master has to add the port value at the end of the address (within the Address field). An example is if the port were changed to 99, the new address information would be: http://192.192.192.192:99.</i></p>
SSH:	<ul style="list-style-type: none"> The port value used for secure Telnet communication. A separate secure SSH Client would handle communication over this port. When using a secure SSH login, the entire login session (including the transmission of passwords) is encrypted; therefore it is secure method of preventing an external user from collecting passwords. SSH version 2 is supported. The default port value is 22. <p><i>Note: If this port's value is changed, make sure to use it within the Address field of the SSH Client application.</i></p>
FTP:	<p>The default port value used for FTP communication = 21.</p> <p><i>Note: This port can be disabled/enabled but the value can not be changed.</i></p>

Once any of the server port settings have been modified, press the **Accept** button to save these changes to the Master. Once these changes are saved, the following message appears: *"Unit must be rebooted for the change to take effect"*. Click the **Reboot** button (from the top of the page) to remotely reboot the target Master. No dialog appears while using this button. The Device Tree then reads *"Rebooting...."*. After a few seconds, the Device Tree refreshes with the current system information (indicating updated port numbers).

NOTE: *If the Device Tree contents do not refresh within a few minutes, press the browser's Refresh button and reconnect to the Master.*

SSL Certificate Options

There are three SSL Certificate options, presented as links along the bottom of this page:

SSL Certificate Options	
Create SSL Certificate:	<p>Opens the Create SSL Certificate window where you can create a self-generated SSL certificate.</p> <p><i>Note: A self-generated certificate has lower security than an external CA (officially issued) generated certificate.</i></p>
Export SSL Certificate Request:	<p>Takes the user to the Server Certificate page where they can view a previously created certificate. An authorized user can also copy the raw text from a generated Certificate request into their clipboard and then send it to the CA.</p>
Import SSL Certificate:	<p>Takes the user to the Import Certificate page where they can import and paste the raw text from a CA issued Certificate.</p>

Creating an SSL Server Certificate

Initially, a NetLinx Master is not equipped with any installed certificates. In order to prepare a Master for later use with "CA" (officially issued) server certificates, it is necessary to:

- **First create a self-generated certificate** which is automatically installed onto the Master.
- **Secondly, enable the SSL feature** from the Enable Security page. Enabling SSL security after the certificate has been self-generated insures that the target Master is utilizing a secure connection during the process of importing a CA server certificate over the web.

NOTE: A certificate consists of two different Keys: The Master Key is generated by the Master and is incorporated into the text string sent to the CA during a certificate request. It is unique to a particular request made on a specific Master. Note that regenerating a previously requested and installed certificate invalidates that certificate because the Master Key has been changed. The Public Key is part of the text string that is returned from the CA as part of an approved SSL Server Certificate. This public key is based off the submitted Master key from the original request.

1. Click the **Create SSL Certificate** link (under *SSL Certificate Options*) to access the *Create SSL Certificate* window (FIG. 56).

FIG. 56 Create SSL Certificate window

2. Fill out the information in this window, according to the descriptions in the *SSL Certificate Entries* section below.
3. Click **Create SSL Certificate** to update the Master with the information entered on this page. This process can take several minutes.

SSL Certificate Entries

The following table describes the SSL Certificate entries presented in the *Create SSL Certificate* window (FIG. 56):

SSL Certificate Entries	
Entry	Description
Bit Length:	Provides a drop-down selection with three public key lengths (512, 1024, 2048). <ul style="list-style-type: none"> • A longer key length results in more secure certificates. • Longer key lengths result in increased certificate processing times.
Common Name:	The Common Name of the certificate must match the URL Domain Name used for the Master. Example: If the address used is www.amxuser.com, that must be the Common name and format used. <ul style="list-style-type: none"> • The Common Name can not be an IP Address. • If the server is internal, the Common Name must be <i>Netbios</i>. • For every website using SSL that has a distinct DNS name, there must be a certificate installed. Each website for SSL must also have a distinct IP Address. • This domain name must be associated to a resolvable URL Address when creating a request for a purchased certificate. • The address does not need to be resolvable when obtaining a free certificate.
Action:	Provides a drop-down selection with a listing of certificate actions: <ul style="list-style-type: none"> • Display Certificate - Populates the Server Certificate fields with the information from the certificate currently installed on the Master. <i>This action is used only to display the information contained in the certificate on the target Master.</i> • Create Request - Takes the information entered into these fields and formats the certificate so it can be exported to the external Certificate Authority (CA) for later receipt of an SSL Certificate. <i>This action is used to request a certificate from an external source.</i> • Self Generate Certificate - Takes the information entered into the previous fields and generates its own SSL Certificate. <i>This action is used when no previous certificate has been installed on the target Master, or a self-signed certificate is desired.</i> • Regenerate Certificate - Takes the information entered into the previous fields and regenerates an SSL Certificate. This action changes the Master Key. <i>This method of certificate generation is used to modify or recreate a previously existing certificate already on the Master.</i>
Organization Name:	Name of your business or organization. This is an alpha-numeric string (1 - 50 characters in length).
Organization Unit:	Name of the department using the certificate. This is an alpha-numeric string (1 - 50 characters in length).
City/Location:	Name of the city where the certificate is used. This is an alpha-numeric string (1 - 50 characters in length).

SSL Certificate Entries (Cont.)	
Entry	Description
State/Province:	Name of the state or province where the certificate is used (alpha-numeric string, 1 - 50 characters in length). <i>Note: The state/province name must be fully spelled out.</i>
Country Name:	Provides a drop-down selection with a listing of currently selectable countries.

Displaying SSL Server Certificate Information

Click the *Create SSL Certificate* link in the Server Options page to open the Create SSL Certificate window.

- By default, the *Display Certificate Action* is selected and the fields in this window are populated with information from the certificate installed on the Master.
- If the Master does not have a previously installed certificate, these fields are blank.

Creating a Request for an SSL Certificate

1. Click the *Create SSL Certificate* link in the Server Options page to open the *Create SSL Certificate* window.
2. Fill out the fields, according to the descriptions in the *SSL Certificate Entries* section on page 53.
3. Click the down arrow next to the *Action* field, and choose **Create Request** from the drop-down list.
4. Click the **Create SSL Certificate** button to accept the information entered into the above fields and generate a certificate file. Click **Close** to exit without making changes to the Master. This refreshes the Server Certificate page, and if the certificate request was successful, displays a "*Certified request generated*" message.

Self-Generating an SSL Certificate

1. Click the *Create SSL Certificate* link in the Server Options page to open the Create SSL Certificate window.
2. Fill out the fields, according to the descriptions in the *SSL Certificate Entries* section on page 53.
3. Click the down arrow next to *Action* and choose **Self Generate Certificate**.
When this request is submitted, the certificate is generated and installed into the Master in one step.
4. Click **Create SSL Certificate** to save the new encrypted certificate information to the Master. Click **Close** to exit without making changes to the Master.

Regenerating an SSL Server Certificate Request

This action allows you to is used to modify or recreate a certificate already on the Master. For example, if the company has moved from Dallas to Houston, all of the information is reentered exactly except for the City.

1. Click the **Create SSL Certificate** link in the *Server Options* page to open the *Create SSL Certificate* window.
2. Modify the certificate information as needed (see the *SSL Certificate Entries* section on page 53).
3. Click the down arrow next to *Action* and choose **Regenerate Certificate**.
4. Click **Create SSL Certificate** to save the newly modified certificate information to the Master. Click **Close** to exit without making changes to the Master.

NOTE: *Only use the Regenerate Certificate option when you have self-generated your own certificate. Do not regenerate an external CA-generated certificate.*

Exporting an SSL Certificate Request

1. First follow the procedures outlined in the *Creating a Request for an SSL Certificate* section on page 54 to create a session-specific Master certificate.
2. Click the **Export SSL Certificate** link to display the certificate text file in the Export SSL Certificate window (FIG. 57).

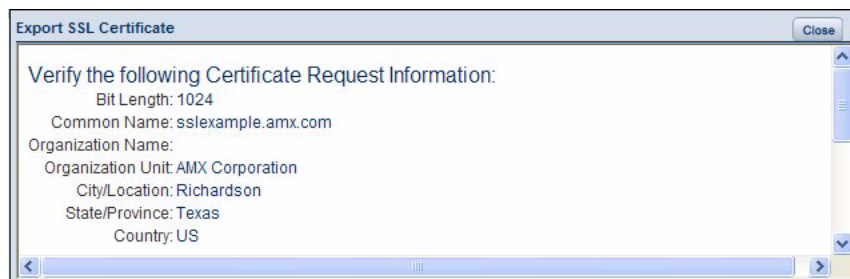


FIG. 57 Export SSL Certificate window

3. Place your cursor within the certificate text field.
The certificate text begins with the line that reads "-----BEGIN CERTIFICATE REQUEST-----" (scroll down to view the certificate text.)
4. Select all (**Ctrl + A**) of the certificate text.
You must copy all of the text within this field, including the -----BEGIN CERTIFICATE REQUEST----- and the -----END CERTIFICATE REQUEST----- portions.
Without this text included in the CA submission, you will not receive a CA-approved certificate.

5. Copy (**Ctrl + C**) the text to the clipboard.
6. Paste (**Ctrl + V**) this text into the *Submit Request* field on the CA's Retrieve Certificate web page.
7. Choose to view the certificate response in raw DER format.
Note the **Authorization Code** and **Reference Number** (for use in the e-mail submission of the request).
8. Submit the request.
9. Paste the copied text into your e-mail document and send it to the CA with its accompanying certificate application.

NOTE: *When a certificate request is generated, you are creating a private key on the Master. You can not request another certificate until the previous request has been fulfilled. Doing so voids any information received from the previously requested certificate and it becomes nonfunctional if you try to use it.*

Once you have received the returned CA certificate, follow the procedures outlined in the following section to import the returned certificate (*over a secure connection*) to the target Master.

Importing an SSL Certificate

Click the **Import SSL Certificate** link to import a CA server certificate. Before importing an SSL Certificate you must:

- **First**, have a self-generated certificate installed onto your target Master.
 - **Second**, enable the *HTTPS/SSL* feature from the Server Options page (FIG. 55), to establish a secure connection to the Master prior to importing the encrypted CA certificate.
1. Copy the returned certificate (signed by the CA) to your clipboard.
 2. Click the *Import SSL Certificate* link to open the Import SSL Certificate window (FIG. 58).



FIG. 58 Import SSL Certificate window

3. Place the cursor inside the text box and paste the returned certificate text, in its entirety.
4. Click **Import SSL Certificate** to save the new certificate information to the Master.
NOTE: *Once a certificate has been received from an external CA and installed on a Master, do not regenerate the certificate or alter its properties. Regenerating a previously installed certificate, invalidates the certificate.*
5. Click the **Display Certificate** link to confirm the new certificate was imported properly to the target Master.
NOTE: *A CA certificate can only be imported to a target Master only after both a self-generated certificate has been created and the SSL Enable feature has been selected on the Master. These actions configure the Master the secure communication necessary during the importing of the CA certificate.*

Manage System - Clock Manager Options

Click the **Clock Manager** link (in the *Manage System* tab) to access the *Clock Manager Options* page (FIG. 59). The options on this page allow you to enable/disable using a network time source and provide access to Daylight Saving configuration and which NIST servers to use as a reference.

FIG. 59 Clock Manager Options - Mode Settings tab

The Clock Manager Options are separated into three tabs:

- **Mode Settings** - The Mode Manager in this tab allows you to set the Clock Manager Mode (Network Time or Stand Alone).
- **Daylight Savings** - The Daylight Savings Manager in this tab allows you to specify how and when to implement Daylight Savings rules on the clock.
- **NIST Servers** - The NIST Server Manager in this tab allows you to connect to a specific NIST (Internet Time Service) Server.

Setting the Mode for the Clock Manager

1. In the *Mode Settings* tab (FIG. 59), select a **Time Synchron** option.
 - **Network Time**: This option allows the Master to manage its clock by connecting to a NIST (Internet Time Service) Server. When this option is selected, the Master will connect to the default NIST Server to get date and time information. You can select a different NIST Server (or specify the IP Address of a known NIST Server) in the *NIST Servers* tab (see the *Selecting a Custom NIST Server* section on page 57).
 - **Stand Alone**: This option lets the Master use its own internal clock. When this option is selected, two additional fields are available on this tab:
 - **Date** - Enter the current date in these fields (mm/dd/yyyy).
 - **Time** - Enter the current time in these fields (hh/mm/ss).
2. Click **Accept** to save these settings to the Master.

Setting Daylight Savings Rules

1. In the *Daylight Savings* tab (FIG. 60), enable Daylight Savings mode by clicking the **On** button.

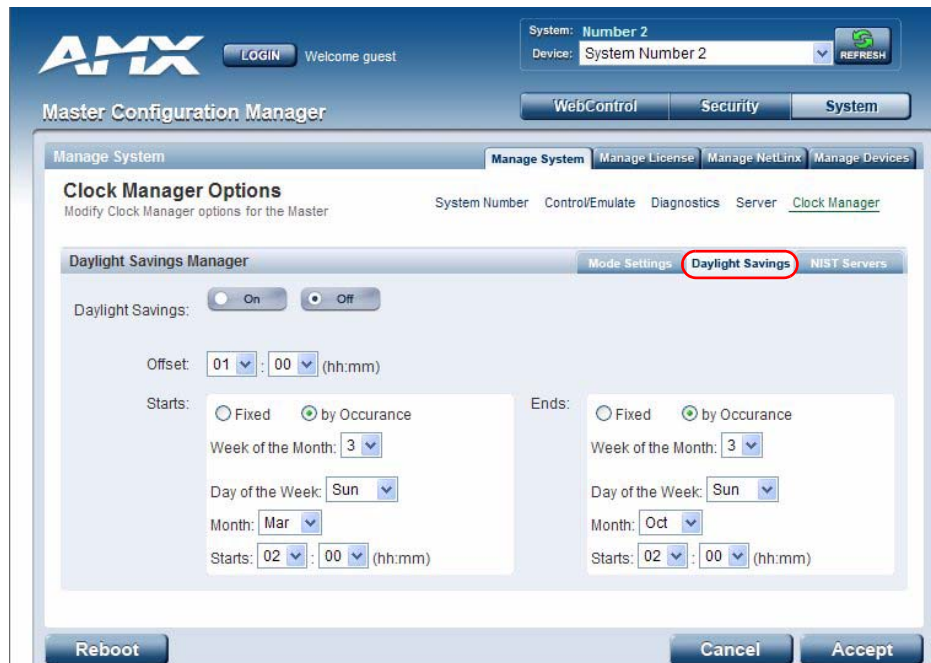


FIG. 60 Clock Manager Options - Daylight Savings tab

2. Use the **Offset** drop-down menus to adjust the amount of time (hours and minutes) to offset Daylight Savings. By default, the offset is set to 1 hour.

NOTE: Although most places that support Daylight Savings usually adjust the local time by one hour this doesn't cover all locations. To provide flexibility for such locations it is possible to configure a different daylight savings time offset.

3. Use the **Starts** fields to specify when Daylight Savings should start. The Starts rules include:
 - Select **Fixed** to specify the calendar date when the rule applies as a specific date ("March 21"). When *Fixed* is selected, use the **Day**, **Month** and **Starts** fields to specify the date and time (hh:mm) to start Daylight Savings time.
 - Select **by Occurrence** to specify the calendar date when the rule applies as a heuristic, ("the 3rd Sunday in March"). When *by Occurrence* is selected, use the **Week of the Month**, **Day of the Week**, **Month** and **Starts** fields to specify the occurrence to start Daylight Savings time. The range is 1 through *Last*, where **Last** indicates the last occurrence of a particular day of the month. This is to accommodate months that include four weeks as well as those that include five.
4. Use the **Ends** fields to specify when Daylight Savings should end. The Ends rules match the Start rules, and follow the same logic. Select **Fixed** or **by Occurrence**, and specify the End date/time information accordingly.
5. Click **Accept** to save these settings to the Master.

Selecting a Custom NIST Server

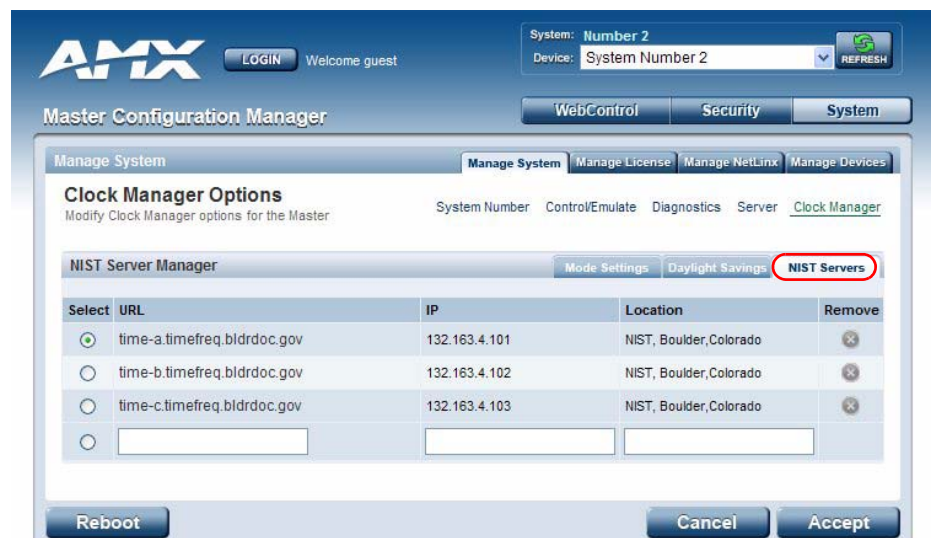


FIG. 61 Clock Manager Options - NIST Servers tab

1. In the *NIST Servers* tab (FIG. 61), use the radio buttons to select one of the NIST Servers in the list.
2. Click **Accept** to save these settings to the Master.

Adding a Custom NIST Server To the List

1. Click on the radio button next to the last (blank) entry in the *NIST Server Manager* list.
2. In the **URL** field, enter the URL of the NIST Server. The URL is used only to help you manage entries, and is not verified or used internally by the clock manager.
3. Enter the NIST Server's IP Address in the **IP** field. This is used internally and must be a valid IP address.

NOTE: The strings entered into the *URL* and *Location* fields are not used to connect to NIST Servers. The *IP Address* (entered into the *IP* field) specifies the NIST Server(s) that will be used. As stated above, the address entered into the *IP* field must be a valid IP address (not a URL).

4. Enter the NIST Server's location in the **Location** field. This is used only to help the user manage entries and it is not verified or used internally by the clock manager.
5. Click **Accept** to save these settings to the Master.

Removing an NIST Server From the List

1. Click on the **Remove** (x) button to the right of a *user-added* NIST Server in the *NIST Server Manager* list.
2. Click **Accept** to save these settings to the Master.

NOTE: The built-in entries cannot be removed.

Clock Manager NetLinx Programming API

Refer to *Appendix C: Clock Manager NetLinx Programming API* section on page 145 for a listing and description of the Types/Constants and Library Calls that are included in the NetLinx.AXI to support Clock Manager functions.

System - Manage License

The **Manage License** tab displays current as well as pending license keys (FIG. 62).



FIG. 62 System - Manage License tab (with one example entry)

The **Add New License** button allows for the addition of new license keys associated with currently used modules/products. Adding new License Keys requires the entry of both a Product ID and a Serial Key (example: *i/-Voting*). The Master confirms this registration information before running the module or product.

Adding A New License

1. Click the **Add New License** button to access the *Add a License* page (FIG. 63).

FIG. 63 Manage License - Add a License page

2. Enter the Product ID (certificate number) provided with the product into the **Product ID** fields. Contact the AMX Sales department with both the product serial number (or certificate number) and the serial number of target Master to register your product and in turn receive the necessary Key information (typically 32 to 36 digits in length) which is then entered into the Key fields on this page.
3. Enter the Product Key into the **Key** fields. The Product Key is Master-specific and is typically provided by AMX upon registration.
Example: *AMX Meeting Manager* and *!-Voting* applications are examples of products that require both a Product serial number and a Master-specific key prior to usage.
4. Press the **Accept** button to save the information. If there are no errors with the information on this page, a “*Key successfully added for Product ID XXXX*” is displayed at the top of the page.

Removing a License

1. Click the **Remove** (x) icon to the left of the license that you want to remove.
2. The system will prompt you to verify this action before the license is removed from the Master. Click **OK** to proceed.
3. Press the **Accept** button to save the information.

System - Manage NetLinx

The **Manage NetLinx** tab displays a list of NetLinx devices connected to the Master, and indicates device status for each (FIG. 64).

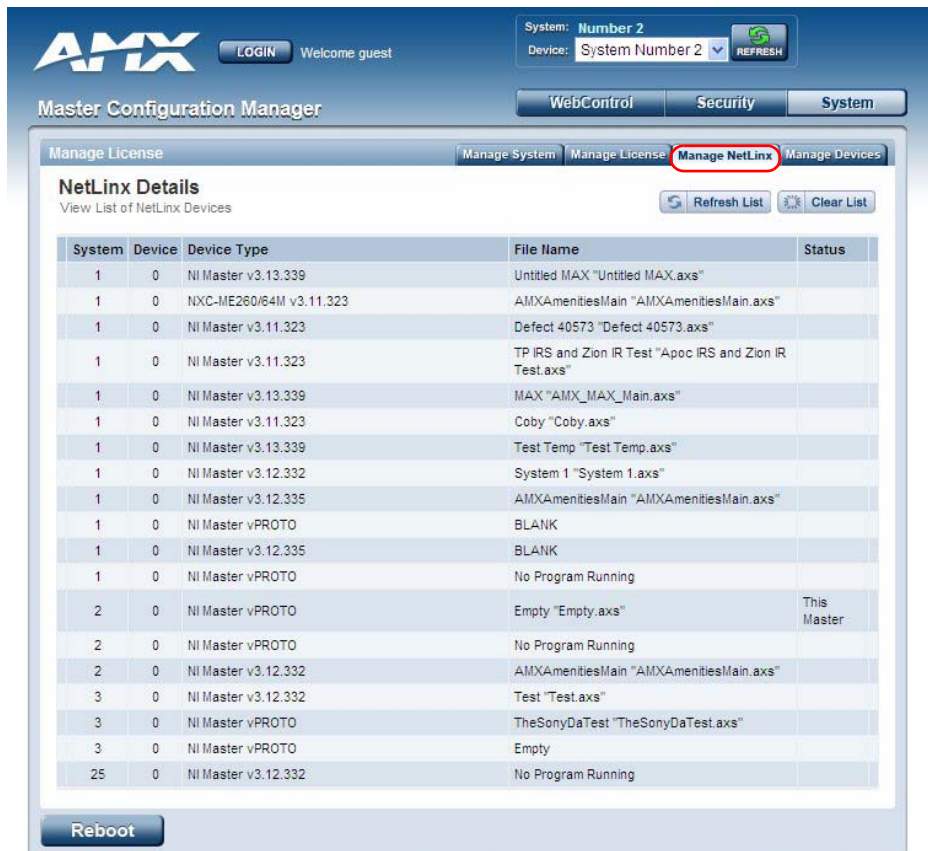


FIG. 64 System - Manage NetLinx tab

The table on this page consists of five columns:

NetLinx Device Details	
Column	Description
System:	Displays the System value being used by the listed NetLinx Master.
Device:	Displays the assigned device value of the listed unit. This Device entry applies to both the Master and those NDP-capable devices currently connected to that Master.
Device Type:	Displays a description of the target Master or connected device, and its current firmware version. Example: <i>NI Master v3.01.323</i> .
File Name:	Displays the program name and/or file resident on the device.
Status:	Indicates the Master or device state: <ul style="list-style-type: none"> • This Master: Indicates its the target Master currently being used and being browsed to. Its this Master's web pages which are currently being viewed. • Orphan: Indicates that the device is currently not yet "bound" or assigned to communicate with a particular Master. This state shows an adjacent Bind button which is used to bind the device to the Master whose web pages are currently being viewed. • Searching: Indicates that the device is trying to establish communication with it's associated Master. • Bound: Indicates that the device has established communication with it's associated Master. This state shows an adjacent Unbind button which is used to release/disassociate the device from communicating with its current Master. • Lost: Indicates that the device has tried to establish communication with it's associated or "bound" Master, but was after a period of time, unable to establish communication.

- **Refresh List:** Click this button to regenerate the device listing by looking for broadcasting devices. This causes the Master to send out a message asking devices to resend their NDP device announcements. The list is then updated as those devices send back their announcements to the Master. The information displayed can not only include Masters and devices on this system but Masters and devices on other systems as well. By default, the target Master always appears in the list.

NOTE: Due to system delays, message collisions, and multicast routing, not all devices may respond immediately.

- **Clear List:** Click this button causes the entries to be temporarily deleted from the page, either until you refresh the list (using the *Refresh List* button), or until the Master begins to detect any multi-cast transmissions from System Devices.

System - Manage Devices

The **Manage Devices** tab (FIG. 65) contains links to several different device-related pages, as described in the following subsections.

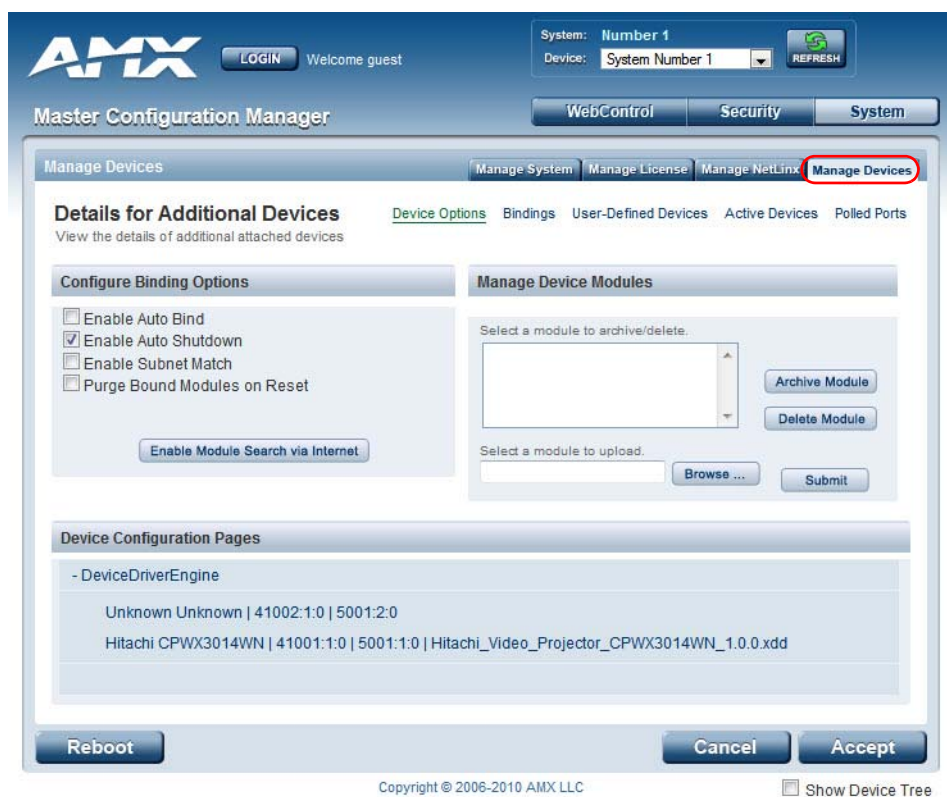


FIG. 65 System - Manage Devices (Details for Additional Devices)

Manage Devices - Device Options

Click the **Device Options** link (in the *Manage Devices* tab) to access the **Details for Additional Devices** page (FIG. 65). The options on this page display various details specific to additional (non-NetLinx) System Devices.

Configuring Device Binding Options

1. Use the **Configure Binding Options** options to specify how the Master will manage Bound Devices:

Binding Options	
Option	Description
Enable Auto Bind:	This selection allows you to toggle the state of the automatic binding for DDD (On/Off). When auto-binding is enabled, the Master automatically attempts to connect any newly discovered device with an associated application device (defined in the running NetLinx application). Auto-binding can only be accomplished if the Master's firmware determines a one-to-one correlation between the newly discovered device and a single entry within the list of defined application devices (accessed via the <i>Binding</i> link at the top of this page). For example, if the application only has one VCR defined and a VCR is detected in the system, auto-binding can then be accomplished. If there were two VCRs defined within the application, auto-binding could not be completed due to the lack of a clearly defined one-to-one correspondence. When this option is not selected, no auto-binding activity takes place and all binding of the newly discovered devices must be accomplished manually via the Web control interface.
Enable Auto-Shutdown:	Auto-Shutdown forces the termination of modules that have lost communication with their respective physical device. This capability is needed for plug-and-play support. By default, Auto-Shutdown is enabled. If automatic termination of modules when they have lost communication is not desired, this selection should be disabled.
Enable Subnet Match:	This selection allows you to specify whether or not IP devices should only be detected/discovered if they are on the same IP Subnet as the Master.
Purge Bound Modules on Reset:	This selection indicates that all modules should be deleted from the bound directory upon the next reboot. During the binding process, the associated Duet modules for a device are copied from the /unbound directory into a protected /bound area. Due to the dynamic nature of Java class loading, it is not safe to delete a running .JAR file. Therefore, this selection provides the administrator the capability of removing existing modules upon reboot by forcing a re-acquisition of the module at bind time. This selection is a one-time occurrence - upon the next reboot, the selection is cleared.

Binding Options	
Option	Description
Enable/Disable Module Search via Internet:	This option toggles the capability of searching the Internet (either AMX's site or a device specified site) for a device's compatible Duet modules. This capability is automatically disabled if the Master does not have Internet connectivity. Upon enabling Internet connectivity, the AMX License Agreement is displayed. The License Agreement must be accepted for Internet Module search feature to be enabled. When this feature is enabled, the Master queries either AMX's Online database of device Modules and/or pulls Modules from a separate site specified by the manufacturer's device. You can later disable this feature by toggling this button.

2. Press the **Accept** button to save your changes.

Managing Device Modules

Use the **Manage Device Modules** set of options to archive or delete modules from the Master. All modules currently present on the Master are indicated in the Module list.

Archiving a Module

1. Select a module and click the **Archive Module** button.
2. This action copies the selected module (*.JAR) file to your PC.
3. The system will prompt you to specify a target directory to save the module file to.

Deleting a Module

Select a module and click the **Delete Module** button. This action deletes the selected module from the **/unbound** directory.

NOTE: Any corresponding module within the **/bound** directory will not be deleted. Bound modules must be deleted via the **Purge Bound Modules on Reset** selection described within the **Configure Device Bindings** section.

To browse for a Module file and then upload it to the Master:

1. Click the **Browse** button next to the **Select a module to upload** text field to browse for Duet Modules on your PC/Network.
2. Select the JAR file that you want to upload to the Master.
3. Click the **Submit** button to upload a copy of the selected JAR file to the target Master's **/unbound** directory.
 - If a file of the same specified name already exists within the **/unbound** directory, the system will prompt you to confirm overwriting the existing file.
 - Only JAR file types are allowed for Upload to the target Master.

Manage Devices - Bindings

Click the **Bindings** link (in the **Manage Devices** tab) to access the **Manage Device Bindings** page (FIG. 66). Use the options on this page to configure application-defined Duet virtual devices with discovered physical devices.



FIG. 66 System - Manage Devices (Manage Device Bindings)

The table on this page displays a list of all application-defined devices, including each device's "Friendly Name", the Duet virtual device's D:P:S assignment, the associated Duet Device SDK class (indicating the type of the device), and the physical device's D:P:S assignment. This information has to be pre-coded into the NetLinX file currently on the Master.

Configuring Application-Defined Devices

Elements such as `DUET_DEV_TYPE_DISC_DEVICE` and `DUET_DEV_POLLED` are defined within the NetLinX.axi file.

The NetLinX.axi file contains both the new API definitions, as well as the pre-defined constants that are used as some of the API arguments (ex: `DUET_DEV_TYPE_DISC_DEVICE`).

NOTE: Physical device names are typically prefixed with "dv" and Virtual device names are typically prefixed with "vdv".

Example Code:

```

PROGRAM_NAME= 'DDD'
DEFINE_DEVICE
COM1 = 5001:1:0
COM2 = 5001:2:0
dvRECEIVER1 = 41000:1:0
dvDiscDevice = 41001:1:0

DEFINE_CONSTANT
DEFINE_TYPE
DEFINE_VARIABLE
DEFINE_START

STATIC_PORT_BINDING(dvDiscDevice, COM1, DUET_DEV_TYPE_DISC_DEVICE,
    'My DVD', DUET_DEV_POLLED)

DYNAMIC_POLLED_PORT(COM2)

DYNAMIC_APPLICATION_DEVICE(dvRECEIVER1, DUET_DEV_TYPE_RECEIVER,
    'My Receiver')

(*****
 *                               *
 *          THE EVENTS GO BELOW          *
 *                               *
*****)
DEFINE_EVENT

DATA_EVENT [dvRECEIVER1]
{
    // Duet Virtual device data events go here
}

```

Sample code can be found within the DEFINE_START section, as shown in FIG. 67:

The screenshot shows the AMX Master Configuration Manager web console. The 'Manage Device Bindings' page is active, displaying a table of bindings. The table has columns for 'Virtual Device' and 'Physical Device'. Two bindings are listed: 'My DVD' and 'My Receiver'. The 'My DVD' binding is associated with physical device 5001:1:0 and SDK class DiscDevice. The 'My Receiver' binding is associated with physical device 5001:1:0 and SDK class Receiver. A 'Reboot' button is visible at the bottom of the page.

Virtual Device		Physical Device	
Friendly Name	Device	SDK Class	Device
My DVD	41002:1:0	DiscDevice	5001:1:0
My Receiver	41001:1:0	Receiver	5001:1:0

FIG. 67 Manage Device Bindings page - showing the NetLinux code relation

This code gives the Master a “heads-up” notification to look for those devices meeting the criteria outlined within the code.

Application Devices and Association Status

There are two types of application devices: **Static Bound** application devices and **Dynamic** application devices:

- **Static Bound** application devices specify both a Duet virtual device and its associated Device SDK class type, as well as a NetLinx physical device port to which the application device is always associated (i.e. statically bound).
- **Dynamic** application devices specify both the Duet virtual device and its associated Device SDK with no association to a physical port. Binding of an application device to a physical device/port occurs at run-time (either via auto-binding or manual binding).

Application devices that have a "bound" physical device display their physical device ID within the **Physical Device** column. If an associated Duet module has been started to communicate with the device, its associated property information is displayed in a mouse-over popup dialog when the cursor hovers over the physical device ID (see FIG. 68 on page 64).

Each entry in the table has one of four buttons to the right of the Physical Device D:P:S assignment:

- **Static Bound** application devices will either be **blank**, or display a **Release** button:
 - Static Bound application devices that have not yet detected a physical device attached to their associated port have a **blank** button.
 - Once a physical device is detected and its associated Duet module has been started, a **Release** button is then displayed. Click **Release** to force the associated Duet module to be destroyed and the firmware then returns to detecting any physical devices attached to the port.
- **Dynamic** application devices either display a **Bind** or **Unbind** button:
 - Dynamic application devices that have been bound display an **Unbind** button. When the user selects **Unbind**, any associated Duet module is then destroyed and the "link" between the application device and the physical device is then broken.
 - Dynamic application devices that have not been bound to a physical device display a **Bind** button. When this button is selected, a secondary display appears with a listing of all available unbound physical devices that match the application device's Device SDK class type.

NOTE: If a currently bound device needs to be replaced or a Duet Module needs to be swapped out, the device should be unbound and the new module/driver should then be bound.

The administrator/user can then select one of the available physical devices to bind with the associated application device. When the **Save** button is selected, the binding is created and a process begins within the target Master to find the appropriate Duet Module driver. Once a driver is found, the Duet Module is then started and associated with the specified application device (Duet virtual device). If the **Cancel** button is selected, the binding activity is then aborted.

NOTE: If the manufacturer device does not support Dynamic Device Discovery (DDD) beaconing, you must use the Add New Device page to both create and manage those values necessary to add a dynamic physical device. This process is described in detail within the following section.

Viewing Physical Device Properties

Hold the mouse cursor over the Physical Device - **Device** entry in the table to display detailed device properties for that device, in a pop-up window (FIG. 68).

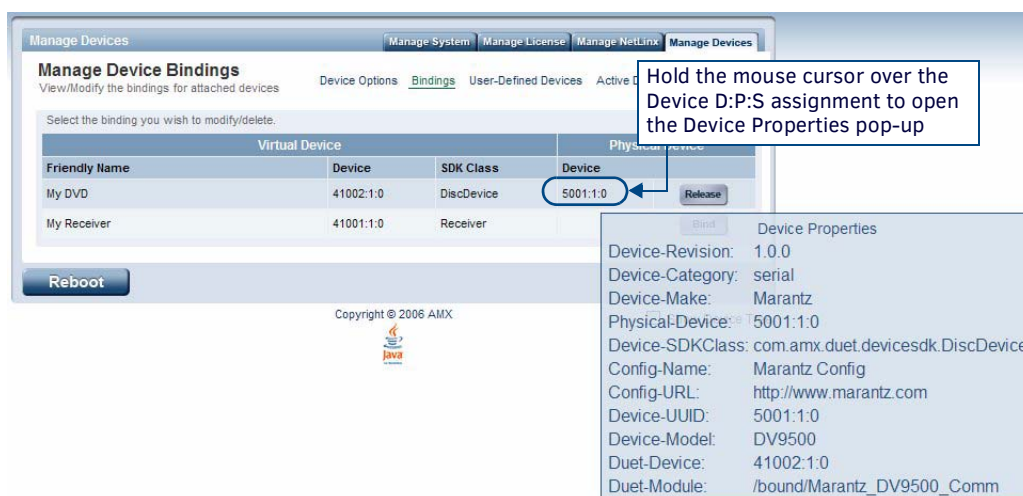


FIG. 68 Manage Device Bindings - Device Properties pop-up

Manage Devices - User-Defined Devices

Click the **User-Defined Devices** link (in the *Manage Devices* tab) to access the **User-Defined Devices** page (FIG. 69). This page provides a listing with all of the dynamic devices that have been discovered in the system, and allows you to add and delete User-Defined Devices.

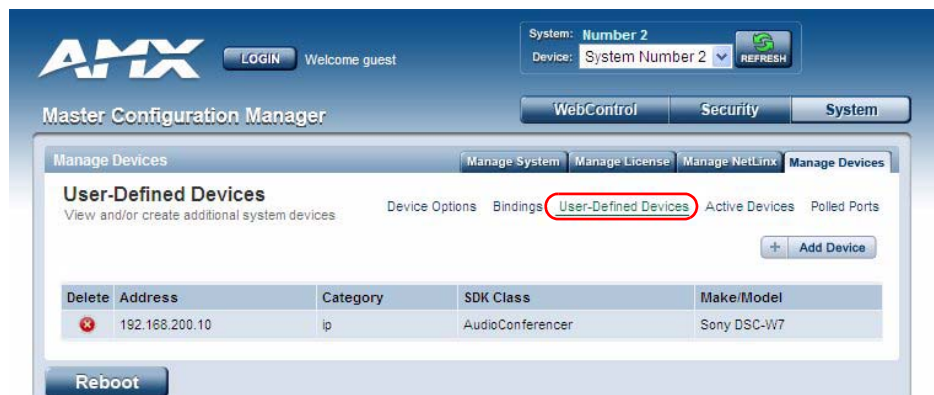


FIG. 69 System - Manage Devices (User-Defined Devices)

Adding a User-Defined Device

1. Click the **Add Device** button (in the User-Defined Devices page) to access the **Add User Defined Device** page (FIG. 70):



FIG. 70 User-Defined Devices - Add User Defined Device

2. Fill in the device information fields, as described in the following tables:

User-Defined Device Information Fields	
Address:	Enter the address of the physical device in the Address field. This information can be either the NetLinX Master port value (D:P:S) or an IP Address (#.#.#.#).
Category:	Use the drop-down list to select the control method associated with the physical target device (<i>IR, IP, Serial, Relay, Other</i>).
SDK Class:	Use the drop-down list to select the closest Device SDK class type match for the physical target device. The SDK-Class Types table (below) provides a listing of the available choices.
GUID:	Enter the manufacturer-specified device's GUID (Global Unique Identification) information. Either the GUID or Make/Model must be specified in this field.
Make:	Enter the name of the manufacturer for the device being used (ex: Sony, ONKYO, etc.) <ul style="list-style-type: none"> • Up to 55 alpha-numeric characters • Either the GUID or Make/Model must be specified within this field. • Spaces in the name will be converted to underscores.
Model:	Enter the model number of the device being used (ex: Mega-Tuner 1000) <ul style="list-style-type: none"> • Up to 255 alpha-numeric characters • Either the GUID or Make/Model must be specified within this field.
Revision	Enter the firmware version used by the target device. <ul style="list-style-type: none"> • Text is required within this field. • The version must be in the format: major.minor.micro (where major, minor, and micro are numbers). An example is: 1.0.0 (revision 1.0.0 of the device firmware).

SDK-Class Types			
Amplifier	Digital Video Recorder	PreAmpSurroundSoundProcessor	Utility
AudioConferencer	Disc Device	Receiver	VCR
AudioMixer	DocumentCamera	RelayDevice	VideoConferencer
AudioProcessor	HVAC	Security System	VideoProcessor
AudioTape	IODevice	Sensor Device	VideoProjector
AudioTunerDevice	Keypad	SettopBox	VideoWall
Camera	Light	SlideProjector	VolumeController
Digital Media Decoder	Monitor	Switcher	Weather
Digital Media Encoder	Motor	Text Keypad	
Digital Media Server	MultiWindow	TV	
Digital Satellite System	PoolSpa	UPS	

- Once you are done creating the profile for the new device, click the **Add Property** button to access the **Name** and **Value** fields property information for association with the new User Defined Device.
- Click the **Accept** button. The new device is indicated in the list of discovered physical devices (in the *User-Defined Devices* page).

Manage Devices - Active Devices

Click the **Active Devices** link (in the *Manage Devices* tab) to access the **View All Active Devices** page (FIG. 71). The options on this page allow you to check devices for compatible Duet Modules.



FIG. 71 System - Manage Devices (Active Devices)

Searching For All Compatible Duet Modules for a Selected Device

- Click the Search button for the device that you want to find a Duet Module for. This action initiates a search for compatible modules, based on the following options:
 - Unless the **Disable Module Search via the Internet** option was selected in the Manage Devices page (see the *Manage Devices - Device Options* section on page 61), the search includes a query of the AMX online database as well as any manufacturer specified URLs that match the IP Address of the physical device for a compatible module.
 - If the device specified a **URL** in its DDD beacon, the file is retrieved from the URL either over the Internet or from the physical device itself, provided the device has an inboard HTTP or FTP server.
 - If **Module Search via Internet** is *NOT enabled*, the search does NOT query the AMX online database nor will it pull any manufacturer specified URLs that do not match the IP Address of the physical device itself.

Modules that are retrieved from either the Internet or from the manufacturer's device are then placed into the **/unbound** directory and automatically overwrite any existing module of the same name.

- Once a list of all compatible modules is compiled, the Available Modules list is displayed on this page. Each module is listed with its calculated "match" value. The greater the "match" value, the better the match between the Duet Module's properties and the physical device's properties.
- Select a module and click the **Accept** button to associate the selected Duet module with the physical device.

NOTE: This action will not affect any currently running Duet module associated with the physical device. The module is associated with the device upon reboot.

Viewing Physical Device Properties

Hold the mouse cursor over the **Device** entry in the table to display detailed device properties for that device, in a pop-up window (FIG. 72).

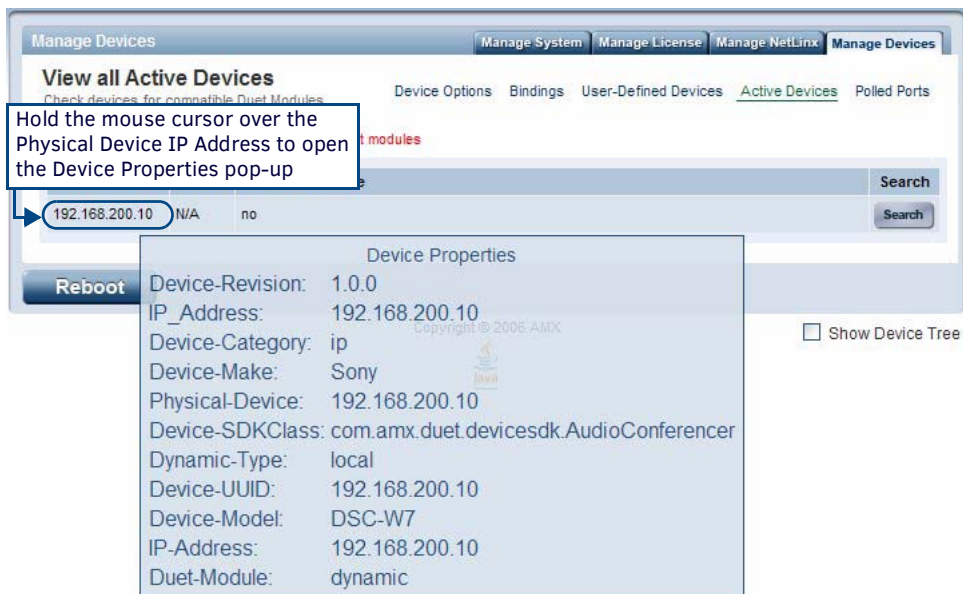


FIG. 72 View All Active Devices - Device Properties pop-up

Manage Devices - Manage Polled Ports

Click the **Polled Ports** link (in the *Manage Devices* tab) to access the **Manage Polled Ports** page (FIG. 73). The options on this page allow you to view/modify settings for all polled ports in the System.

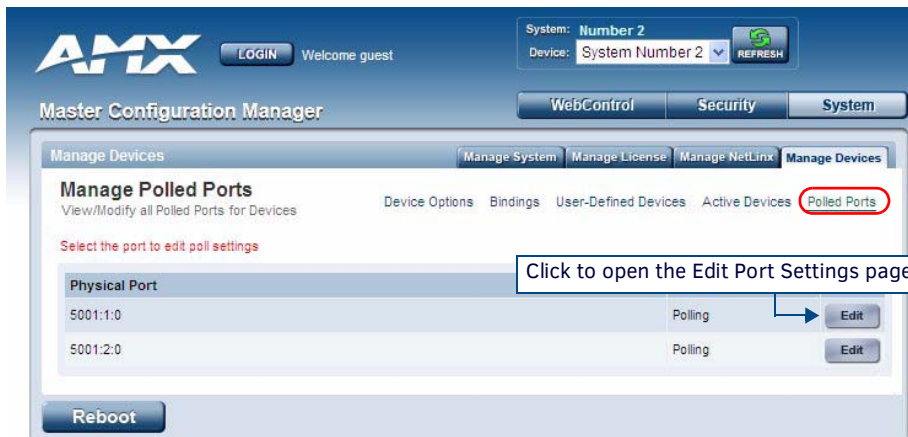


FIG. 73 System - Manage Devices (Manage Polled Ports)

NOTE: Polled Ports must be specified in the Master's code in order for this page to be populated.

Editing Polled Port Settings

Click the **Edit** button for a port in the Physical Port list to access the *Edit Port Settings* page (FIG. 74):



FIG. 74 Manage Polled Ports - Edit Port Settings

Use the drop-down menus to modify the Port settings. Click **Reset to Default Settings** to return this port to its default configuration:

Default Port Settings	
Baud Rate:	9600
Data Bits:	8
Parity:	None
Stop Bits:	1
Flow Control	None
485:	Disabled

Manage Devices - Network Settings

With the Master selected in the *Device* drop-down menu, click the **Network Settings** link (in the *Manage Devices* tab) to access the **Network Settings** page (FIG. 75). Use the options on this page to view/edit the Master's network settings.

The screenshot displays the AMX Master Configuration Manager interface. At the top, there is a navigation bar with 'WebControl', 'Security', and 'System' tabs. The 'System' tab is active. Below the navigation bar, the 'Manage Devices' section is visible, with 'Network Settings' highlighted in a red circle. The 'Network Settings' page is titled 'Modify Network Settings for Devices' and includes the following sections:

- Device Information:** A table showing device details:

Device Name:	NI Master	Manufacturer:	AMX LLC
Device Number:	0	Version:	v3.60.453
Port Count:	5		
FWID:	380		
OID 1:	vxWorks Image v3.60.453		
OID 2:	BootROM v3.60.453		
OID 3:	AXLink I/F uController v1.30.4		
- IP Address:** Configuration fields for Host Name (Shane31), IP Address (192.168.x.x), Subnet Mask (255.255.x.x), and Gateway (192.168.x.x). Radio buttons for DHCP (selected) and Specify IP Address are present.
- DNS Address:** Configuration fields for Domain Suffix (amx.internal), DNS IP 1 (192.168.x.x), DNS IP 2 (192.168.x.x), and DNS IP 3 (empty).
- ZeroConfig Networking:** Radio buttons for On (selected) and Off.
- NDP Beacon:** Radio buttons for On (selected) and Off.
- IP Device Discovery:** Radio buttons for On (selected) and Off.

At the bottom of the page, there are three buttons: 'Reboot', 'Cancel', and 'Accept'.

FIG. 75 System - Manage Devices (Network Settings)

ZeroConfig Networking

Use these radio buttons to enable/disable the Zero-Configuration (*ZeroConfig*) client in the Master. By default, ZeroConfig Networking is enabled (*On* option selected). With ZeroConfig enabled, the Master's web interface will be registered via ZeroConfig and can be viewed through a ZeroConfig browser plug-in such as Bonjour for IE.

NDP Beacon

Use these radio buttons to enable/disable the NetLinx Discovery Protocol (NDP) beacons client in the Master. By default, NDP Beacon is enabled (*On* option selected). With NDP Beacon enabled, the Master will transmit NDP beacons for AMX's proprietary device discovery.

IP Device Discovery

Use these radio buttons to enable/disable the detection of third party multicast IP based Device Discovery beacons. By default, IP Device Discovery is enabled (*On* option selected). With IP Device Discovery enabled, the Master will detect third party multicast IP based Device Discovery beacons.

Manage Devices - URL List

With the Master selected in the *Device* drop-down menu, click the **URL List** link (in the *Manage Devices* tab) to access the **URL List** page (FIG. 76). The options on this page allow you to view and edit the URL List of devices for the Master.

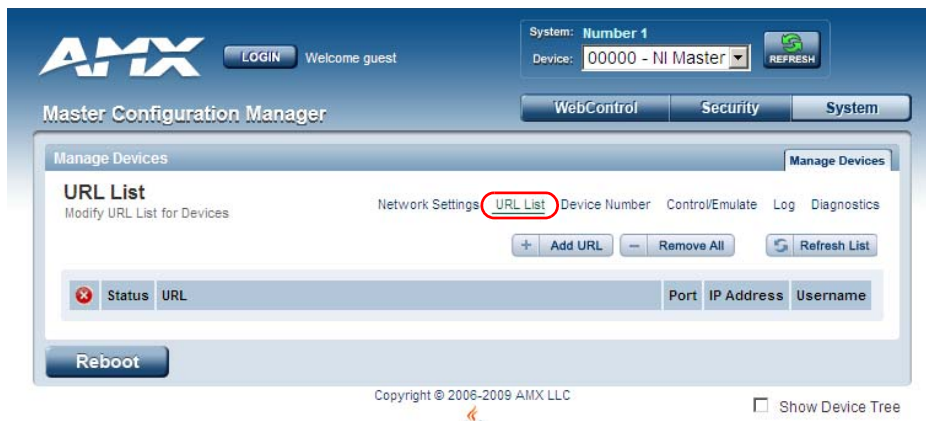


FIG. 76 System - Manage Devices (URL List)

Adding a URL To The Master's List Of Devices

In the *Manage Devices - URL List* page, click the **Add URL** button to open the *Add a URL* page (FIG. 77):

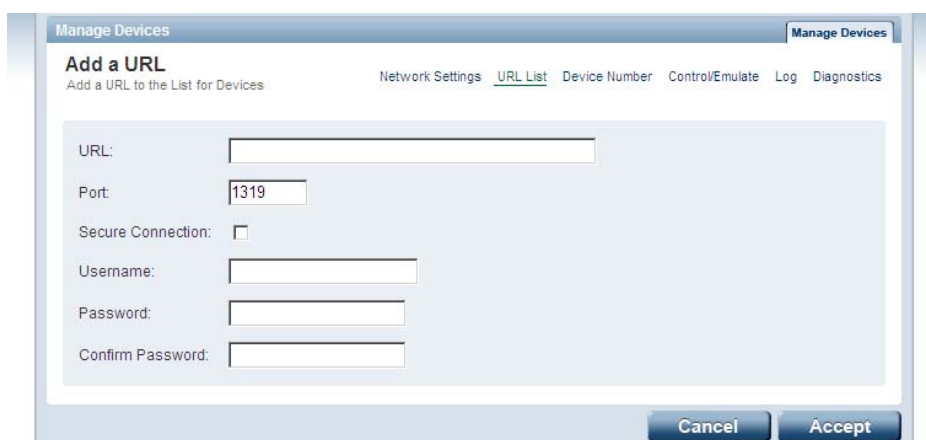


FIG. 77 Add a URL page

Fill in the fields and click **Accept** to save the changes and add this information to the URL List.

Manage Devices - Device Number

With the Master selected in the *Device* drop-down menu, click the **Device Number** link (in the *Manage Devices* tab) to access the **Change Device Number** page (FIG. 78). The options on this page allow you to change the device number on the Master.

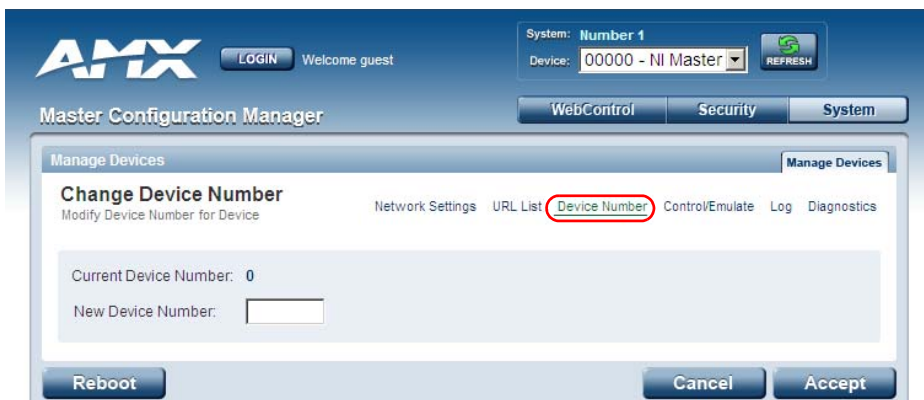


FIG. 78 System - Manage Devices (Device Number)

- Default = 0 (zero)
- Note that in most cases, the Device Number for Masters should remain set to zero.

Manage Devices - Control/Emulate

With the Master selected in the *Device* drop-down menu, click the **Control/Emulate** link (in the *Manage Devices* tab) to access the **Control/Emulate Options** page (FIG. 79).

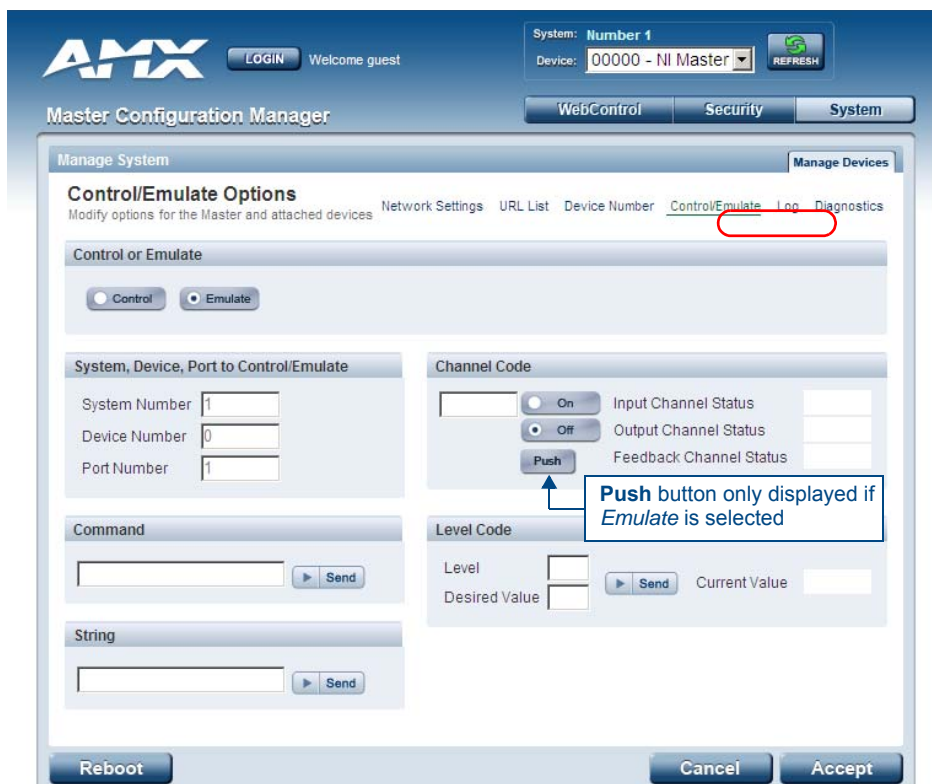


FIG. 79 Manage System (Control/Emulate Options)

This page can also be accessed via the *Manage System* options, as described in the *Manage System - Control/Emulate Options* section on page 45. See the *Controlling or Emulating a System Device* section on page 45 for details.

Manage Devices - Log

With the Master selected in the *Device* drop-down menu, click the **Log** link (in the *Manage Devices* tab) to access the **Message Log For Device** page (FIG. 80). This page displays message logs for the Master.

The screenshot shows the AMX Master Configuration Manager interface. At the top, there is a header with the AMX logo, a 'LOGIN' button, and 'Welcome guest'. To the right, there are fields for 'System: Number 1' and 'Device: 00000 - NI Master', along with a 'REFRESH' button. Below the header, there are tabs for 'WebControl', 'Security', and 'System'. The main content area is titled 'Manage Devices' and contains a sub-section 'Message Log for Device'. This sub-section has a navigation bar with links for 'Network Settings', 'URL List', 'Device Number', 'Control/Emulate', 'Log' (highlighted with a red circle), and 'Diagnostics'. There is also a 'Refresh List' button. The log entries are displayed in a table with the following data:

No.	Date/Time	Object	Text
1	03-07-2011 MON 15:41:10	Interpreter	ClpEvent::OffLine 32001:1:1
2	03-07-2011 MON 15:41:10	ICSPTCP	ICSPTCPRx0::CloseSocket: Closing Socket
3	03-07-2011 MON 15:41:10	ICSPTCP	CICSPTCP Rx connection to 192.168.220.171 has been closed locally or by peer
4	03-07-2011 MON 15:33:06	ConnectionManager	Memory Available = 32445592 <42544>
5	03-07-2011 MON 15:33:06	ConnectionManager	Memory Available = 32445592 <42544>
159	03-07-2011 MON 14:34:49	ConfigurationManager	System = 1
160	03-07-2011 MON 14:34:49	ConfigurationManager	LoadConfiguration Complete (27253).

At the bottom of the log area, there is a 'Reboot' button.

FIG. 80 Manage System (Message Log For Device)

Manage Devices - Diagnostics

With the Master selected in the *Device* drop-down menu, click the **Diagnostics** link (in the *Manage Devices* tab) to access the **Diagnostics Options** page (FIG. 81).

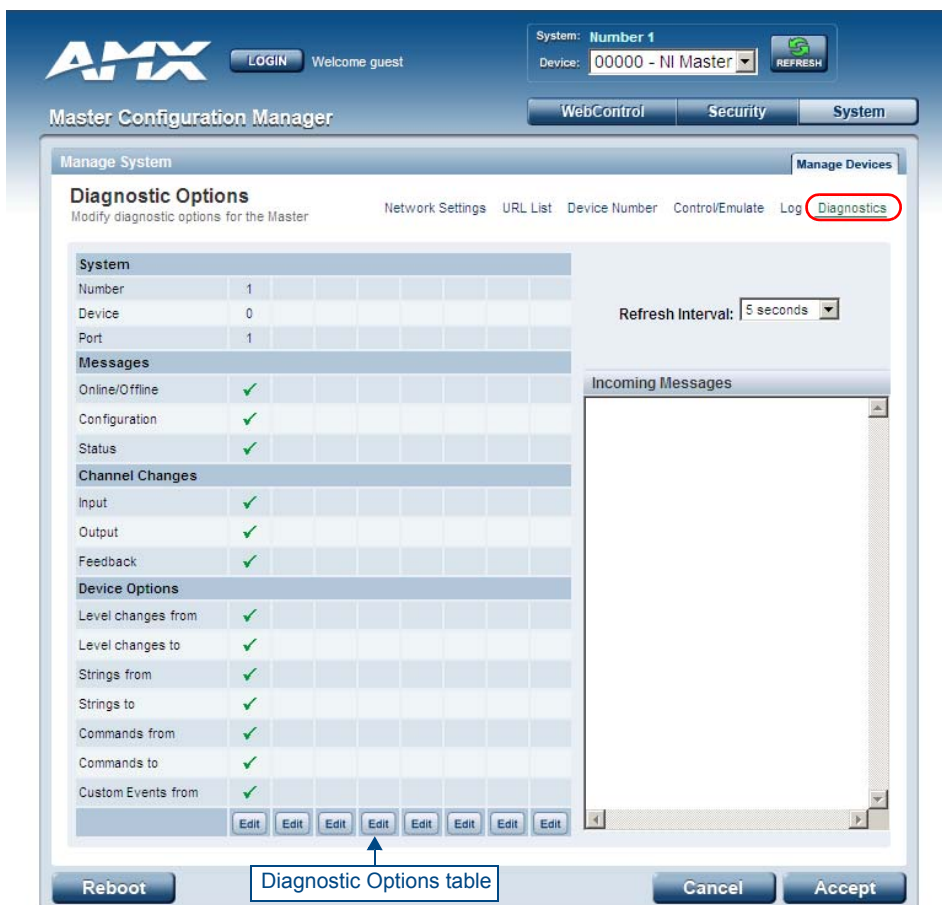


FIG. 81 Diagnostics Options Page (with diagnostic messages enabled)

This page can also be accessed via the *Manage System* options, as described in the *Manage System - Diagnostics Options* section on page 47. See the *Enabling Diagnostics On a Selected System Device* section on page 47 for details.

NetLinx Programming

Overview

This section describes the Send_Commands, Send_Strings, and Channel commands you can use to program the Master. The examples in this section require a declaration in the DEFINE_DEVICE section of your program to work correctly. Refer to the *NetLinx Programming Language* instruction manual for specifics about declarations and DEFINE_DEVICE information.

NOTE: *NetLinx programming information for each Master is provided in the Master's Operation/Reference Guide (available at www.amx.com).*

Port Assignments by NetLinx Master

Port Assignments By Master					
Master	RS-232/422/485	IR/Serial	IR/RX	Relays	I/O
NI-700	Ports 1 - 2	Port 3	Port 5		Port 4
NI-900	Port 1	Ports 2-4	Port 6		Port 5
NI-2100	Ports 1 - 3	Ports 5-8		Port 4	Port 9
NI-3100	Ports 1 - 7	Ports 9-16		Port 8	Port 17
NI-4100	Ports 1 - 7	Ports 9-16		Port 8	Port 17
NI-3101-SIG	Ports 1 - 6	Ports 9-16		Port 8	Port 17
DVX-21xxHD	Ports 1 - 3	Ports 5-8		Port 4	Port 9
DVX-315xHD	Ports 1 - 6	Ports 9-16		Port 8	Port 17

Master SEND_COMMANDS

These commands are specific to the Master and not the Controller. These commands are sent to the DPS 0:1:0 (the Master you are connected to). A device (<DEV>) must first be defined in the NetLinx programming language with values for the Device: Port: System (<D:P:S>).

Master SEND_COMMANDS	
Command	Description
CLOCK	<p>Set the date and time on the Master. The date and time settings are propagated over the local bus.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CLOCK <mm-dd-yyyy> <hh:mm:ss>' "</p> <p>Variables:</p> <ul style="list-style-type: none"> mm-dd-yyyy = Month, day, and year. Month and day have 2 significant digits. Year has 4 significant digits. hh-mm-ss = Hour, minute, and seconds. Each using only 2 significant digits. <p>Example: SEND_COMMAND 0, " 'CLOCK 04-12-2005 09:45:31' "</p> <p>Sets the Master's date to April 12, 2005 with a time of 9:45 am.</p>
G4WC	<p>Add G4 Web Control devices to Web control list displayed by the Web server in a browser. The internal G4WC Send command (to Master 0:1:0) has been revised to add G4 Web Control devices to Web control list displayed in the browser.</p> <p>Syntax: SEND_COMMAND <D:P:S>, " 'G4WC "Name/Description", IP Address/URL, IP Port, Enabled' "</p> <p>Variables:</p> <ul style="list-style-type: none"> Name/Description = A string, enclosed in double quotes, that is the description of the G4 Web Control instance. It is displayed in the browser. IP Address/URL = A string containing the IP Address of the G4 Web Control server, or a URL to the G4 Web Control server. IP Port = A string containing the IP Port of the G4 Web Control Server. Enabled = 1 or 0. If it is a 1 then the link is displayed. If it is a 0 then the link is disabled. <p>The combination of Name/Description, IP Address/URL, and IP Port are used to determine each unique listing.</p> <p>Example: SEND_COMMAND 0:1:0, " 'G4WC "Bedroom", 192.168.1.2, 5900, 1' "</p> <p>Adds the BEDROOM control device using the IP Address of 192.168.1.2.</p>
~IGNOREEXTERNALCLOCKCOMMANDS	<p>Set the Master so that it cannot have its time set by another device which generates a 'CLOCK' command.</p> <p>Syntax: SEND_COMMAND <D:P:S>, " '~IGNOREEXTERNALCLOCKCOMMANDS' "</p> <p>Example: SEND_COMMAND 0:1:0, " '~IGNOREEXTERNALCLOCKCOMMANDS' "</p>

Master IP Local Port SEND_COMMANDS

These commands are specific to the Master and not the Controller. These commands are sent to the DPS 0:1:0 (the Master). A device must first be defined in the NetLinx programming language with values for the Device: Port: System.

In these programming examples, <DEV> = Device. The term <D:P:S> = Device:Port:System.

Master IP Local Port SEND_COMMANDS	
Command	Description
UDPSENDTO	<p>Set the IP and port number of the UDP local ports destination for sending future packets. This is only available for Type 2 and Type 3 Local Ports. Type 2 and Type 3 are referring to the protocol type that is part of the IP_CLIENT_OPEN call (4th parameter).</p> <p>Type 1 is TCP. Type 2 is UDP (standard) Type 3 is UDP (2 way)</p> <p>The NetLinx.axi defines constants for the protocol types:</p> <pre>CHAR IP_TCP = 1 CHAR IP_UDP = 2 CHAR IP_UDP_2WAY = 3</pre> <p><i>Syntax:</i> SEND_COMMAND <D:P:S>,"'UDPSENDTO-<IP or URL>:<UDP Port Number>' "</p> <p><i>Variables:</i></p> <ul style="list-style-type: none"> • IP or URL = A string containing the IP Address or URL of the desired destination. • UDP Port Number = A String containing the UDP port number of the desired destination. <p><i>Example 1:</i> SEND_COMMAND 0:3:0,"'UDPSENDTO-192.168.0.1:10000' " Any subsequent SEND_STRING to 0:3:0 are sent to the IP Address 192.168.0.1 port 10000.</p> <p><i>Example 2:</i> SEND_COMMAND 0:3:0,"'UDPSENDTO-myUrl.com:15000' " Any subsequent SEND_STRING to 0:3:0 are sent to the URL myURL.com port 15000.</p>

LED Disable/Enable SEND_COMMANDS

NOTE: The following sections only apply to the integrated controller component of the NIs.

The following commands enable or disable the LEDs on the Integrated Controller. In the examples: <DEV> = Port 1 of the device. Sending to port 1 of the NI-700 affects all ports.

LED SEND_COMMANDS	
Command	Description
LED-DIS	<p>Disable all LEDs (on 32 LED hardware) for a port. Regardless of whether or not the port is active, the LED will not be lit. Issue this command to port 1 to disable all the LEDs on the Controller. When activity occurs on a port(s) or Controller, the LEDs will not illuminate.</p> <p><i>Syntax:</i> SEND_COMMAND <DEV>,"'LED-DIS' "</p> <p><i>Example:</i> SEND_COMMAND Port_1,"'LED-DIS' " Disables all the LEDs on Port 1 of the Controller.</p>
LED-EN	<p>Enable the LED (on 32 LED hardware) for a port. When the port is active, the LED is lit. When the port is not active, the LED is not lit. Issue the command to port 1 to enable the LEDs on the Controller (default setting). When activity occurs on a port(s) or Controller, the LEDs illuminate.</p> <p><i>Syntax:</i> SEND_COMMAND <DEV>,'LED-EN'</p> <p><i>Example:</i> SEND_COMMAND System_1,'LED-EN' Enables the System_1 Controller's LEDs.</p>

RS232/422/485 Ports Channels

RS232/422/485 ports are Ports 1-2 (NI-700) and Port 1 (NI-900).

RS232/422/485 Ports Channels	
255 - CTS push channel	Reflects the state of the CTS input if a 'CTSPSH' command was sent to the port.

RS-232/422/485 SEND_COMMANDS

RS-232/422/485 SEND_COMMANDS	
Command	Description
B9MOFF	<p>Disables 9-bit in 232/422/455 mode. By default, this returns the communication settings on the serial port to the last programmed parameters. This command works in conjunction with the 'B9MON' command.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'B9MOFF' "</code></p> <p>Example: <code>SEND_COMMAND RS232_1, " 'B9MOFF' "</code></p> <p>Sets the RS-232 port settings to match the port's configuration settings.</p>
B9MON	<p>Override and set the current communication settings and parameters on the RS-232 serial port to 9 data bits with one stop bit. This command works in conjunction with the 'B9MOFF' command.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'B9MON' "</code></p> <p>Example: <code>SEND_COMMAND RS232_1, " 'B9MON' "</code></p> <p>Resets the RS-232 port's communication parameters to nine data bits, one stop bit, and locks-in the baud rate.</p>
CHARD	<p>Set the delay time between all transmitted characters to the value specified (in 100 Microsecond increments).</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'CHARD-<time>' "</code></p> <p>Variable: time = 0 - 255. Measured in 100 microsecond increments.</p> <p>Example: <code>SEND_COMMAND RS232_1, " 'CHARD-10' "</code></p> <p>Sets a 1-millisecond delay between all transmitted characters.</p>
CHARDM	<p>Set the delay time between all transmitted characters to the value specified (in 1-Millisecond increments).</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'CHARDM-<time>' "</code></p> <p>Variable: time = 0 - 255. Measured in 1 millisecond increments.</p> <p>Example: <code>SEND_COMMAND RS232_1, " 'CHARDM-10' "</code></p> <p>Sets a 10-millisecond delay between all transmitted characters.</p>
CTSPSH	<p>Enable Pushes, Releases, and Status information to be reported via channel 255 using the CTS hardware handshake input. This command turns On (enables) channel tracking of the handshaking pins.</p> <p>If Clear To Send (CTS) is set high, then channel 255 is On.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'CTSPSH' "</code></p> <p>Example: <code>SEND_COMMAND RS232_1, " 'CTSPSH' "</code></p> <p>Sets the RS232_1 port to detect changes on the CTS input.</p>
CTSPSH OFF	<p>Disable Pushes, Releases, and Status information to be reported via channel 255. This command disables tracking. Turns CTSPSH Off.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'CTSPSH OFF' "</code></p> <p>Example: <code>SEND_COMMAND RS232_1, " 'CTSPSH OFF' "</code></p> <p>Turns off CTSPSH for the specified device.</p>
GET BAUD	<p>Get the RS-232/422/485 port's current communication parameters. The port sends the parameters to the device that requested the information.</p> <p>The port responds with: <port #>,<baud>,<parity>,<data>,<stop> 485 <ENABLED DISABLED></p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'GET BAUD' "</code></p> <p>Example: <code>SEND_COMMAND RS232_1, " 'GET BAUD' "</code></p> <p>System response example: Device 1,38400,N,8,1 485 DISABLED</p>

RS-232/422/485 SEND_COMMANDs (Cont.)	
Command	Description
HSOFF	<p>Disable hardware handshaking (default).</p> <p>Syntax: SEND_COMMAND <DEV> , " 'HSOFF' "</p> <p>Example: SEND_COMMAND RS232_1 , " 'HSOFF' "</p> <p>Disables hardware handshaking on the RS232_1 device.</p>
HSON	<p>Enable RTS (ready-to-send) and CTS (clear-to-send) hardware handshaking.</p> <p>Syntax: SEND_COMMAND <DEV> , " 'HSON' "</p> <p>Example: SEND_COMMAND RS232_1 , " 'HSON' "</p> <p>Enables hardware handshaking on the RS232_1 device.</p>
RXCLR	<p>Clear all characters in the receive buffer waiting to be sent to the Master.</p> <p>Syntax: SEND_COMMAND <DEV> , " 'RXCLR' "</p> <p>Example: SEND_COMMAND RS232_1 , " 'RXCLR' "</p> <p>Clears all characters in the RS232_1 device's receive buffer waiting to be sent to the Master.</p>
RXOFF	<p>Disable the transmission of incoming received characters to the Master.</p> <p>Syntax: SEND_COMMAND <DEV> , " 'RXOFF' "</p> <p>Example: SEND_COMMAND RS232_1 , " 'RXOFF' "</p> <p>Stops the RS232_1 device from transmitting received characters to the Master.</p>
RXON	<p>Start transmitting received characters to the Master (default). Enables sending incoming received characters to the Master. This command is automatically sent by the Master when a 'CREATE_BUFFER' program instruction is executed.</p> <p>Syntax: SEND_COMMAND <DEV> , " 'RXON' "</p> <p>Example: SEND_COMMAND RS232_1 , " 'RXON' "</p> <p>Sets the RS232_1 device to transmit received characters to the Master.</p>
SET BAUD	<p>Set the RS-232/422/485 port's communication parameters.</p> <p>Syntax: SEND_COMMAND <DEV> , " 'SET BAUD <baud> , <parity> , <data> , <stop> [485 <Enable Disable>]' "</p> <p>Variables:</p> <ul style="list-style-type: none"> baud = baud rates are: 115200, 76800, 57600, 38400, 19200, 9600, 4800, 2400, 1200, 600, 300, 150. parity = N (none), O (odd), E (even), M (mark), S (space). data = 8 data bits. stop = 1 and 2 stop bits. 485 Disable = Disables RS-485 mode and enables RS-422. 485 Enable = Enables RS-485 mode and disables RS-422. <p><i>Note: The only valid 9 bit combination is (baud),N,9,1.</i></p> <p>Example: SEND_COMMAND RS232_1 , " 'SET BAUD 115200,N,8,1 485 ENABLE' "</p> <p>Sets the RS232_1 port's communication parameters to 115,200 baud, no parity, 8 data bits, 1 stop bit, and enables RS-485 mode.</p>

RS-232/422/485 SEND_COMMANDs (Cont.)	
Command	Description
TSET BAUD	<p>Temporarily set the RS-232/422/485 port's communication parameters for a device. TSET BAUD works the same as SET BAUD, except that the changes are not permanent, and the previous values will be restored if the power is cycled on the device.</p> <p>Syntax: <code>SEND_COMMAND <DEV>,"TSET BAUD <baud>,<parity>,<data>,<stop> [485 <Enable Disable>]"</code></p> <p>Variables: baud = baud rates are: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200, 600, 300. parity = N (none), O (odd), E (even), M (mark), S (space). data = 8 or 9 data bits. stop = 1 or 2 stop bits. 485 Disable = Disables RS-485 mode and enables RS-422. 485 Enable = Enables RS-485 mode and disables RS-422.</p> <p><i>Note: The only valid 9 bit combination is (baud),N,9,1.</i></p> <p>Example: <code>SEND_COMMAND RS232_1,"TSET BAUD 115200,N,8,1 485 ENABLE"</code> Sets the RS232_1 port's communication parameters to 115,200 baud, no parity, 8 data bits, 1 stop bit, and enables RS-485 mode.</p>
TXCLR	<p>Stop and clear all characters waiting in the transmit out buffer and stops transmission.</p> <p>Syntax: <code>SEND_COMMAND <DEV>,"TXCLR"</code></p> <p>Example: <code>SEND_COMMAND RS232_1,"TXCLR"</code> Clears and stops all characters waiting in the RS232_1 device's transmit buffer.</p>
XOFF	<p>Disable software handshaking (default).</p> <p>Syntax: <code>SEND_COMMAND <DEV>,"XOFF"</code></p> <p>Example: <code>SEND_COMMAND RS232_1,"XOFF"</code> Disables software handshaking on the RS232_1 device.</p>
XON	<p>Enable software handshaking.</p> <p>Syntax: <code>SEND_COMMAND <DEV>,"XON"</code></p> <p>Example: <code>SEND_COMMAND RS232_1,"XON"</code> Enables software handshaking on the RS232_1 device.</p>

RS-232/422/485 SEND_STRING Escape Sequences

This device also has some special SEND_STRING escape sequences: If any of the 3 character combinations below are found anywhere within a SEND_STRING program instruction, they will be treated as a command and not the literal characters. In these examples: <DEV> = device.

RS-232/422/485 SEND_STRING Escape Sequences	
Command	Description
27,17,<time>	Send a break character for a specified duration to a specific device. Syntax: SEND_STRING <DEV>,"27,17,<time>" Variable: time = 1 - 255. Measured in 100 microsecond increments. Example: SEND_STRING RS232_1,"27,17,10" Sends a break character of 1 millisecond to the RS232_1 device.
27,18,0	Clear the ninth data bit by setting it to 0 on all character transmissions. Used in conjunction with the 'B9MON' command. Syntax: SEND_STRING <DEV>,"27,18,0" Example: SEND_STRING RS232_1,"27,18,0" Sets the RS232_1 device's ninth data bit to 0 on all character transmissions.
27,18,1	Set the ninth data bit to 1 for all subsequent characters to be transmitted. Used in conjunction with the 'B9MON' command. Syntax: SEND_STRING <DEV>,"27,18,1" Example: SEND_STRING RS232_1,"27,18,1" Sets the RS232_1 device's ninth data bit to 1 on all character transmissions.
27,19,<time>	Insert a time delay before transmitting the next character. Syntax: SEND_STRING <DEV>,"27,19,<time>" Variable: time = 1 - 255. Measured in 1 millisecond increments. Example: SEND_STRING RS232_1,"27,19,10" Inserts a 10 millisecond delay before transmitting characters to the RS232_1 device.
27,20,0	Set the RTS hardware handshake's output to high (> 3V). Syntax: SEND_STRING <DEV>,"27,20,0" Example: SEND_STRING RS232_1,"27,20,0" Sets the RTS hardware handshake's output to high on the RS232_1 device.
27,20,1	Set the RTS hardware handshake's output to low/inactive (< 3V). Syntax: SEND_STRING <DEV>,"27,20,1" Example: SEND_STRING RS232_1,"27,20,1" Sets the RTS hardware handshake's output to low on the RS232_1 device.

IR / Serial Ports Channels

IR / Serial Ports Channels	
CHANNELS:	Description
00001 - 00229	IR commands.
00229 - 00253	May be used for system call feedback.
00254	Power Fail. (Used w/ 'PON' and 'POF' commands).
00255	Power status. (Shadows I/O Link channel status).
00256 - 65000	IR commands.
65000 - 65534	Future use.

NOTE: The NI series of NetLinx Masters support Serial control via the IR/RX port when using firmware version 300 or greater.

IR RX Port Channels

IR / Serial Ports Channels	
00001 - 00255	PUSH and RELEASE channels for the received IR code.

IR/Serial SEND_COMMANDS

The following IR and IR/Serial Send_Commands generate control signals for external equipment. In these examples: <DEV> = device.

IR/Serial SEND_COMMANDS	
Command	Description
CAROFF	<p>Disable the IR carrier signal until a 'CARON' command is received.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CAROFF' "</p> <p>Example: SEND_COMMAND IR_1, " 'CAROFF' "</p> <p>Stops transmitting IR carrier signals to the IR_1 port.</p>
CARON	<p>Enable the IR carrier signals (default).</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CARON' "</p> <p>Example: SEND_COMMAND IR_1, " 'CARON' "</p> <p>Starts transmitting IR carrier signals to the IR_1 port.</p>
CH	<p>Send IR pulses for the selected channel. All channels below 100 are transmitted as two digits.</p> <ul style="list-style-type: none"> • If the IR code for ENTER (function #21) is loaded, an Enter will follow the number. • If the channel is greater than or equal to (>=) 100, then IR function 127 or 20 (whichever exists) is generated for the one hundred digit. • Uses 'CTON' and 'CTOF' times for pulse times. <p>Syntax: SEND_COMMAND <DEV>, " 'CH' ,<channel number> "</p> <p>Variable: channel number = 0 - 199.</p> <p>Example: SEND_COMMAND IR_1, " 'CH' ,18 "</p> <p>This device performs the following:</p> <ul style="list-style-type: none"> • Transmits IR signals for 1 (IR code 11). The transmit time is set with the CTON command. • Waits until the time set with the CTOF command elapses. • Transmits IR signals for 8 (IR code 18). • Waits for the time set with the CTOF command elapses. If the IR code for Enter (IR code 21) is programmed, the Controller performs the following steps. <ol style="list-style-type: none"> 1) Transmits IR signals for Enter (IR code 21). 2) Waits for the time set with the CTOF command elapses.
CP	<p>Halt and Clear all active or buffered IR commands, and then send a single IR pulse. Set the Pulse and Wait times with the 'CTON' and 'CTOF' commands.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CP' ,<code> "</p> <p>Variable: code = IR port's channel value 0 - 252 (253 - 255 reserved).</p> <p>Example: SEND_COMMAND IR_1, " 'CP' ,2 "</p> <p>Clears the active/buffered commands and pulses IR_1 port's channel 2.</p>
CTOF	<p>Set the duration of the Off time (no signal) between IR pulses for channel and IR function transmissions. Off time settings are stored in non-volatile memory. This command sets the delay time between pulses generated by the 'CH' or 'XCH' send commands in tenths of seconds.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CTOF' ,<time> "</p> <p>Variable: time = 0 - 255. Given in 1/10ths of a second. Default is 5 (0.5 seconds).</p> <p>Example: SEND_COMMAND IR_1, " 'CTOF' ,10 "</p> <p>Sets the off time between each IR pulse to 1 second.</p>

IR/Serial SEND_COMMANDS (Cont.)	
Command	Description
CTON	<p>Set the total time of IR pulses transmitted and is stored in non-volatile memory. This command sets the pulse length for each pulse generated by the 'CH' or 'XCH' send commands in tenths of seconds.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'CTON', <time>"</p> <p>Variable: time = 0 - 255. Given in 1/10ths of a second. Default is 5 (0.5 seconds).</p> <p>Example: SEND_COMMAND IR_1, " 'CTON', 20" Sets the IR pulse duration to 2 seconds.</p>
GET BAUD	<p>Get the IR port's current DATA mode communication parameters. The port sends the parameters to the device that requested the information. Only valid if the port is in Data Mode (see SET MODE command). The port responds with:</p> <p><port #> <baud>,<parity>,<data bits>,<stop bits></p> <p>Syntax: SEND_COMMAND <DEV>, " 'GET BAUD' "</p> <p>Example: SEND_COMMAND IR_1, " 'GET BAUD' "</p> <p>System response example: PORT 9 IR,CARRIER,IO LINK 0</p>
GET MODE	<p>Poll the IR/Serial port's configuration parameters and report the active mode settings to the device requesting the information. The port responds with:</p> <p><port #> <mode>,<carrier>,<io link channel>.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'GET MODE' "</p> <p>Example: SEND_COMMAND IR_1, " 'GET MODE' "</p> <p>The system could respond with: PORT 4 IR,CARRIER,IO LINK 0</p>
IROFF	<p>Halt and Clear all active or buffered IR commands being output on the designated port.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'IROFF' "</p> <p>Example: SEND_COMMAND IR_1, " 'IROFF' "</p> <p>Immediately halts and clears all IR output signals on the IR_1 port.</p>
POD	<p>Disable previously active 'PON' (power on) or 'POF' (power off) command settings. Channel 255 changes are enabled. This command is used in conjunction with the I/O Link command.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'POD' "</p> <p>Example: SEND_COMMAND IR_1, " 'POD' "</p> <p>Disables the 'PON' and 'POF' command settings on the IR_1 device.</p>
POF	<p>Turn Off a device connected to an IR port based on the status of the corresponding I/O Link input. If at any time the IR sensor input reads that the device is ON (such as if someone turned it on manually at the front panel), IR function 28 (if available) or IR function 9 is automatically generated in an attempt to turn the device back OFF. If three attempts fail, the IR port will continue executing commands in the buffer.</p> <p>If there are no commands in the buffer, the IR port will continue executing commands in the buffer and trying to turn the device OFF until a 'PON' or 'POD' command is received. If the IR port fails to turn the device OFF, a PUSH and RELEASE is made on channel 254 to indicate a power failure error. You can only use the 'PON' and 'POF' commands when an IR device has a linked I/O channel. Channel 255 changes are disabled after receipt of this command.</p> <p>You can only use the 'PON' and 'POF' commands when an IR device has a linked I/O channel.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'POF' "</p> <p>Example: SEND_COMMAND IR_1, " 'POF' "</p> <p>Sends power down IR commands 28 (if present) or 9 to the IR_1 device.</p>

IR/Serial SEND_COMMANDS (Cont.)	
Command	Description
PON	<p>Turn On a device connected to an IR port based on the status of the corresponding I/O Link input. If at any time the IR sensor input reads that the device is OFF (such as if one turned it off manually at the front panel), IR function 27 (if available) or IR function 9 is automatically generated in an attempt to turn the device back ON. If three attempts fail, the IR port will continue executing commands in the buffer and trying to turn the device On.</p> <p>If there are no commands in the buffer, the IR port will continue trying to turn the device ON until a 'POF' or 'POD' command is received. If the IR port fails to turn the device ON, a PUSH and RELEASE is made on channel 254 to indicate a power failure error.</p> <p>You can only use the 'PON' and 'POF' commands when an IR device has a linked I/O channel. Channel 255 changes are disabled after receipt of this command.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'PON' "</p> <p>Example: SEND_COMMAND IR_1, " 'PON' "</p> <p>Sends power up IR commands 27 or 9 to the IR_1 port.</p>
PTOF	<p>Set the time duration between power pulses in .10-second increments. This time increment is stored in permanent memory. This command also sets the delay between pulses generated by the 'PON' or 'POF' send commands in tenths of seconds. It also sets the delay required after a power ON command before a new IR function can be generated. This gives the device time to power up and get ready for future IR commands.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'PTOF' ,<time> "</p> <p>Variable: time = 0 - 255. Given in 1/10ths of a second. Default is 15 (1.5 seconds).</p> <p>Example: SEND_COMMAND IR_1, " 'PTOF' ,15 "</p> <p>Sets the time between power pulses to 1.5 seconds for the IR_1 device.</p>
PTON	<p>Set the time duration of the power pulses in .10-second increments. This time increment is stored in permanent memory. This command also sets the pulse length for each pulse generated by the 'PON' or 'POF' send commands in tenths of seconds.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'PTON' ,<time> "</p> <p>Variable: time = 0 - 255. Given in 1/10ths of a second. Default is 5 (0.5 seconds).</p> <p>Example: SEND_COMMAND IR_1, " 'PTON' ,15 "</p> <p>Sets the duration of the power pulse to 1.5 seconds for the IR_1 device.</p>
SET BAUD	<p>Set the IR port's DATA mode communication parameters. Only valid if the port is in Data Mode (see SET MODE command).</p> <p>Syntax: SEND_COMMAND <DEV>," 'SET BAUD <baud>,<parity>,<data>,<stop>' "</p> <p>Variables: baud = baud rates are: 19200, 9600, 4800, 2400, and 1200. parity = N (none), O (odd), E (even), M (mark), S (space). data = 7 or 8 data bits. stop = 1 and 2 stop bits.</p> <p>Example: SEND_COMMAND IR_1, " 'SET BAUD 9600,N,8,1' "</p> <p>Sets the IR_1 port's communication parameters to 9600 baud, no parity, 8 data bits, and 1 stop bit.</p> <p><i>Note: The maximum baud rate for ports using SERIAL mode is 19200. Also, SERIAL mode works best when using a short cable length (< 10 feet).</i></p>
SET IO LINK	<p>Link an IR or Serial port to a selected I/O channel for use with the 'DE', 'POD', 'PON', and 'POF' commands. The I/O status is automatically reported on channel 255 on the IR port. The I/O channel is used for power sensing (via a PCS or VSS). A channel of zero disables the I/O link.</p> <p>Syntax: SEND_COMMAND <DEV>," 'SET IO LINK <I/O number>' "</p> <p>Variable: I/O number = 1 - 8. Setting the I/O channel to 0 disables the I/O link.</p> <p>Example: SEND_COMMAND IR_1, " 'SET IO LINK 1' "</p> <p>Sets the IR_1 port link to I/O channel 1. The IR port uses the specified I/O input as power status for processing 'PON' and 'POF' commands.</p>

IR/Serial SEND_COMMANDs (Cont.)	
Command	Description
SET MODE	<p>Set the IR/Serial ports for IR or Serial-controlled devices to either <i>IR</i>, <i>Serial</i>, or <i>Data</i> mode.</p> <p>Syntax: SEND_COMMAND <DEV>, 'SET MODE <mode>' "</p> <p>Variable: mode = IR, SERIAL, or DATA.</p> <p>Example: SEND_COMMAND IR_1, " 'SET MODE IR ' "</p> <p>Sets the IR_1 port to IR mode for IR control.</p> <p><i>Note: The maximum baud rate for ports using SERIAL mode is 19200. Also, SERIAL mode works best when using a short cable length (< 10 feet).</i></p>
SP	<p>Generate a single IR pulse. Use the 'CTON' to set pulse lengths and the 'CTOF' for time Off between pulses.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'SP', <code> "</p> <p>Variable: code = IR code value 1 - 252 (253-255 reserved).</p> <p>Example: SEND_COMMAND IR_1, " 'SP', 25 "</p> <p>Pulses IR code 25 on IR_1 device.</p>
XCH	<p>Transmit the selected channel IR codes in the format/pattern set by the 'XCHM' send command.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'XCH <channel>' "</p> <p>Variable: channel = 0 - 9999.</p> <p>Example: For detailed usage examples, refer to the 'XCHM' command.</p> <p><i>Note: This command supports 4-digit channels.</i></p>
XCHM	<p>Changes the IR output pattern for the 'XCH' send command.</p> <p>Syntax: SEND_COMMAND <DEV>, " 'XCHM-<extended channel mode>' "</p> <p>Variable: extended channel mode = 0 - 4.</p> <p>Example: SEND_COMMAND IR_1, " 'XCHM-3' "</p> <p>Sets the IR_1 device's extended channel command to mode 3.</p> <p>Mode 0 Example (default): [x][x]<x><enter></p> <p>SEND_COMMAND IR_1, " 'XCH-3' "</p> <p>Transmits the IR code as 3-enter.</p> <p>SEND_COMMAND IR_1, " 'XCH-34' "</p> <p>Transmits the IR code as 3-4-enter.</p> <p>SEND_COMMAND IR_1, " 'XCH-343' "</p> <p>Transmits the IR code as 3-4-3-enter.</p> <p>Mode 1 Example: <x> <x> <x> <enter></p> <p>SEND_COMMAND IR_1, " 'XCH-3' "</p> <p>Transmits the IR code as 0-0-3-enter.</p> <p>SEND_COMMAND IR_1, " 'XCH-34' "</p> <p>Transmits the IR code as 0-3-4-enter.</p> <p>SEND_COMMAND IR_1, " 'XCH-343' "</p> <p>Transmits the IR code as 3-4-3-enter.</p> <p>Mode 2 Example: <x> <x> <x></p> <p>SEND_COMMAND IR_1, " 'XCH-3' "</p> <p>Transmits the IR code as 0-0-3.</p> <p>SEND_COMMAND IR_1, " 'XCH-34' "</p> <p>Transmits the IR code as 0-3-4.</p> <p>SEND_COMMAND IR_1, " 'XCH-343' "</p> <p>Transmits the IR code as 3-4-3.</p>

IR/Serial SEND_COMMANDS (Cont.)	
Command	Description
XCHM (Cont.)	<p>Mode 3 Example: <code>[[100][100]...] <x> <x></code></p> <p><code>SEND_COMMAND IR_1, " 'XCH-3' "</code> Transmits the IR code as 0-3.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-34' "</code> Transmits the IR code as 3-4.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-343' "</code> Transmits the IR code as 100-100-100-4-3.</p> <p>Mode 4: Mode 4 sends the same sequences as the 'CH' command. Only use Mode 4 with channels 0 - 199.</p> <p>Mode 5 Example: <code><x><x><x><x><enter></code></p> <p><code>SEND_COMMAND IR_1, " 'XCH-3' "</code> Transmits the IR code as 0-0-0-3-enter.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-34' "</code> Transmits the IR code as 0-0-3-4-enter.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-343' "</code> Transmits the IR code as 0-3-4-3-enter.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-1343' "</code> Transmits the IR code as 1-3-4-3-enter.</p> <p>Mode 6 Example: <code><x><x><x><x></code></p> <p><code>SEND_COMMAND IR_1, " 'XCH-3' "</code> Transmits the IR code as 0-0-0-3.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-34' "</code> Transmits the IR code as 0-0-3-4.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-343' "</code> Transmits the IR code as 0-3-4-3.</p> <p><code>SEND_COMMAND IR_1, " 'XCH-1343' "</code> Transmits the IR code as 1-3-4-3.</p>

Input/Output SEND_COMMANDS

NOTE: I/O ports: Port 4 (NI-700). Channels: 1 - 8 I/O channels.

The following SEND_COMMANDS program the I/O ports on the Integrated Controller.

I/O SEND_COMMANDS	
Command	Description
GET DBT	<p>Get Debounce Time</p> <p>Syntax: <code>GET DBT <n></code></p> <p>Variable: n = the channel number of the I/O input port</p>
SET DBT	<p>Set Debounce Time</p> <p>Syntax: <code>SET DBT <n><v></code></p> <p>Variables: n = the channel number of the I/O input port v = Value 1-50 which sets the debounce time in increments of 50ms</p> <p>Example: <code>SEND_COMMAND 5001:17:0, 'SET DBT 1 10'</code> Sets channel 1 on the I/O port to 50ms Debounce time.</p>
GET INPUT	<p>Get the active state for the selected channels. An active state can be high (logic high) or low (logic low or contact closure). Channel changes, Pushes, and Releases generate reports based on their active state. The port responds with either 'HIGH' or 'LOW'.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, " 'GET INPUT <channel>' "</code></p> <p>Variable: channel = Input channel 1 - 8.</p> <p>Example: <code>SEND_COMMAND IO, " 'GET INPUT 1' "</code> Gets the I/O port's active state.</p> <p>The system could respond with: INPUT1 ACTIVE HIGH</p>

I/O SEND_COMMANDs (Cont.)	
Command	Description
SET INPUT	<p>Set the input channel's active state. An active state can be high (logic high) or low (logic low or contact closure). Channel changes, Pushes, and Releases generate reports based on their active state. Setting an input to ACTIVE HIGH will disable the ability to use that channel as an output.</p> <p>Syntax: <code>SEND_COMMAND <DEV>, "'SET INPUT <channel> <state>'"</code></p> <p>Variable: channel = Input channel 1 - 8. state = Active state HIGH or LOW (default).</p> <p>Example: <code>SEND_COMMAND IO, "'SET INPUT 1 HIGH'"</code></p> <p>Sets the I/O channel to detect a high state change, and disables output on the channel.</p>

Terminal (Program Port/Telnet) Commands

Overview

There are two types of terminal communications available on NetLinx Integrated Controllers:

- **Program Port** - The "Program" port is a RS232 port located on the rear panel of the Master that allows terminal communication with the Master. This type of terminal communication requires that you are physically connected to the Master to access the configuration options and commands supported. Since this method of terminal communication requires physical proximity as well as a physical connection to the Master, it is the most secure form of terminal communication. For this reason, all Security Configuration options are only available via the Program port (and cannot be accessed via Telnet).
- **Telnet** - This type of terminal communication can be accessed remotely, via TCP/IP. It is a less secure form of terminal communication, since it does not require a physical connection to the Master to connect. Further, the Telnet interface exposes information to the network (which could be intercepted by an unauthorized network client).

NOTE: *It is recommended that you make initial configurations as well as subsequent changes via the WebConsole. Refer to the Onboard WebConsole User Interface section on page 31.*

Refer to the *Terminal Commands* section on page 87 for a listing of all commands available in a terminal session. Note that all commands in the table are available for both Program Port and Telnet sessions, with two exceptions: "Help Security" and "Resetadminpassword". These commands are only available via a Program Port connection.

Establishing a Terminal Connection Via the Program Port

To establish a terminal session via the Program Port, the PC COM (RS232) port on your PC must be physically connected to the Program port on the NetLinx Master. You will also need to know the current baud rate setting for the Master, so that you can verify that it matches the settings on your PC.

1. In Windows, go to **Start > Programs > Accessories > Communications** to launch the *HyperTerminal* application to open the *Connection Description* dialog.
2. Enter any text into the *Name* field and click **OK**. This action invokes the *Connect to* dialog.
3. Click the down-arrow from the *Connect Using* field, and select the PC COM port being used for communication by the target Master and click **OK** when done.
4. From the *Bits per second* field, click the down-arrow and select the baud rate being used by the target Master.
5. Configure the remaining communication parameters as follows:
 - Data Bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: None
6. Click **OK** to complete the communication parameters and open a new Terminal window.
7. Type **echo on** to view the characters while entering commands. If that does not work, press <Enter> key on your keyboard.

NOTE: *It is very important to execute the 'logout' command prior to disconnecting from a Master. Simply removing the RS-232 connector from the Program Port maintains your logged-in status until you either return to logout via a new session or reboot the target Master.*

PC COM Port Communication Settings

Be sure that your PC's COM port and terminal program's communication settings match those in the table below:

PC COM Port Communication Settings	
• Baud:	38400 (default)
• Parity:	None
• Data Bits:	8
• Stop Bits:	1
• Flow Control:	None

Establishing a Terminal Connection Via Telnet

1. In your Windows taskbar, go to **Start > Run** to open the Run dialog.
2. Type **cmd** in the *Open* field and click **OK** to open an instance of the Windows command interpreter (Cmd.exe).
3. In the CMD (command), type "**telnet**" followed by a space and the Master's IP Address info.

Example:

```
>telnet XXX.XXX.XXX.XXX
```


4. Press *Enter*.
 - Unless Telnet security is enabled, a session will begin with a welcome banner:


```
Welcome to NetLinx vX.XX.XXX Copyright AMX Corp. 1999-2006
>
```
 - If Telnet security is enabled, type in the word **login** to be prompted for a Username and Password before gaining access to the Master.
5. Enter your username to be prompted for a password.
 - If the password is correct you will see the welcome banner.
 - If the password is incorrect, the following will be displayed:


```
Login: User1
Password: *****
Login not authorized. Please try again.
```

After a delay, another login prompt will be displayed to allow you to try again.

If after 5 prompts, the login information is not entered correctly, the following message will be displayed and the connection closed:

```
Login not allowed. Goodbye!
```
 - To restrict access to the Master via terminal connection, enable Configuration Security on the Master via the CONFIGURATION SECURITY option in the Security Options menu - see the *Security Options Menu* section on page 104 for details). With Configuration Security enabled, a valid user with Configuration Security access will have to login before being able to execute Telnet commands. If security is not enabled, these commands are available to all.
 - If a connection is opened, but a valid a username / password combination is not entered (i.e. just sitting at a login prompt), the connection will be closed after one minute.

Terminal Commands

The Terminal commands listed in the following table can be sent directly to the Master via either a Program Port or a Telnet terminal session (with the exception of the "*Help Security*" and "*Resetadminpassword*" commands, which are only available to a Program Port (RS232) connection. In your terminal program, type "**Help**" or a question mark ("?") and <Enter> to access the Help Menu, and display the Program port commands described below:

Terminal Commands	
Command	Description
----- Help ----- <D:P:S>	(Extended diag messages are OFF) <D:P:S>: Device:Port:System. If omitted, assumes Master.
? or Help	Displays this list of commands.
AUTO LOCATE (ENABLE DISABLE STATUS)	Enables/Disables/queries the auto locate feature on the Master. Auto locate adds additional broadcast information for use by AMX Touch Panel devices configured in <i>Auto connect</i> mode.
BOOT STATUS	Returns the current boot state of the master. Response is either "Boot in progress." or "Boot complete."
CLEAR AUDIT LOG	Purges the entire database of audit records. See the <i>SHOW AUDIT LOG</i> section on page 97.
CLEAR MAX BUFFERS	Reset the max buffers high-water counters to zero.
CLEAR PERSISTENT VARS	Clear out the persistent/non-volatile variable values without having to download a new NetLinx program.
CPU USAGE	Diagnostic tool to calculate a running average of the current CPU usage of the Master.
DATE	Displays the current date and day of the week. Example: >DATE 10/31/2004 Wed
DATE/TIME ON OFF	ENABLES/DISABLES the addition of a date time stamp to the terminal logs displayed via "msg on" DATE/TIME is Off by default at the start of each Terminal/Telnet session.
DEVICE HOLDOFF ON OFF	Sets the Master to holdoff devices (i.e. does not allow them to report ONLINE) until all objects in the NetLinx program have completed executing the <i>DEFINE_START</i> section. If set to ON, any messages to devices in <i>DEFINE_START</i> will be lost, however, this prevents incoming messages being lost in the Master upon startup. When <i>DEVICE_HOLDOFF</i> is ON, you must use <i>ONLINE</i> events to trigger device startup <i>SEND_COMMANDS</i> . By default, <i>DEVICE_HOLDOFF</i> is OFF to maintain compatibility with Axxess systems where devices are initialized in <i>DEFINE_START</i> . <i>Note: This command sets the state of the device holdoff. The GET DEVICE HOLDOFF command reveals whether the state is On or Off (see page 88).</i> Example: >Device Holdoff ON Device Holdoff Set.

Terminal Commands (Cont.)	
Command	Description
DEVICE STATUS <D:P:S>	Displays a list of all active (on) channels for the specified D:P:S. If you enter <code>DEVICE STATUS</code> without the D:P:S variable, the Master displays ports, channels, and version information.
DIPSWITCH	Displays the current state of the Master's hardware dip switches.
DISK FREE	Displays the total bytes of free space available on the Master. Example: >DISK FREE The disk has 2441216 bytes of free space.
DNS LIST <D:P:S>	Displays the DNS configuration of a specific device including: <ul style="list-style-type: none"> • Domain suffix • Configured DNS IP Information Example: >DNS LIST [0:1:0] Domain suffix:amx.com The following DNS IPs are configured Entry 1-192.168.20.5 Entry 2-12.18.110.8 Entry 3-12.18.110.7
ECHO ON OFF	Enables/Disables echo (display) of typed characters.
GET DEVICE HOLDOFF	Displays the state of the Master's device holdoff setting. <i>Note: This command reveals the state of the device holdoff set using the <code>DEVICE HOLDOFF ON OFF</code> command (see page 87).</i> Example: >GET DEVICE HOLDOFF Device Holdoff is off.
GET DUET MEMORY	Display the amount of memory allocated for Duet Java pool. This is the current Java memory heap size as measured in Megabytes. An example is a value of 5 = 5 MB.
GET ETHERNET MODE	Displays the current LAN configuration setting. Settings are either "auto" in which the LAN driver will discover it's settings based on the network it is connected to OR <speed> and <duplex> where speed is either 10 or 100 and duplex is either full or half. Example: >GET ETHERNET MODE Ethernet mode is auto. <i>Note: See <code>SET ETHERNET MODE</code>.</i>
GET IP <D:P:S>	Displays the IP configuration of a device. If you enter <code>GET IP</code> without the D:P:S variable, the Master displays its D:P:S, Host Name, Type (<i>DHCP</i> or <i>Static</i>), IP Address, Subnet Mask, Gateway IP, and MAC Address. Example: >GET IP [0:1:50] IP Settings for 0:1:50 HostName MLK-INSTRUCTOR Type DHCP IP Address 192.168.21.101 Subnet Mask 255.255.255.0 Gateway IP 192.168.21.2 MAC Address 00:60:9f:90:0d:39
HELP SECURITY	Displays security related commands. <i>Note: This command is only available to Program Port terminal sessions. It is not available to Telnet sessions (see the Overview section on page 86).</i> Example: >HELP SECURITY >logout Logout and close secure session >setup security Access the security setup menus
ICSPMON ENABLED DISABLED [PORT]	Enables or disables ICSP monitoring out the specified IP port. By enabling <code>icspm</code> on an IP port, an external application could connect to that port and "listen" on the ICSP traffic.
IP STATUS	Provides information about the current NetLinx IP Connections. Example: >IP STATUS NetLinx IP Connections No active IP connections

Terminal Commands (Cont.)	
Command	Description
MEM	Displays the largest free block of the Master's memory. Example: >MEM The largest free block of memory is 11442776 bytes.
MSG ON OFF	Enables/Disables extended diagnostic messages. <ul style="list-style-type: none"> MSG On [error warning info debug] sets the terminal program to display log messages generated by the Master. The level of log printed to the terminal window depends both on the level used when sending the message and the output level selected with "msg on." For example if log output is enabled via "msg on warning" then logs produced at levels AMX_ERROR and AMX_WARNING will be displayed, but not logs produced at levels AMX_INFO or AMX_DEBUG. The order of severity from highest to lowest is ERROR, WARNING, INFO, DEBUG. If no severity is supplied with "msg on", the default setting is WARNING. MSG OFF disables the display. Example: > MSG ON Extended diagnostic information messages turned on. > MSG OFF Extended diagnostic information messages turned off.
MSG STATS	Calculates incoming and outgoing messages over a time interval.
NETLIX LOG LEVEL	Configure the current setting for the NetLinx AMX_LOG facility. Example: >netlinx log level NetLinx Log Level is WARNING Set NetLinx Log level to : 1) ERROR 2) WARNING 3) INFO 4) DEBUG Enter selection or press return to keep current level: >3 NetLinx Log Level set to INFO
OFF [D:P:S or NAME,CHAN]	Turns off a specified channel on a device. The device can be on any system that the Master you are connected to is able to reach. You can specify the device number, port, and system, or the name of the device that is defined in the DEFINE_DEVICE section of the program. Syntax: OFF[name,channel] -or- OFF[D:P:S,channel] Example: >OFF[5001:7:4] Sending Off[5001:7:4]
ON [D:P:S or NAME,CHAN]	Turns on a specified channel on a device. The device can be on any system that the Master you are connected to is able to reach. You can specify the device number, port, and system, or the name of the device that is defined in the DEFINE_DEVICE section of the program. Syntax: ON[name,channel] -or- ON[D:P:S,channel] Example: >ON[5001:7:4] Sending On[5001:7:4]

Terminal Commands (Cont.)	
Command	Description
PASS [D:P:S or NAME]	<p>Sets up a pass through mode to a device. In pass through mode, any string received by the device is displayed on the screen, and anything typed is sent as a string to the device. The device can be on any system that the Master you are connected to is able to reach. You can specify the device number, port, and system, or the name of the device that is defined in the <code>DEFINE_DEVICE</code> section of the program.</p> <ul style="list-style-type: none"> • Mode is exited by ++ ESC ESC. • Display Format is set by ++ ESC n <p>Where n =</p> <ul style="list-style-type: none"> A, format = ASCII D, format = Decimal H = Hex <p><i>Note: Refer to the ESC Pass Codes section on page 101 for detailed descriptions of the supported pass codes.</i></p> <p>Example:</p> <pre>>pass[5001:7:4] Entering pass mode.</pre>
PHYSICAL STATUS	Retrieve the current LED states.
PING [ADDRESS]	<p>Pings an address (IP or URL), to test network connectivity to and confirms the presence of another networked device. The syntax is just like the PING application in Windows or Linux.</p> <p>Example:</p> <pre>>ping 192.168.29.209 192.168.29.209 is alive.</pre>
PROGRAM INFO	<p>Displays a list of program files and modules residing on the Master.</p> <p>Example:</p> <pre>>PROGRAM INFO -- Program Name Info -- Module Count = 1 1 Name is i!-PCLinkPowerPointTest -- File Names = 2 1 = C:\Program Files\AMX Applications\i!-PCLinkPowerPoint 2 = C:\Program Files\Common Files\AMXShare\AXIs\NetLinx.axi 2 = Name is MDLPP -- File Names = 2 1 C:\AppDev\i!-PCLink-PowerPoint\i!-PCLinkPowerPointMod.axs 2 C:\Program files\Common Files\AMXShare\AXIs\NetLinx.axi</pre>
PULSE [D:P:S or NAME,CHAN]	<p>Pulses a specified channel on a device on and off. The device can be on any system the Master you are connected to can reach. You can specify the device number, port, and system; or the name of the device that is defined in the <code>DEFINE_DEVICE</code> section of the program.</p> <p>Example:</p> <pre>>PULSE[50001:8:50,1] Sending Pulse[50001:8:50,1]</pre>
PWD	<p>Displays the name of the current directory.</p> <p>Example:</p> <pre>pwd The current directory is doc:</pre>
REBOOT <D:P:S>	<p>Reboots the Master or specified device.</p> <p>Example:</p> <pre>>REBOOT [0:1:0] Rebooting...</pre>
RENEW DHCP	<p>Renews/Releases the current DHCP lease for the Master.</p> <p><i>Note: The Master must be rebooted to acquire a new DHCP lease.</i></p> <p>Example:</p> <pre>>RENEW DHCP</pre>
RESETADMINPASSWORD	<p>This command resets the administrator password back to "password".</p> <p><i>Note: This command is only available to Program Port terminal sessions. It is not available to Telnet sessions (see the Overview section on page 86).</i></p>
RESET FACTORY	<p>Resets the Master to factory default state including removal of all security settings, removal of all user files, resetting to DHCP, and loading an empty NetLinx program. The Master will be effectively in an out-of-box state.</p>

Terminal Commands (Cont.)	
Command	Description
ROUTE MODE DIRECT NORMAL	<p>Sets the Master-to-Master route mode:</p> <ul style="list-style-type: none"> • Normal mode - allows a Master to communicate with any Master accessible via the routing tables (shown with the <code>SHOW ROUTE</code> command - see page 99). This includes a directly-connected Master (route metric =1) and indirectly connected Masters (route metric greater than 1, but less than 16). • Direct mode - allows communication only with Masters that are directly connected (route metric = 1). Indirectly connected Masters cannot be communicated within this mode. <p>Examples:</p> <pre>>ROUTE MODE DIRECT Route Mode "Direct" Set >ROUTE MODE NORMAL Route Mode "Normal" Set</pre>
SEND_COMMAND D:P:S or NAME,COMMAND	<p>Sends a specified command to a device. The device can be on any system that the Master you are connected to can reach. You can specify the device number, port, and system; or the name of the device that is defined in the <code>DEFINE_DEVICE</code> section of the Program.</p> <p>The data of the string is entered with the following NetLinX string syntax:</p> <pre>SEND_COMMAND 1:1:1,"This is a test',13,10" SEND_COMMAND RS232_1,"This is a test',13,10"</pre>
SEND_LEVEL <D:P:S>, <LEVEL ID>,<LEVEL VALUE>	<p>Allows the user to set a level on a device via the Master's Telnet/program port interface.</p>
SEND_STRING D:P:S or NAME,STRING	<p>Sends a string to a specified device. The device can be on any system that the Master you are connected to can reach. You can specify the device number, port, and system; or the name of the device defined in the <code>DEFINE_DEVICE</code> section of the Program.</p> <p>The data of the string is entered with NetLinX string syntax.</p>
SET DATE	<p>Prompts you to enter the new date for the Master. When the date is set on the Master, the new date will be reflected on all devices in the system that have clocks (i.e. touch panels). By the same token, if you set the date on any system device, the new date will be reflected on the system's Master, and on all connected devices.</p> <p><i>Note: This command will not update clocks on devices connected to another Master (in Master-to-Master systems).</i></p> <p>Example:</p> <pre>>SET DATE Enter Date: (mm/dd/yyyy) --></pre>
SET DNS <D:P:S>	<p>Sets up the DNS configuration of a device. This command prompts you to enter a Domain Name, DNS IP #1, DNS IP #2, and DNS IP #3. Then, enter Y (yes) to approve/store the information in the Master. Entering N (no) cancels the operation.</p> <p><i>Note: The device must be rebooted to enable new settings.</i></p> <p>Example:</p> <pre>>SET DNS [0:1:0] -- Enter New Values or just hit Enter to keep current settings -- Enter Domain Suffix: amx.com Enter DNS Entry 1 : 192.168.20.5 Enter DNS Entry 2 : 12.18.110.8 Enter DNS Entry 3 : 12.18.110.7 You have entered: Domain Name: amx.com DNS Entry 1: 192.168.20.5 DNS Entry 2: 12.18.110.8 DNS Entry 3: 12.18.110.7 Is this correct? Type Y or N and Enter --> Y Settings written. Device must be rebooted to enable new settings</pre>
SET DUET MEMORY	<p>Set the amount of memory allocated for Duet Java pool. This is the current Java memory heap size as measured in Megabytes. This feature is used so that if a NetLinX program requires a certain size of memory be allotted for its currently used Duet Modules, it can be reserved on the target Master.</p> <p>Valid values are:</p> <ul style="list-style-type: none"> • 2 - 8 for 32MB systems • 2 - 36 for 64MB systems. <p>This setting does not take effect until the next reboot.</p> <p><i>Note: If you are trying to accomplish this setting of the Duet Memory size via a NetLinX program, the program command "DUET_MEM_SIZE_SET(int)" should call REBOOT() following a set.</i></p>

Terminal Commands (Cont.)	
Command	Description
SET ETHERNET MODE <CMD>	<p>This command sets the current LAN configuration.</p> <ul style="list-style-type: none"> • <CMD> = "auto" or <speed> <duplex> where <speed> = 10 100 and <duplex> = full half <p>Examples: Set Ethernet mode auto Set Ethernet mode 100 full Set Ethernet mode 10 half</p> <p>When new mode is set, unit will respond with: Ethernet mode set. Change takes effect after reboot. <i>Note: See the GET ETHERNET MODE section on page 88.</i></p>
SET FTP PORT	<p>Enables/Disables the Master's IP port listened to for FTP connections.</p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example: >SET FTP PORT FTP is enabled Do you want to enable (e) or disable (d) FTP (enter e or d): FTP enabled, reboot the Master for the change to take effect.</p>
SET HTTP PORT	<p>Sets the Master's IP port listened to for HTTP connections.</p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example: >SET HTTP PORT Current HTTP port number = 80 Enter new HTTP port number (Usually 80) (0=disable HTTP): Setting HTTP port number to New HTTP port number set, reboot the Master for the change to take effect.</p>
SET HTTPS PORT	<p>Sets the Master's IP port listened to for HTTPS connections.</p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example: >SET HTTPS PORT Current HTTPS port number = 443 Enter new HTTPS port number (Usually 443) (0=disable HTTPS): Once you enter a value and press the ENTER key, you get the following message: Setting HTTPS port number to New HTTPS port number set, reboot the Master for the change to take effect.</p>
SET ICSP PORT	<p>Sets the Master's IP port listened to for ICSP connections.</p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example: >SET ICSP PORT Current ICSP port number = 1319 Enter new ICSP port number (Usually 1319) (0=disable ICSP): Once you enter a value and press the ENTER key, you get the following message: Setting ICSP port number to New ICSP port number set, reboot the Master for the change to take effect.</p>
SET ICSP TCP TIMEOUT	<p>Sets the timeout period for ICSP and i!-Web Control TCP connections.</p> <p><i>Note: The new timeout value is immediately (no reboot required).</i></p> <p>Example: >SET ICSP TCP TIMEOUT</p> <p>This will set the timeout for TCP connections for both ICSP and i!-Web Control. When no communication has been detected for the specified number of seconds, the socket connection is closed. ICSP and i!-Web Control have built-in timeouts and reducing the TCP timeout below these will cause undesirable results. The default value is 45 seconds.</p> <p>The current ICSP TCP timeout is 45 seconds Enter new timeout (in seconds): Once you enter a value and press the ENTER key, you get the following message: New timeout value set (in affect immediately).</p>

Terminal Commands (Cont.)	
Command	Description
SET IP <D:P:S>	<p>Sets the IP configuration of a specified device. Enter a Host Name, Type (DHCP or Fixed), IP Address, Subnet Mask, and Gateway IP Address.</p> <p><i>Note: For NetLinx Central Controllers, the "Host Name" can only consist of alphanumeric characters.</i></p> <ul style="list-style-type: none"> • Enter Y (yes) to approve/store the information into the Master. • Enter N (no) to cancel the operation. <p><i>Note: The Device must be rebooted to enable new settings.</i></p> <p>Example:</p> <pre>>SET IP [0:1:0] --- Enter New Values or just hit Enter to keep current settings --- Enter Host Name: MLK-INSTRUCTOR Enter IP type. Type D for DHCP or S for Static IP and then Enter: DHCP Enter Gateway IP: 192.168.21.2 You have entered: Host Name MLK-INSTRUCTOR Type DHCP Gateway IP 192.168.21.2 Is this correct? Type Y or N and Enter -> y Settings written. Device must be rebooted to enable new settings.</pre>
SET LOG COUNT	<p>Sets the number of entries allowed in the message log.</p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example:</p> <pre>>SET LOG COUNT Current log count = 1000 Enter new log count (between 50-10000):</pre> <p>Once you enter a value and press the ENTER key, you get the following message:</p> <pre>Setting log count to New log count set, reboot the Master for the change to take effect.</pre>
SET QUEUE SIZE	<p>Provides the capability to modify maximum message queue sizes for various threads.</p> <p>Example:</p> <pre>set queue size</pre> <p>This will set the maximum message queue sizes for several threads. Use caution when adjusting these values.</p> <p>Set Queue Size Menu:</p> <ol style="list-style-type: none"> 1. Interpreter (factory default=2000, currently=600) 2. Notification Manager (factory default=2000, currently=200) 3. Connection Manager (factory default=2000, currently=500) 4. Route Manager (factory default=400, currently=200) 5. Device Manager (factory default=500, currently=500) 6. Diagnostic Manager (factory default=500, currently=500) 7. TCP Transmit Threads (factory default=600, currently=200) 8. IP Connection Manager (factory default=800, currently=500) 9. Message Dispatcher (factory default=1000, currently=500) 10. Axlink Transmit (factory default=800, currently=200) 11. PhastLink Transmit (factory default=500, currently=500) 12. ICSNet Transmit (factory default=500, currently=500) 13. ICSP 232 Transmit (factory default=500, currently=500) 14. UDP Transmit (factory default=500, currently=500) 15. NI Device (factory default=500, currently=500) <p>Enter choice or press ESC.</p>

Terminal Commands (Cont.)	
Command	Description
SET SECURITY PROFILE	<p>Sets a pre-defined Security Profile (a grouped set of security settings). The Security Profile can be set to "none" (default setting), "Secure", or "DOD" (see below).</p> <p><i>Note: The Security Profile can only be configured via the terminal interface of the Master's Program port.</i></p> <p>Example:</p> <pre>set security profile</pre> <p>When you press Enter, the system responds with:</p> <pre>Current Security Profile = 0 (none) Enter new security profile (0=none, 1=secure, 2=DOD):</pre> <p>Once you enter a value and press Enter, the system responds with:</p> <pre>New security profile set, reboot the Master for change to fully take effect.</pre> <p>The three Security Profiles are described below:</p> <p>None (default):</p> <ul style="list-style-type: none"> No security is enabled and all Master interface ports are available including HTTP, HTTPS, Telnet, SSH, FTP and terminal access. Logins are not required on the Master's Web, Telnet and terminal interfaces. This is the default out-of-the-box configuration. <p>Secure:</p> <ul style="list-style-type: none"> Unsecured interface ports are disabled including HTTP, Telnet and FTP. Only HTTPS and SSH and terminal user ports are available. All user access requires a username/password login including HTTPS, SSH and terminal. NetLinx/ICSP security is enabled requiring all NetLinx devices connecting with the Master to provide username/password authentication and encryption. Passwords must conform to a stricter set of requirements. They must be at least 8 characters long and contain at least one upper and one lower case alpha, one numeric and one special character (excluding the blankspace). <p>Allowed Special Characters:</p> <p>The following special characters are allowed for use in User Name and Password entries:</p> <pre>!"#\$%&'()*+,-./:;<=>?@[\] ^ _ ` { } ~</pre> <p>Also allowed are any printable ASCII characters (including "space"): A-Z, a-z, 0-9.</p> <ul style="list-style-type: none"> Passwords cannot contain back-to-back duplicate characters. To ensure all account passwords conform to the new standard, all existing user accounts are deleted and the built-in 'administrator' and 'netlinx' account passwords are set to the secure default of 'Amx1234!' Failed login attempts will force a 4 second delay before a subsequent login attempt can occur. Three consecutive login failures from any location will cause a 15 minute lockout for the specified user account. If a bannertxt file is present in the Master's /user directory, the text from the bannertxt file will be included on the Master's Web login prompt. All user account access will be timed out after at most 15 minutes of inactivity by the user. Any activity after the timeout will cause the login prompt to be displayed and login will be required to regain access. The inactivity timer on an SSH and terminal session will be disabled if "msg on" logging is active. All account access including successful and failed logins and logouts will be recorded in persistent storage. Audit records will be retained for 90 days. The current audit logs can be viewed via SSH or terminal sessions using the "show audit log" command. The audit log can be manually cleared from SSH or terminal session using the "clear audit log" command. <p>DoD:</p> <p>DoD security profile has all of the security specifications of "secure" profile along with the following additional features:</p> <ul style="list-style-type: none"> The default Web login banner text consists of the following: <i>"This is a Department of Defense (DOD) computer system provided only for authorized U.S. Government use. This system may be monitored for all lawful purposes. All information, including personal information, placed on or sent over this system, may be monitored. Use of this DOD computer system, authorized or unauthorized, constitutes consent to monitoring of this system. Unauthorized use may subject you to criminal prosecution and penalties."</i> The default Web login banner text can be overridden by providing a bannertxt file in the /user directory. The SSH and terminal interface will display the following banner after a successful login: <i>"DOD use only! Subject to monitoring, reporting, prosecution, and penalties."</i>

Terminal Commands (Cont.)	
Command	Description
SET SECURITY PROFILE (Cont.)	Secure and DoD profile configuration can be tailored with more or less security features by manually altering the Master's configuration following the secure profile selection. For example, the Master can be put into "secure" profile and then the HTTP and Telnet interfaces can be manually re-enabled via their existing configuration mechanism. This would enable all of the new security features provided by the "secure" profile but still allow Master access via HTTP and Telnet. <i>Note: When transitioning from secure or DoD profile to the "non" profile, user accounts are NOT wiped and the "administrator" and "netlinx" accounts will retain their secure passwords.</i>
SET SNMP	Sets SNMP read and write community strings. This command invokes the SET SNMP sub-menu: <pre>>SET SNMP --- Enter New Values or just hit Enter to keep current settings SNMP Enabled (Y or N)? N y Enter System Description: NetLinx VxWorks SNMPv1/v2c Agent Enter System Contact: AMX LLC Enter System Location: Richardson, TX USA Enter Read community string: public Enter Write community string: private You have entered: Description = NetLinx VxWorks SNMPv1/v2c Agent Contact = AMX LLC Location = Richardson, TX USA Read Community = public Write Community = private Is this correct? Type Y or N and Enter-> Note: The "System Description", "System Contact" and "System Location" are the values that will be published for the Master via SNMP. The system must be rebooted once the new values are entered.</pre>
SET SSH PORT	Sets the Master's IP port listened to for SSH connections. <i>Note: The Master must be rebooted to enable new settings.</i> Example: <pre>>SET SSH PORT Current SSH port number = 22 Enter new SSH port number (Usually 22) (0=disable SSH): Once you enter a value and press the ENTER key, you get the following message: Setting SSH port number to 22 New SSH port number set, reboot the Master for the change to take effect.</pre>
SET SYSTEM NUMBER	Sets the system number for this Master. A reboot of the Master following the execution of this command is required for the change to take effect. Example: <pre>>set system number Current System number = 1 Enter new System number : 2 Setting System number to 2 New System number set, reboot the master for the change to take effect.</pre>
SET TELNET PORT	Sets the Master's IP port listened to for Telnet connections. <i>Note: The Master must be rebooted to enable new settings.</i> Example: <pre>>SET TELNET PORT Current telnet port number = 23 Enter new telnet port number (Usually 23) (0=disable Telnet): Once you enter a value and press the ENTER key, you get the following message: Setting telnet port number to 23 New telnet port number set, reboot the Master for the change to take effect.</pre>

Terminal Commands (Cont.)	
Command	Description
SET THRESHOLD	<p>Sets the Master's internal message thresholds. This command will set the thresholds of when particular tasks are pended. The threshold is the number of messages queued before a task is pended.</p> <p><i>Use extreme caution when adjusting these values.</i></p> <p><i>Note: The Master must be rebooted to enable new settings.</i></p> <p>Example:</p> <pre>>SET THRESHOLD</pre> <p>-- This will set the thresholds of when particular tasks are pended. The threshold is the number of messages queued before a task is pended.-- --Use extreme caution when adjusting these values.-- Current Interpreter Threshold = 2000 Enter new Interpreter Threshold (Between 1 and 2000)(Default=10):</p> <p>Once you enter a value and press the ENTER key, you get the following message:</p> <pre>Current Lontalk Threshold = 50 Enter new Lontalk Threshold (Between 1 and 2000) (Default=50):50 Current IP Threshold = 600 Enter new IP Threshold (Between 1 and 2000) (Default=200): 600 Setting Thresholds to: Interpreter 2000 Lontalk 50 IP 600</pre> <p>New thresholds set, reboot the Master for the changes to take effect.</p>
SET TIME	<p>Sets the current time. When the time is set on the Master, the new time will be reflected on all devices in the system that have clocks (i.e. touch panels). By the same token, if you set the time on any system device, the new time will be reflected on the system's Master, and on all connected devices.</p> <p><i>Note: This will not update clocks on devices connected to another Master (in Master-to-Master systems).</i></p> <p>Example:</p> <pre>>SET TIME Enter Date: (hh:mm:ss) -></pre>
SET TIMELINE LOOPCNT	Sets the Master's timeline/event max loopcount.
SET UDP BC RATE	<p>Sets the UDP broadcast rate. A broadcast message is sent by the Master to allow devices to discover the Master. This command allows the broadcast frequency to be changed or eliminate the broadcast message.</p> <p>Example:</p> <pre>>SET UPD BC RATE Current broadcast message rate is 5 seconds between messages. Enter broadcast message rate in seconds between messages (off=0 ; default=5) (valid values 0-300):</pre> <p>Once you enter a value and press the ENTER key, you get the following message:</p> <pre>Setting broadcast message rate to 300 seconds between messages New broadcast message rate set.</pre>
SET URL <D:P:S>	<p>Sets the initiated connection list URLs of a device. Enter the URL address and port number of another Master or device (that will be added to the URL list).</p> <ul style="list-style-type: none"> • Enter Y (yes) to approve/store the new addresses in the Master. • Enter N (no) to cancel the operation. <p>Example:</p> <pre>>SET URL [0:1:0] No URLs in the URL connection list Type A and Enter to Add a URL or Enter to exit. > a Enter URL -> 192.168.21.200 Enter Port or hit Enter to accept default (1319) -> Enter Type (Enter for permanent or T for temporary) -> URL Added successfully.</pre>

Terminal Commands (Cont.)	
Command	Description
SHOW LOG	<p>Displays the log of messages stored in the Master's memory. The Master logs all internal messages and keeps the most recent messages. The log contains:</p> <ul style="list-style-type: none"> • Entries starting with first specified or most recent • Date, Day, and Time message was logged • Which object originated the message • The text of the message: <pre>SHOW LOG [start] [end] SHOW LOG ALL</pre> <ul style="list-style-type: none"> - <start> specifies message to begin the display. - If start is not entered, the most recent message will be first. - If end is not entered, the last 20 messages will be shown. - If <ALL> is entered, all stored messages will be shown, starting with the most recent. <p>Example:</p> <pre>>SHOW LOG Message Log for System 50 Version: v2.10.75 Entry Date/Time Object Text ----- 1: 11-01-2001 THU 14:14:49 ConnectionManager Memory Available = 11436804 <26572> 2: 11-01-2001 THU 14:12:14 ConnectionManager Memory Available = 11463376 <65544> 3: 11-01-2001 THU 14:10:21 ConnectionManager Memory Available = 11528920 <11512> 4: 11-01-2001 THU 14:10:21 TelnetSvr Accepted Telnet connection:socket=14 addr=192.168.16.110 port=2979 5: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 10002:1:50 6: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 128:1:50 7: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OffLine 128:1:50 8: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 96:1:50 9: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OffLine 96:1:50 10: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 128:1:50 11: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 96:1:50 12: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 5001:16:50 13: 11-01-2001 THU 14:05:51 Interpreter CIPEvent::OnLine 5001:15:50 14: 11-01-2001 THU 14:05:51 Interpreter</pre> <p>To display only the startup log, use the SHOW START LOG command (see page 99).</p>

Terminal Commands (Cont.)	
Command	Description
SHOW MAX BUFFERS	<p>Displays a list of various message queues and the maximum number of message buffers that were ever present on the queue.</p> <p>Example:</p> <pre>show max buffers Thread TX RX ----- Axlink 1 UDP 1 IPCon Mgr 0 (Total for TCP Connections TX=0) Con Manager 8 Interpreter 17 Device Mgr 8 Diag Mgr 1 Msg Dispatch 0 Cfg Mgr 0 Route Mgr 0 Notify Mgr 0 Total 2 34 GrandTotal 36</pre> <p>See the <i>SHOW BUFFERS</i> section on page 97.</p>
SHOW MEM	Displays the memory usage for all memory types.
SHOW NOTIFY	<p>Displays the Notify Device List (Master-Master). This is a list of devices (up to 1000) that other systems have requested input from and the types of information needed.</p> <p><i>Note: The local system number is 1061.</i></p> <p>Example:</p> <pre>>SHOW NOTIFY Device Notification List of devices requested by other Systems Device:Port System Needs ----- 00128:00001 00108 Channels Commands Strings Levels 33000:00001 00108 Channels Commands</pre>
SHOW REMOTE	<p>Displays the Remote Device List (Master-Master). This is a list of the devices this system requires input from and the types of information needed. If when a NetLinX Master connects to another NetLinX Master, the newly connecting system has a device that the local system desires input from; the new system is told what information is desired from what device.</p> <p><i>Note: The local system number is 1062.</i></p> <p>Example:</p> <pre>>SHOW REMOTE Device List of Remote Devices requested by this System Device Port System Needs ----- 00001 00001 00001 Channels Commands 00002 00001 00001 Channels Commands 33000 00001 00001 Channels Commands 00128 00001 00108 Channels Commands Strings Levels 33000 00001 00108 Channels Commands</pre>
SHOW ROUTE	<p>Displays information about how this NetLinX Master is connected to other NetLinX Masters (routing information).</p> <p>Example:</p> <pre>>SHOW ROUTE Route Data: System Route Metric PhyAddress ----- -> 50 50 0 AxLink</pre>
SHOW START LOG <START>	<p>Displays the startup log (see <i>START LOG</i> below). <START> specifies the message to begin the display. 'ALL' will display all startup log messages.</p> <p><i>Note: This command is identical in implementation to the SHOW LOG command (see page 98), except that it executes the startup log.</i></p>

ESC Pass Codes

There are 'escape' codes in the pass mode. These codes can switch the display mode or exit pass mode. The following 'escape' codes are defined.

Escape Pass Codes	
Command	Description
+ + ESC ESC	Exit Pass Mode: Typing a plus (shift =) followed by another plus followed by an ESC (the escape key) followed by another escape exits the pass mode. The Telnet session returns to "normal".
+ + ESC A	ASCII Display Mode: Typing a plus (shift =) followed by another plus followed by an ESC (the escape key) followed by an 'A' sets the display to ASCII mode. Any ASCII characters received by the device will be displayed by their ASCII symbol. Any non-ASCII characters will be displayed with a \ followed by two hex characters to indicate the characters hex value.
+ + ESC D	Decimal Display Mode: Typing a plus (shift =) followed by another plus followed by an ESC (the escape key) followed by a 'D' sets the display to decimal mode. Any characters received by the device will be displayed with a \ followed by numeric characters to indicate the characters decimal value.
+ + ESC H	Hex Display Mode: Typing a plus (shift =) followed by another plus followed by an ESC (the escape key) followed by an 'H' sets the display to hexadecimal mode. Any characters received by the device will be displayed with a \ followed by two hex characters to indicate the characters hex value.

Accessing the Security Configuration Options

Security configuration options are only available to Program Port connections (see the *Overview* section on page 86).

NOTE: Refer to the *SET SECURITY PROFILE* section on page 94 for information on setting Security Profiles.

- In the Terminal session, type **help security** to view the available security commands. Here is a listing of the security help:

```
---- These commands apply to the Security Manager and Database ----
logout                Logout and close secure session
setup security        Access the security setup menus
```

NOTE: The 'help security' and 'setup security' functions are only available via a direct RS232 Program Port connection. They are not available to Telnet sessions.

- Type **setup security** to access the *Setup Security* menu, shown below:

```
>setup security

---- These commands apply to the Security Manager and Database ----
 1) Set system security options for NetLinx Master
 2) Display system security options for NetLinx Master
 3) Add user
 4) Edit user
 5) Delete user
 6) Show the list of authorized users
 7) Add group
 8) Edit group
 9) Delete group
10) Show list of authorized groups
11) Set Telnet Timeout in seconds
12) Display Telnet Timeout in seconds
13) Enter LDAP security information
14) Test connection to the LDAP server
15) Make changes permanent by saving to flash
16) Reset Database
17) Display Database
Or <ENTER> to return to previous menu
```

Security Setup ->

- The Setup Security menu shows a list of choices and a prompt. To select one of the listed choices, simply enter the number of the choice (1 - 17) at the prompt and press <Enter>.

Each option in the Setup Security menu displays a submenu specific to that option. The following subsections describe using each of the Setup Security menu options.

NOTE: Changes made to the target Master from within the Terminal window are not reflected within the web browser, until the Master is rebooted and the web browser connection is refreshed. Any changes made to the Master, from within the web browser are instantly reflected within the Terminal session without the need to reboot.

Setup Security Menu

The Setup Security menu is described below:

Setup Security Menu	
Command	Description
1) Set system security options for NetLinx Master See the <i>Security Options Menu</i> section on page 104 for descriptions of each menu item.	This selection will bring up the Security Options Menu that allows you to change the security options for the NetLinx Master. These are "global" options that enable rights given to users and groups. For instance, if you want to disable Telnet security for all users, you would simply go to this menu and disable Telnet security for the entire Master. This would allow any user, whether they have the rights to Telnet or not. These options can be thought of as options to turn on security for different features of the NetLinx Master.
2) Display system security options for NetLinx Master	This selection will display the current security options for the NetLinx Master.
3) Add user	This selection will prompt you for a name for the User you are adding. The User name must be a unique alpha-numeric string (4 - 20 characters). <i>Note: User and Group names are case sensitive.</i> After the User is added, you will be taken to the <i>Edit User</i> menu to setup the new User's right (see page 104).
4) Edit user	This selection will prompt you select a User to edit properties for. Once you have selected the User you want to edit, it will take you to the <i>Edit User</i> menu so you can edit the User's rights (see page 104).
5) Delete user	This selection will prompt you select a user to delete.
6) Show the list of authorized users	This selection displays a list of users.
7) Add group	This selection will prompt you for a name for the Group you are adding. The Group name must be a unique alpha-numeric string (4 - 20 characters). <i>Note: User and Group names are case sensitive.</i> After the Group is added, you will be taken to the <i>Edit Group</i> menu to setup the new users right (see page 104).
8) Edit group	This selection will prompt you select a Group to edit properties for. Once you have selected the Group you want to edit, it will take you to the <i>Edit Group</i> Menu so you can edit the group's rights (see page 104).
9) Delete group	This selection will prompt you select a group to delete. A group can only be deleted if there are no users assigned to that group.
10) Show list of authorized groups	This selection displays a list of groups.
11) Set Telnet Timeout in seconds	This selection allows you to set the time a telnet session waits for a user to login. When a Telnet client connects to the NetLinx Master, it is prompted for a username. If the client does not enter a users name for the length of time set in this selection, the session will be closed by the NetLinx Master.
12) Display Telnet Timeout in seconds	This selection displays the time a telnet session waits for a user to login.
13) Enter LDAP security information	This selection prompts you to specify the LDAP URI. Once the URI is entered and enter is pressed, a prompt for the next LDAP parameter will be displayed, and so on until all LDAP parameters are entered. <i>Note: Options 3 - 10 (Add user, Edit user, Delete user, Show the list of authorized users, Add group, Edit group, Delete group, Show list of authorized groups) on the Security Setup menu are disabled when LDAP is enabled.</i>
14) Test connection to LDAP server	This selection initiates a bind to the BIND DN using the Search Password entered. <ul style="list-style-type: none"> If the bind is successful, the message <i>Connection successful</i> is displayed. If the server could not be reached or the bind is unsuccessful, the message <i>Could not connect to server</i> is displayed.
15) Make changes permanent by saving to flash	When changes are made to the security settings of the Master, they are initially only changed in RAM and are not automatically saved permanently into flash. This selection saved the current security settings into flash. Also, if you attempt to exit the Main Security Menu and the security settings have changed but not made permanent, you will be prompted to save the settings at that time.
16) Reset Database (administrator only function)	If a user has been given "administrator rights", this additional menu option is displayed. This selection will reset the security database to its Default Security Configuration settings, erasing all users and groups that were added. This is a permanent change and you will be asked to verify this before the database is reset. This function is only visible to administrators.

Setup Security Menu	
Command	Description
17) Display Database (administrator only function)	If a user has been given "administrator rights", this additional menu option is displayed. This selection will display the current security settings to the terminal (excluding user passwords). It also displays all users (minus passwords), their group assignment (if any) and their rights, as well as all groups and their rights. This function is only visible to administrators.

Enabling LDAP via the Program Port

1. Type setup security to access the Setup Security menu, shown below:

```
>setup security
```

```
---- These commands apply to the Security Manager and Database ----
```

- 1) Set system security options for NetLinx Master
 - 2) Display system security options for NetLinx Master
 - 3) Add user
 - 4) Edit user
 - 5) Delete user
 - 6) Show the list of authorized users
 - 7) Add group
 - 8) Edit group
 - 9) Delete group
 - 10) Show list of authorized groups
 - 11) Set Telnet Timeout in seconds
 - 12) Display Telnet Timeout in seconds
 - 13) Enter LDAP security information
 - 14) Test connection to the LDAP server
 - 15) Make changes permanent by saving to flash
 - 16) Reset Database
 - 17) Display Database
- Or <ENTER> to return to previous menu

```
Security Setup ->
```

2. To enable LDAP, enter **1** and press **Enter**. The following will be output to the screen:

```
NetLinx Master security is Enabled
```

```
Do you want to keep NetLinx Master security enabled? (y or n):
```

3. To proceed, enter **y** and press **enter**. The following menu will be displayed:

```
Select to change current security option
```

- 1) Terminal (RS232) Security.....Enabled
- 2) HTTP Security.....Enabled
- 3) Telnet Security.....Enabled
- 4) Configuration Security.....Enabled
- 5) ICSP Security.....Disabled
- 6) ICSP Encryption Required.....Disabled
- 7) LDAP Security.....Disabled

```
Or <ENTER> to return to previous menu
```

4. To enable LDAP Security, enter **7** and press **Enter**. The same menu will be sent to the screen with LDAP Security set to Enabled. Press enter to return to the Security Setup menu.
5. When back to the Security Setup menu, enter **13** and press **Enter**.
A prompt to enter the LDAP URI will be displayed. Once the URI is entered and enter is pressed, a prompt for the next LDAP parameter will be displayed. This will continue until all parameters are entered and then the Security Setup menu will be displayed again.
6. To save the security setup, enter **15** and press **Enter**.
7. To test the connection to the server enter **14** and press **Enter**.
This test does a bind to the BIND DN using the Search Password entered. If the bind is successful, "**Connection successful**" is printed on the screen. If the server could not be reached or the bind is unsuccessful, "**Could not connect to server**" is printed on the screen.
8. Press **Enter** to return to the main menu.

NOTE: Options 3 - 10 (Add user, Edit user, Delete user, Show the list of authorized users, Add group, Edit group, Delete group, Show list of authorized groups) on the Security Setup menu are disabled when LDAP is enabled.

Security Options Menu

Select **"Set system security"** from the Setup Security Menu to access the *Security Options* menu, described below:

Security Options Menu	
Command	Description
1) Terminal (RS232) Security (Enabled/Disabled)	This selection enables/disables Terminal Security. on the Program (RS232) Port.If <i>Terminal Security</i> is enabled, a user must have sufficient access rights to login to a Program Port terminal session.
2) HTTP Security (Enabled/Disabled)	This selection enables/disables HTTP (Web Server) Security. If <i>HTTP Security</i> is enabled, a user must have sufficient access rights to access the Master's WebConsole via a web browser.
3) Telnet Security (Enabled/Disabled)	This selection enables/disables Telnet Security. If <i>Telnet Security</i> is enabled, a user must have sufficient access rights to login to a Telnet terminal session.
4) Configuration Security (Enabled/Disabled)	This selection enables/disables configuration access rights for the Master. If <i>Configuration Security</i> is enabled, a user must have sufficient access rights to access the Setup Security menu (see page 102), and make changes to the Master's security parameters.
5) ICSP Security (Enabled/Disabled)	This selection enables/disables security of ICSP data being transmitted between the target Master and external AMX components (software and hardware such as TPD4 and a Modero Touch Panel).
6) ICSP Encryption Required (Enabled/Disabled)	This selection enables/disables the need to require encryption of the ICSP communicated data. If enabled: <ul style="list-style-type: none"> All communicating AMX components must authenticate with a valid username and password before beginning communication with the Master. All communication must be encrypted.
7) LDAP Security (Enabled/Disabled)	This selection enables/disables LDAP Security. Refer to <i>Appendix A: LDAP Implementation Details</i> on page 108 for details on LDAP Implementation.

Edit User Menu

The Edit User Menu is accessed whenever you enter the **Add user**, or **Edit user** selections from the Setup Security menu. The Edit User Menu options are described in the following table:

Edit User Menu	
Command	Description
1) Change User Password	This selection prompts you to enter the new password (twice) for the user. Once the new password is entered, the user must use the new password from that point forward.
2) Change Inherits From Group	This selection will display the current group the user is assigned to (if any). It will then display a list of current groups and prompts you to select the new group.
3) Add Directory Association	This selection will display any current directory associations assigned to the user, and then will prompt you for a path for the new directory association.
4) Delete Directory Association	This selection will display any current directory associations assigned to the user, and then will prompt you to select the directory association you want to delete.
5) List Directory Associations	This selection will display any current Directory Associations assigned to the user.
6) Change Access Rights	This selection will display access the <i>Access Rights menu</i> , which allows you to set the rights assigned to the user. <i>Note: See the Access Rights Menu section (below) for descriptions of each menu item.</i>
7) Display User Record Contents	This selection will display the group the user is assigned to and the current Access Rights assigned to the user.

Edit Group Menu

The Edit Group Menu is accessed whenever you enter the **Add group**, or **Edit group** selections from the Setup Security menu. The Edit Group Menu options are described in the following table:

Edit Group Menu	
Command	Description
3) Add Directory Association	This selection will display any current directory associations assigned to the group, and then will prompt you for a path for the new directory association.
4) Delete Directory Association	This selection will display any current directory associations assigned to the group, and then will prompt you to select the directory association you want to delete.
5) List Directory Associations	This selection will display any current Directory Associations assigned to the group.
6) Change Access Rights	This selection will display access the <i>Access Rights menu</i> , which allows you to set the rights assigned to the group. <i>Note: See the Access Rights Menu section (below) for descriptions of each menu item.</i>
7) Display Access Rights	This selection will display the current Access Rights assigned to the group.

Access Rights Menu

The Access Rights Menu is accessed whenever you select **Change Access Rights** (option **6**) from the Edit User menu, or **Change Access Rights** from the Edit Group menu. The options in this menu is described below:

Access Rights Menu	
Command	Description
1) Terminal (RS232) Access (Enable/Disable)	Enables/disables Terminal (RS232 Program port) Access. The account has sufficient access rights to login to a Terminal session if this option is enabled.
2) Admin Change Password Access (Enable/Disable)	Enables/disables Administrator Change Password Access. The account has sufficient access rights to change the administrator password if this option is enabled.
3) FTP Access (Enable/Disable)	Enables/disables FTP Access. The account has sufficient access rights to access the NetLinX Master's FTP Server if this option is enabled.
4) HTTP Access (Enable/Disable)	This selection enables/disables HTTP (Web Server) Access. The account has sufficient access rights to browse to the NetLinX Master with a Web Browser if this option is enabled.
5) Telnet Access (Enable/Disable)	This selection enables/disables Telnet Access. The account has sufficient access rights to login to a Telnet session if this option is enabled.
6) Configuration Access (Enable/Disable)	This selection enables/disables Configuration Access rights for the target Master. The account has sufficient access rights to access the Main Security Menu if this option is enabled.
5) ICSP Security (Enabled/Disabled)	This selection enables/disables ICSP communication access. The account has sufficient access rights to initiate ICSP data communication.
6) ICSP Encryption Required (Enabled/Disabled)	This selection enables/disables the need to require encryption of the ICSP communicated data. If enabled: <ul style="list-style-type: none"> All communicating AMX components must authenticate with a valid username and password before beginning communication with the Master. All communication must be encrypted.

Adding a Group

- Type **7** and **<Enter>** at the Security Setup prompt (at the bottom of the Main Security Menu) to add a group account. A sample session response is:

The following groups are currently enrolled:

```
administrator
```

Enter name of new group:

- Enter a name for the group. A group name is a valid character string (4 - 20 alpha-numeric characters) defining the group. This string is *case sensitive*, and each group name must be unique.
- Press **<Enter>** to display the Edit Group menu.

Edit Group Menu: Add Directory Association

- At the **Edit Group** prompt, type **1** to add a new directory association.

A *Directory Association* is a path that defines the directories and/or files that a particular user or group can access via the HTTP (Web) Server on the NetLinX Master. This character string can range from 1 to 128 alpha-numeric characters. This string is *case sensitive*. This is the path to the file or directory you want to grant access. Access is limited to the user (i.e. doc:user) directory of the Master. All subdirectories of the user directory can be granted access.

- A single **'/'** is sufficient to grant access to all files and directories in the user directory and it's sub-directory.
- The **'*'** wildcard can also be added to enable access to all files.
- All entries should start with a **'/'**.

Here are some examples of valid entries:

Path	Notes
/	Enables access to the user directory and all files and subdirectories in the user directory.
/*	Enables access to the user directory and all files and subdirectories in the user directory.
/user1	If user1 is a file in the user directory, only the file is granted access. If user1 is a subdirectory of the user directory, all files in the user1 and its sub-directories are granted access.
/user1/	user1 is a subdirectory of the user directory. All files in the user1 and its sub-directories are granted access.
/Room1/iWeb ControlPages/*	/Room1/iWeb ControlPages is a subdirectory and all files and its subdirectories are granted access.
/results.txt	results.txt is a file in the user directory and access is granted to that file.

By default, all accounts that enable HTTP Access are given a **'/*'** Directory Association if no other Directory Association has been assigned to the account. When you are prompted to enter the path for a Directory Association, the NetLinX Master will attempt to validate the path.

If the directory or file is not valid (i.e. it does not exist at the time you entered the path), the NetLinx Master will ask you whether you were intending to grant access to a file or directory. From the answer, it will enter the appropriate Directory Association. The NetLinx Master will not create the path if it is not valid. That must be done via another means, most commonly by using an FTP client and connecting to the FTP server on the NetLinx Master.

Default Security Configuration

By default, the NetLinx Master will create the following accounts, access rights, directory associations, and security options.

```
Account 1:           User Name: administrator
Password:           password
Group:              administrator
Rights:             All
Directory Association: /*
```

```
Account 2:           User Name: NetLinx
Password:           password
Group:              none
Rights:             FTP Access
Directory Association: none
```

```
Group 1:            Group: administrator
Rights:             All
Directory Association: /*
```

```
Security Options:   FTP Security Enabled
                   Admin Change Password Security Enabled
                   All other options disabled
```

- The *administrator* user account cannot be deleted or modified with the exception of its password. Only a user with "Change Admin Password Access" rights can change the administrator password.
- The *NetLinx* user account is created to be compatible with previous firmware versions.
- The *administrator* group account cannot be deleted or modified.
- The *FTP Security* and *Admin Change Password Security* are always enabled and cannot be disabled.

NOTE: Refer to the *SET SECURITY PROFILE* section on page 94 for information on setting Security Profiles.

Telnet Diagnostics Commands

The following Telnet Diagnostics Commands provide visibility to remote Masters, in order to determine the current state of operations, and are provided as diagnostic/troubleshooting tools. While these commands are available for any user to execute, their output is interpretable primarily by an AMX Technical Support Engineer.

Telnet Diagnostics Commands	
Command	Description
REBOOT HEAP WATCH	This command causes the Master to reboot into a Heap Watch mode, where every memory allocation is tracked back to a task running in the Master. This option may be useful in cases where a remote Master is indicating a continuous loss of memory. With Heap Watch enabled, AMX Technical Support may be able to track exactly which task is losing the memory.
SPY SPY STOP	The SPY and SPY STOP interfaces are provided by VxWorks; AMX has made it available to the user. <ul style="list-style-type: none"> • SPY lists out all of the tasks running in the Master and their CPU usage, refreshing every 10sec. • SPY is very similar to a Windows Task Manager output. This option may be useful in cases where a remote Master seems to be running but very slowly. Enabling SPY might indicate if a specific task is using up the CPU. SPY can also be useful in detecting infinite loops in NetLinx or Duet/Java code, since the Interpreter or Java threads will show that they're using all of the CPU.
PHYSICAL STATUS	This command reports the current state of the Master's Status, Output and Input LEDs, in order to troubleshoot a remote Master. For example, if PHYSICAL STATUS indicates that the Input LED always shows '1' (or ON), it could indicate that the Master is being hammered by incoming events.
MSG STATS	This command collects messages statistics for the Interpreter over a 10 second period by calculating the number of event messages that have been processed. This can be useful as a debugging/diagnostics tool to determine if the NetLinx Interpreter is running and how many messages it's processing.

Logging Out of a Terminal Session

NOTE: It is very important to execute the 'logout' command prior to disconnecting from a Master. Simply removing the RS-232 connector from the Program Port maintains your logged-in status until you either return to logout via a new session or reboot the target Master.

Notes on Specific Telnet/Terminal Clients

Telnet and terminal clients will have different behaviors in some situations. This section states some of the known anomalies.

Windows Client Programs

Anomalies occur when using a Windows™ client if you are not typing standard ASCII characters (i.e. using the keypad and the ALT key to enter decimal codes). Most programs will allow you to enter specific decimal codes by holding ALT and using keypad numbers. For example, hold ALT, hit the keypad 1, then hit keypad 0, then release ALT. The standard line feed code is entered (decimal 10). Windows will perform an ANSI to OEM conversion on some codes entered this way because of the way Windows handles languages and code pages.

The following codes are known to be altered, but others may be affected depending on the computer's setup.

Characters 15, 21, 22, and any characters above 127.

This affects both Windows Telnet and Terminal programs.

Linux Telnet Client

The Linux Telnet client has three anomalies that are known at this time:

- A null (\00) character is sent after a carriage return.
- If an ALT 255 is entered, two 255 characters are sent (per the Telnet RAFT).
- If the code to go back to command mode is entered (ALT 29 which is ^), the character is not sent, but Telnet command mode is entered.

Appendix A: LDAP Implementation Details

Overview

The process of verifying credentials and obtaining user authorization is designed to support most organizations requirements for 'least privilege'. The account used to search LDAP to provide user objects for authentication never needs access to user information. Authorization lookups are performed as the authenticated user and as such, no elevated permission is required. Please refer to RFC 2256, RFC 2798 and RFC 4519.

Assumptions and Prerequisites

Assumptions made about the LDAP implementation or environment in which the AMX client will participate include:

1. Must support simple authentication (for example, NetLinx Masters do not support *Kerberos* or *SASL*).
2. The account setup for a bind DN must have search capability along with the necessary permissions to read the 'uid', 'cn', 'member' and 'objectclass' attributes.
3. When a search is performed to find a DN with the specified user ID, a search must return one and only one object if the user exists. No object will be returned if an account does not exist for that user ID.
4. An account is considered valid if a user can authenticate/bind. No other attributes are considered during the authentication process.
5. AMX LDAP implementation supports both encrypted and un-encrypted connections using SSL.
6. When a person authenticates, that account must have access to all the attributes defined by RFC 2798 with the following exception:
User passwords are not necessarily accessible for anything except to perform a bind to the directory (for example, this attribute may not be directly available to the user).
7. When a person authenticates, that account must have the ability to search for the groups of which that account is a member (for example, the account is able to perform a search with a filter which contains 'member=' followed by the DN of the authenticated user. If exceptions exists, those groups cannot/will not be necessary for AMX client security decisions.
8. When a person authenticates, that account must have access to "cn" attributes for all groups of which it is a member.
9. Group membership for users will be defined by the *GroupOfNames* object class. *GroupOfUniqueNames* is not supported due to ambiguities associated with implementations which use unique ID's appended to membership DN's.
10. When performing searches for group membership, no restrictions exist which would the restrict returning the full list of objects for which the user is a member with the possible exception of reasonable response timeouts. AMX LDAP implementation does not support paged search results.
11. AMX LDAP implementation does not support following referrals.

AMX LDAP Client Authentication Sequence

An example of the operation of the AMX client, using the example LDAP directory tree in the server section of this document, is presented next in a step-by-step breakdown. *DallasUser1* will be used for this example.

Client Setup:

```
LDAP Enabled: yes
LDAP URI: ldaps://myLDAPServer01: 636
LDAP BASE DN: dc=example,dc=com
BIND DN: uid=amxBindAccount,ou=people,dc=example,dc=com
User Query Attr: uid
Search Password: secret
```

1. *DallasUser1* initiates a HTTP session with the master and is prompted for a username and password.
2. *DallasUser1* enters username: **DallasUser1** and his/her password: **DallasUser1Pswd**.
3. The client connects to the LDAP server and starts a bind operation with the BIND DN, **uid=amxBindAccount,ou=people,dc=example,dc=com**, and the Search Password, **secret**.
4. The password, *secret*, is then compared by the server to the value of the userPassword attribute for the record **uid=amxBindAccount,ou=people,dc=example,dc=com**.
If this step is successful, the bind is successful and the client is logged in.
5. If the bind is successful, the client then performs a search with the filter **(&(objectclass=person)(uid=DallasUser1))**.
The *objectclass=person* portion of the filter is hard coded in the client firmware.
The *uid=DallasUser1* portion of the filter is formed from the configured parameter *User Query Attr* and the user name entered when logging in.
Since the *User Query Attr* is required to be unique in the search base LDAP BASE DN, the search should return either 0 or 1 record.
If one record is found, the DN of the record is returned. In this example, the DN **uid=DallasUser1,ou=people,ou=Dallas,dc=example,dc=com** is returned.

6. The client then unbinds as the user **uid=amxBindAccount,ou=people,dc=example,dc=com**.
7. If a record is found that matches, the client then attempts to bind as this DN using the password the user enters to initiate the session.
In this example the DN **uid=DallasUser1,ou=people,ou=Dallas,dc=example,dc=com** and the password **DallasUser1Pswd** would be used for this bind.
8. The server compares the user supplied password with the value of the *userPassword* attribute of **uid=DallasUser1,ou=people,ou=Dallas,dc=example,dc=com**.
If this match is successful, the bind is successful and the client is logged in.
9. If the bind is successful, the client then performs another search using the filter (member=DN returned from the first search) specifying that the *commonName* attribute of matching entries should be returned.
In this example, the filter is **member=uid=DallasUser1,ou=people,ou=Dallas,dc=example,dc=com**.
Since *DallasUser1* is listed as a member of the groupOfNames objectclass
dn: cn=master01Admin,ou=groups,ou=Dallas,dc=example,dc=com
and
dn: cn=master01User,ou=groups,ou=Dallas,dc=example,dc=com,
the server will return the *commonName* attributes **master01Admin** and **master01User**.
The client then unbinds as this user and exits.

NOTE: The AMX LDAP client configuration parameters are located on the System Security Details page under the System Security Settings link. See the System Security - System Level section on page 35); the LDAP configuration options are described on page 37.

Example - Setting Up User's Access Rights

In order to give AMX equipment users access rights to the Master, group memberships for users will be defined by the *GroupOfNames* object class (refer to LDAP RFC4519). Two records need to be created in the database:

- One that represents users with administrative privileges (Admin Change Password Access, Terminal (RS232) Access, FTP Access, HTTP Access, Telnet Access, Configuration, ICSPConnectivity, and EncryptICSP Connection).
- Another that represents users with user privileges (HTTP Access). The DNs of the AMX equipment users will be listed under the appropriate *GroupOfNames* object class as a member attribute.

Administrator Access Example

Administrator Access	
LDAP Server Configuration	Master Configuration
<p><i>Example:</i> dn: cn=master01Admin,ou=groups,ou=Dallas,dc=example,dc=com objectClass: groupOfNames objectClass: top cn: master01Admin member: uid=DallasAdminUser1,ou=people,ou=Dallas,dc=example,dc=com member: uid=ICSPUser,ou=people,ou=Dallas,dc=example,dc=com</p>	<p>On the <i>System Security Details</i> page, enter the Administrator groupOfNames cn. <i>Example:</i> Admin groupOfNames cn: master01Admin</p>

User Access Example

User Access	
LDAP Server Configuration	Master Configuration
<p><i>Example:</i> dn: cn=master01User,ou=groups,ou=Dallas,dc=example,dc=com objectClass: groupOfNames objectClass: top cn: master01User member: uid=DallasUser1,ou=people,ou=Dallas,dc=example,dc=com member: uid=DallasUser2,ou=people,ou=Dallas,dc=example,dc=com</p>	<p>On the <i>System Security Details</i> page, enter the User groupOfNames cn. <i>Example:</i> User groupOfNames cn: master01User</p>

NOTE: If the DN of a user is in both the administrator groupOfNames and the user groupOfNames, the administrative privileges take precedence over user privileges.

ICSP Connectivity Security Example

If ICSP connectivity is enabled, a valid username and password is required to communicate with the NetLinx Master via an ICSP connection (TCP/IP, UDP/IP and RS-232). This is used with communication amongst various AMX hardware and software components.

User Access	
LDAP Server Configuration	Master Configuration
<p>An ICSP user should be configured for a specific Master and should be set up as a normal user.</p> <p>Example:</p> <p>dn: uid=ICSPUser,ou=people,ou=Dallas,dc=example,dc=com</p> <p>objectClass: inetOrgPerson</p> <p>objectClass: organizationalPerson</p> <p>objectClass: person</p> <p>objectClass: top</p> <p>cn: ICSP User</p> <p>sn: User</p> <p>uid: ICSPUser</p> <p>userPassword: password</p> <p><i>Note: The DN of this user must be added as a member to the administrator groupOfNames objectClass on the server.</i></p>	<ol style="list-style-type: none"> 1) On the <i>System Security Details</i> page, disable LDAP by clearing the <i>LDAP Enabled</i> checkbox and disable ICSP Connectivity by clearing the <i>ICSP Connectivity</i> checkbox. 2) Click the User level tab and navigate to the User Security Details page. 3) Create a new user by clicking <i>Add New User</i>. 4) Enter the User name and password as set up on the LDAP server (for example: ICSPUser and password). 5) Set all Access privileges. 6) Click the <i>Accept</i> button to complete adding the new user. 7) Return to the <i>System Security Details</i> page, and enter the common name (cn) of the groupOfNames objectClass that contains the member DN of the ICSP user that was just configured, and enable ICSP Connectivity, Encrypt ICSP Connection and LDAP by clicking on the appropriate checkboxes. <p><i>Note: If there is a mismatch with the username or password, the AMX hardware or software component will not be allowed access. If there is a mismatch with the access privileges, the master will use the privileges value stored on the server.</i></p>

Appendix B: SMTP Support

Overview

NetLinx Integrated Controllers (Masters) have built-in support for transmission of email via an SMTP server. NetLinx Master support includes the configuration of a single outbound SMTP server and the subsequent transmission of individual emails via the configured server.

SMTP Server Configuration

The SMTP Server is configured by specifying a set of server properties. SMTP server properties once set are persistent on the master until they are reset to a different value. SMTP server properties include the server IP address or URL, the SMTP IP port number for connecting to the server, any username and password that is required for connecting with the server, the "from" address that will be associated with all outgoing messages and finally a flag indicating if the server must support TLS authentication security in order to establish a connection. Properties are set and read using two built-in NetLinx functions:

```
SMTP_SERVER_CONFIG_SET(CONSTANT CHAR cfgName[], CONSTANT CHAR cfgValue[])
```

Sets a server configuration parameter. These configuration settings are general mail server settings and thus apply to all emails. Settings are saved to the configuration database & thus are static upon reboot.

cfgName is the server property name that is being set. Acceptable values are

- *ADDRESS* - SMTP server name, such as "mail.amx.com". The maximum number of characters allowed for email destination is 127.
 - *PORT* - SMTP server port, such as "25" or "0". 0 means "use the best default port" which would imply using 25 which is the SMTP well-known port.
 - *USERNAME* - Username to offer for authentication. If username length is set to 0, authentication is not attempted.
 - *PASSWORD* - Password to offer for authentication. If password length is set to 0, authentication is still attempted but simply uses a zero-length password.
 - *FROM* - Mail address to populate to the 'Mail-From:' field in outgoing emails.
 - *REQUIRE_TLS* - SMTP server must support TLS in order to establish a connection. Valid values are 'TRUE' or 'FALSE'
- cfgValue* is the value to associate for a setting property.

```
char[] SMTP_SERVER_CONFIG_GET (CONSTANT CHAR cfgName[])
```

Queries a server configuration property. Returns the config property value.

cfgName is the server property name that is being retrieved. Acceptable values are a subset of the settable properties (username & password query are disabled as a security precaution). No return value

- *ADDRESS* - SMTP server name, such as "mail.amx.com". The maximum number of characters allowed for email destination is 127.
- *PORT* - SMTP server port, such as "25" or "0". 0 means "use the best default port" which would imply using 25 which is the SMTP well-known port.
- *FROM* - Mail address populated to the 'Mail-From:' field in outgoing emails.
- *REQUIRE_TLS* - SMTP server must support TLS in order to establish a connection. Valid values are 'TRUE' or 'FALSE'

The **NetLinx .axi** file has the following built in constants to ease configuration:

```
CHAR SMTP_ADDRESS[] = 'ADDRESS';
CHAR SMTP_PORT_NUMBER[] = 'PORT';
CHAR SMTP_USERNAME[] = 'USERNAME';
CHAR SMTP_PASSWORD[] = 'PASSWORD';
CHAR SMTP_REQUIRE_TLS[] = 'REQUIRE_TLS';
CHAR SMTP_FROM[] = 'FROM';
CHAR NULL_STR[] = '';
CHAR SMTP_TLS_TRUE[] = 'TRUE';
CHAR SMTP_TLS_FALSE[] = 'FALSE';
```

Example server configuration:

```
SMTP_SERVER_CONFIG_SET(SMTP_ADDRESS, 'mail.mymailserver.com')
SMTP_SERVER_CONFIG_SET(SMTP_PORT_NUMBER, '25')
SMTP_SERVER_CONFIG_SET(SMTP_USERNAME, 'myAccountUsername')
SMTP_SERVER_CONFIG_SET(SMTP_PASSWORD, 'myAccountPassword')
SMTP_SERVER_CONFIG_SET(SMTP_REQUIRE_TLS, SMTP_TLS_TRUE)
SMTP_SERVER_CONFIG_SET(SMTP_FROM, 'John Doe')
```

Sending Mail

Sending mail is accomplished with the use of the Master's built-in Mail Service. An outbound mail is handed to the Mail Service via the following built-in NetLinx function:

```
sinteger SMTP_SEND (DEV responseDPS, CONSTANT CHAR toAddress[], CONSTANT CHAR mailSubject[], CONSTANT
CHAR mailBody[], CONSTANT CHAR textAttachment[])
```

where:

- *responseDPS* - The DPS address to return asynchronous send status. Ex. 0:3:0
- *toAddress* - The email address of destination. Ex. john.doe@amx.com.
Note that the NetLinx mail service supports up to eight recipient address (semi-colon delimited). These are "To" addresses only (not "Cc" or "Bcc" addresses.)
The maximum number of characters allowed for email destination is 127.
- *mailSubject* - The email subject line.
- *mailBody* - The email body text.
- *textAttachment* - A text filename to attach to the email (optional argument). Filenames must be 256 characters or less, and file size must be under 65536 bytes. When no attachment is included textAttachment should be set to NULL_STR.

SMTP_SEND returns a signed integer.

- If the return value is negative (<0) that is an indication there was a failure in handing the message off to the mail service, most likely due to an invalid argument supplied to the SMTP_SEND call.
- If the return value is positive (>0) then the value is the index associated with the mail being sent.
- Mail sends are asynchronous to the normal processing of the NetLinx application.
- When SMTP_SEND is called and the mail is posted to the internal Mail Service, the NetLinx application will continue executing the code following the SMTP_SEND.
- The failed send status will be returned via an ONERROR DATA_EVENT for the *responseDPS* specified in the SMTP_SEND call with DATA.NUMBER set to the error code and DATA.TEXT set to the mail identifier returned from the SMTP_SEND call.

Example SMTP_SEND:

```
DEFINE_DEVICE
MAIL_SERVICE=0:3:0

DEFINE_VARIABLE
SINTEGER MAIL_IDX

...
MAIL_IDX = SMTP_SEND(MAIL_SERVICE, 'jdoe@somemail.com', 'Mail Subj', 'Mail Body', NULL_STR)
IF (MAIL_IDX < 0)
{
    // FAILED TO SEND MAIL
}
...
DATA_EVEN [MAIL_SERVICE]
{
    ONERROR:
    {
        // AN ERROR OCCURRED
        LOG_ERROR("MAIL SEND FAILURE - IDX=',DATA.TEXT,' ERROR=',ITOA(DATA.NUMBER))
    }
}
}
```

The possible error codes are:

```
MALFORMED DATA = 1;
NOT ENOUGH MEMORY = 2;
SERVER UNREACHABLE = 3;
AUTHENTICATION FAILURE = 4;
SMTP PROTOCOL ERROR = 5;
```

Appendix C: Clock Manager NetLinx Programming API

Types/Constants

The NetLinx.axi file that ships with NetLinx Studio includes the following types/constants:

```
( *-----* )
( * Added v1.28, Clock Manager Time Offset Structure * )
( *-----* )
STRUCTURE CLKMGR_TIMEOFFSET_STRUCT
{
    INTEGER    HOURS;
    INTEGER    MINUTES;
    INTEGER    SECONDS;
}

( *-----* )
( * Added v1.28, Clock Manager Time Server Entry Structure * )
( *-----* )
STRUCTURE CLKMGR_TIMESERVER_STRUCT
{
    CHAR      IS_SELECTED;          ( * TRUE/FALSE * )
    CHAR      IS_USER_DEFINED;      ( * TRUE/FALSE * )
    CHAR      IP_ADDRESS_STRING[48]; ( * Allow enough room for IPv6 in the future * )
    CHAR      URL_STRING[32];       ( * Example: time.organization.net * )
    CHAR      LOCATION_STRING[32];  ( * Example: Boulder, Colorado, US * )
}

( * Added v1.28, Clock Manager * )
INTEGER CLKMGR_MODE_NETWORK = $01; ( * Used to enable Clock Manager Functionality * )
INTEGER CLKMGR_MODE_STANDALONE = $02; ( * Use a free-running clock - legacy behavior.* )
```

Library Calls

The NetLinx.axi file that ships with NetLinx Studio includes the following Clock Manager-specific library calls:

NetLinx.axi - Library Calls	
CLKMGR_IS_NETWORK_SOURCED()	Returns FALSE/0 or TRUE/1 (default = FALSE/0)
CLKMGR_SET_CLK_SOURCE (CONSTANT INTEGER MODE)	Can be set to CLKMGR_MODE_NETWORK or CLK-MGR_MODE_STANDALONE.
CLKMGR_IS_DAYLIGHTSAVINGS_ON()	Returns FALSE/0 or TRUE/1 (default = FALSE/0).
CLKMGR_SET_DAYLIGHTSAVINGS_MODE (CONSTANT INTEGER ONOFF)	Can be set to ON/TRUE or OFF/FALSE.
CLKMGR_GET_TIMEZONE()	Returns Timezone as a string in the format: UTC[+ -]HH:MM
CLKMGR_SET_TIMEZONE (CONSTANT CHAR TIMEZONE[])	Input string must have the correct format: UTC[+ -]HH:MM
CLKMGR_GET_RESYNC_PERIOD()	Returns the Clock Manager's re-sync period in minutes (default = 60). This setting has no effect if the Clock Manager mode is set to STANDALONE.
CLKMGR_SET_RESYNC_PERIOD (CONSTANT INTEGER PERIOD)	Sets the re-sync period to the specified minute value. The upper bound is 480 minutes (i.e., 8 hours).
CLKMGR_GET_DAYLIGHTSAVINGS_OFFSET (CLKMGR_TIMEOFFSET_STRUCT T)	Populates the TIMEOFFSET structure with the current Daylight Savings Offset configured. The function returns a negative SLONG value if it encounters an error.
CLKMGR_SET_DAYLIGHTSAVINGS_OFFSET (CONSTANT CLKMGR_TIMEOFFSET_STRUCT T)	Sets the Daylight Savings Offset to the specified value.
CLKMGR_GET_ACTIVE_TIMESERVER (CLKMGR_TIMESERVER_STRUCT T)	Populates the TIMESERVER structure with the currently active time server's data. The function returns a negative SLONG value if it encounters an error.
CLKMGR_SET_ACTIVE_TIMESERVER (CONSTANT CHAR IP[])	Sets the time server entry that has the matching IP-ADDRESS to the IP parameter as the active time server entry.

NetLinx.axi - Library Calls (Cont.)	
CLKMGR_GET_TIMESERVERS (CLKMGR_TIMESERVER_STRUCT T[])	Populates the currently configured time server entries from the Clock Manager into the specified TIMESERVER array. The function returns a negative SLONG value if it encounters an error, otherwise the return value is set to the number of records populated into the CLK-MGR_-TIMESERVER_STRUCT array.
CLKMGR_ADD_USERDEFINED_TIMESERVER (CONSTANT CHAR IP[], CONSTANT CHAR URL[], CONSTANT CHAR LOCATION[])	Adds a user-defined time server entry.
CLKMGR_DELETE_USERDEFINED_TIMESERVER (CONSTANT CHAR IP[])	Deletes the user-defined entry that has its IP-ADDRESS matching the parameter.
CLKMGR_GET_START_DAYLIGHTSAVINGS_RULE()	Gets a string representation of when Daylight Savings is supposed to START. The Fixed-Date rules have the form: "fixed:DAY,MONTH,HH:MM:SS" with all fields as numeric except for the word "fixed". The Occurrence-Of-Day rules have the form: "occurence:OCCURENCE,DAY-OF-WEEK,MONTH,HH:MM:SS" with all fields as numeric except for the word "occurence". <ul style="list-style-type: none"> • OCCURANCE range = 1-5 '5' indicates the 'LAST' occurrence of a particular day of the month. • DAY-OF-WEEK translates as: 1=Sunday 2=Monday 3=Tuesday 4=Wednesday 5=Thursday 6=Friday 7=Saturday Examples: "fixed:5,10,16:00:00" = October 5, at 4:00PM). "occurence:5,1,10,02:00:00" = last Sunday in October, at 2:00AM).
CLKMGR_SET_START_DAYLIGHTSAVINGS_RULE (CONSTANT CHAR RECORD[])	Sets the START Daylight Savings rule to the specified string which <i>must</i> be in either the Fixed-Date format or the Occurrence-Of-Day format. The function returns a negative SLONG value if it encounters an error. The Fixed-Date rules have the form: "fixed:DAY,MONTH,HH:MM:SS" with all fields as numeric except for the word "fixed". The Occurrence-Of-Day rules have the form: "occurence:OCCURENCE,DAY-OF-WEEK,MONTH,HH:MM:SS" with all fields as numeric except for the word "occurence". <ul style="list-style-type: none"> • OCCURANCE range = 1-5 '5' indicates the 'LAST' occurrence of a particular day of the month. • DAY-OF-WEEK translates as: 1=Sunday 2=Monday 3=Tuesday 4=Wednesday 5=Thursday 6=Friday 7=Saturday Examples: "fixed:5,10,16:00:00" = October 5, at 4:00PM). "occurence:5,1,10,02:00:00" = last Sunday in October, at 2:00AM).

NetLinX.axi - Library Calls (Cont.)	
CLKMGR_GET_END_DAYLIGHTSAVINGS_RULE()	<p>Gets a string representation of when Daylight Savings is supposed to END.</p> <p>The Fixed-Date rules have the form: "fixed:DAY,MONTH,HH:MM:SS" with all fields as numeric except for the word "fixed".</p> <p>The Occurrence-Of-Day rules have the form: "occurrence:OCCURENCE,DAY-OF-WEEK,MONTH,HH:MM:SS" with all fields as numeric except for the word "occurrence".</p> <ul style="list-style-type: none"> • OCCURANCE range = 1-5 '5' indicates the 'LAST' occurrence of a particular day of the month. • DAY-OF-WEEK translates as: 1=Sunday 2=Monday 3=Tuesday 4=Wednesday 5=Thursday 6=Friday 7=Saturday <p>Examples: "fixed:5,10,16:00:00" = October 5, at 4:00PM). "occurrence:5,1,10,02:00:00" = last Sunday in October, at 2:00AM).</p>
CLKMGR_SET_END_DAYLIGHTSAVINGS_RULE (CONSTANT CHAR RECORD[])	<p>Sets the END Daylight Savings rule to the specified string which MUST be in either the Fixed-Date format or the Occurrence-Of-Day format. The function returns a negative SLONG value if it encounters an error.</p> <p>The Fixed-Date rules have the form: "fixed:DAY,MONTH,HH:MM:SS" with all fields as numeric except for the word "fixed".</p> <p>The Occurrence-Of-Day rules have the form: "occurrence:OCCURENCE,DAY-OF-WEEK,MONTH,HH:MM:SS" with all fields as numeric except for the word "occurrence".</p> <ul style="list-style-type: none"> • OCCURANCE range = 1-5 '5' indicates the 'LAST' occurrence of a particular day of the month. • DAY-OF-WEEK translates as: 1=Sunday 2=Monday 3=Tuesday 4=Wednesday 5=Thursday 6=Friday 7=Saturday <p>Examples: "fixed:5,10,16:00:00" = October 5, at 4:00PM). "occurrence:5,1,10,02:00:00" = last Sunday in October, at 2:00AM).</p>



© 2016 Harman. All rights reserved. NetLinx, AMX, AV FOR AN IT WORLD, HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies. AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.
3000 RESEARCH DRIVE, RICHARDSON, TX 75082 AMX.com | 800.222.0193 | 469.624.8000 | +1.469.624.7400 | fax 469.624.7153
AMX (UK) LTD, AMX by HARMAN - Unit C, Auster Road, Clifton Moor, York, YO30 4GD United Kingdom • +44 1904-343-100 • www.amx.com/eu/

Last Revised:
6/07/2016