



Massio ControlPads

Custom Button Labeling Guide

AMX
3000 Research Drive
Richardson, TX 75082

tel 800.222.0193
fax 469.624.7153

www.amx.com

It's Your World. Take Control.



Introduction

Massio ControlPads come with a set of clear plastic Button Caps, which are designed to fit tightly over the pushbuttons, and allow you to place a label on each button according to the requirements of your particular installation.

Massio ControlPads also come with a pre-printed acetate sheet with a range of 70 (pre-cut) button label inserts. The button labels provided will accommodate most installations, but it is also possible to print your own button labels on acetate for custom button labeling.


Note: It is best to install the button labels before mounting the ControlPad. Doing so keeps you from disassembling the ControlPad after mounting it.

AMX
3000 Research Drive
Richardson, TX 75082

tel 800.222.0193
fax 469.624.7153

www.amx.com

It's Your World. Take Control.

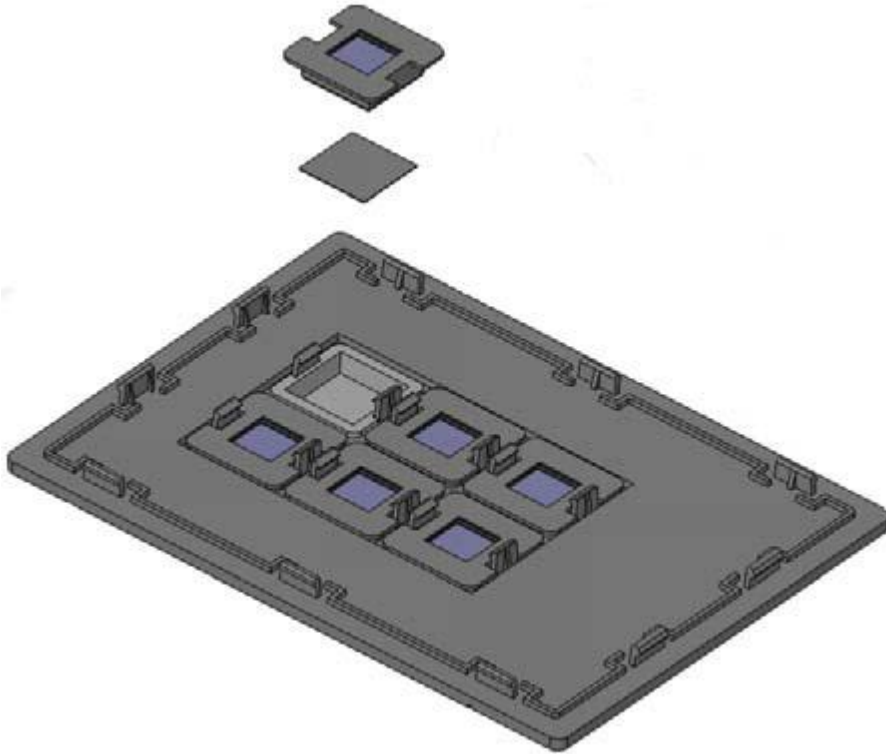

Creating New Label Inserts

Create custom label inserts using the template provided in this application guide. The default text font is Bebas, font style Regular, font size 9.5.

AMX
3000 Research Drive
Richardson, TX 75082

tel 800.222.0193
fax 469.624.7153

www.amx.com

It's Your World. Take Control.



Adding Color to the Buttons

By default, the ControlPad buttons are white with clear backlight for button feedback. You may add color as a subtle effect by using theatrical lighting gel cut to 14mm size of the ControlPad buttons and inserting them between the clear plastic and the text label insert.

Note: The thickness of the insert, including colored gel, must not exceed 0.10 mm (.004").

Installing Acetate Button Labels

1. Remove the faceplate from the ControlPad.
2. Remove the cone and diffuser from the button. The cone and diffuser are adhered together and should not be separated.
3. Punch out the desired Button Label from the included acetate sheet. If you have printed your own custom button labels on acetate, cut each button label to fit inside the Button Caps.
 - Custom button labels must be cut to a 1.4 cm (0.55") square to fit securely inside the Button Caps.
 - The thickness of the acetate, including colored gel, must not exceed 0.10 mm (.004").
4. Place the Button Cap face-down, and insert the Button Label into the bottom of the Button Cap.

Orient the Button Label inside the Button Cap so that the two clips are located on the top and bottom sides of the readable text on the Button Label. Be sure to place the Button Label face-down inside the Button Cap, otherwise the label will be seen in reverse.

5. Place the cone and diffuser back over the button and snap the cone into place on the faceplate.

AMX
3000 Research Drive
Richardson, TX 75082

tel 800.222.0193
fax 469.624.7153

www.amx.com

It's Your World. Take Control.

